



Hi-Lux, Inc.

3135 Kashiwa Street, Torrance, CA 90505, Tel: (310) 257-8142, Fax: (310) 257-8096


MUSMCMT MOUNT INSTALLTION INSTRUCTION

- (1) You need to slide the front mount and the sliding lock ring together on the scope tube and move them to the right position. Then put the slotted plunger in the front mount housing. You may need to hand-fit it a little bit to make sure the plunger slides on the rail smoothly.

Slotted Plunger



Front Mount Sliding Lock Ring

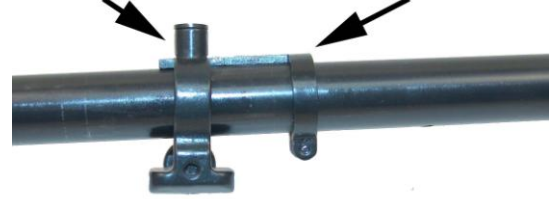

Insert the spring and tighten the cap screw slowly. Meanwhile, you need to check and see the front mount can be moved back and forth smoothly. Make sure the reticle is straight and tighten the sliding lock ring screw to prevent the front mount moving.

- (2) Insert the two "F" plates into the windage and elevation turrets. Push the "F" all the way into the center of the turrets. Then put the rear mount on the scope tube and the windage knob is on the right. Then you can insert the plunger and the spring and tighten the cap screw.

Insert the two "F" Plates




- (3) To keep the spacing between the centers of the front and rear mounts at 7.2 inches. This will give you a ¼ MOA click adjustment.



- (4) There are two ½" wide 60° type bases included. You may need to modify the bases a little bit to fit the mount. Only the posa cut side of the base will be used to engage with the mount.

Posa Cut

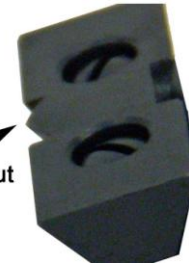

If you have any questions about this mount set, please feel free to contact us at the toll free no. 1-888-HI-LUX-12 (445-8912) or send us an e-mail to techsupport@hi-luxoptics.com.

WARNING:

You must install the mounts securely before you shoot the rifle. This should be done by a competent gunsmith.