


F4300 Shower Enclosure



ASSEMBLY DIAGRAM

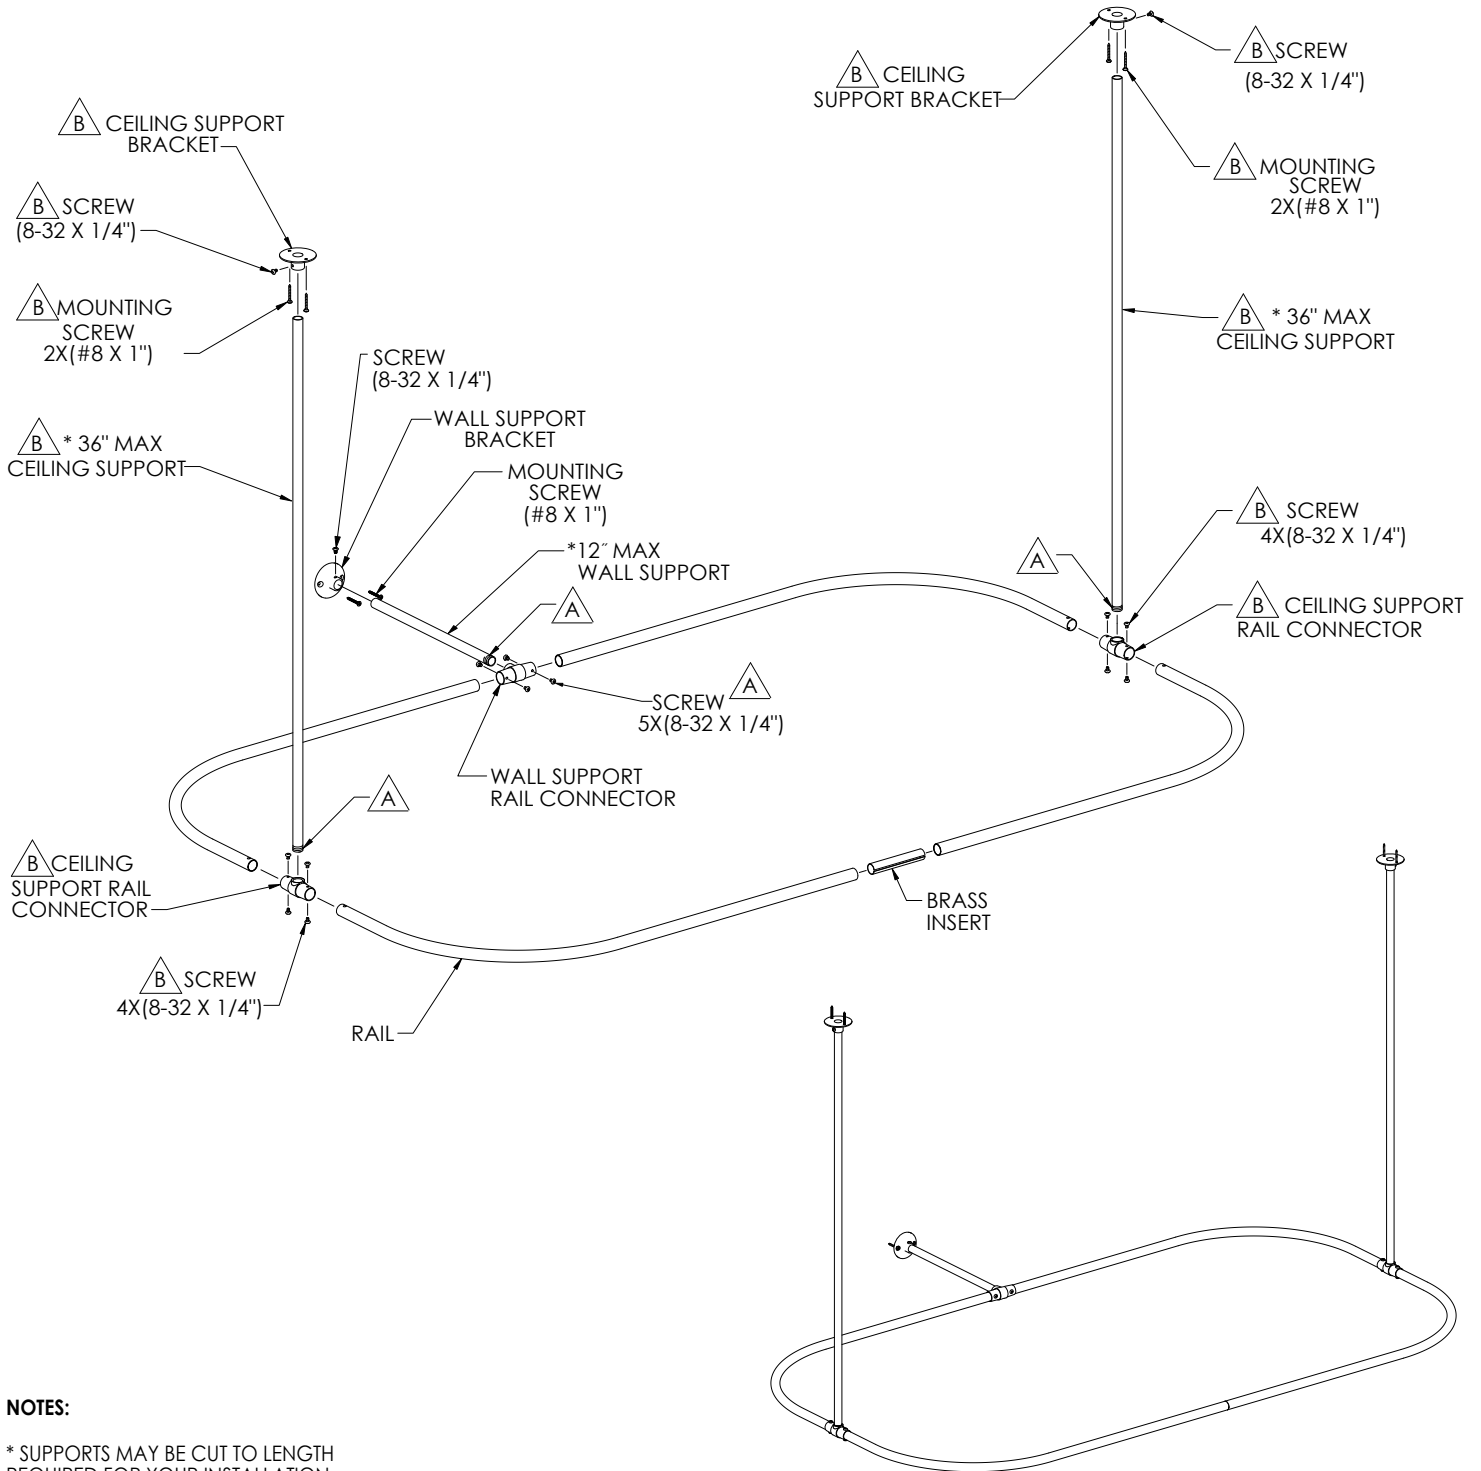

NOTES:

* SUPPORTS MAY BE CUT TO LENGTH REQUIRED FOR YOUR INSTALLATION CIRCUMSTANCES.

CAUTION: DO NOT CUT THREADED END!

A THREADS ON PIPES ARE SHALLOW THREADS. DO NOT OVERTIGHTEN

B THESE PARTS CONSIST OF A KIT P/N 1042-XX

"XX" = METAL FINISH
 CH=CHROME
 OB= OLD WORLD BRONZE
 SN = SATIN NICKEL