


F5707 Euro Drain

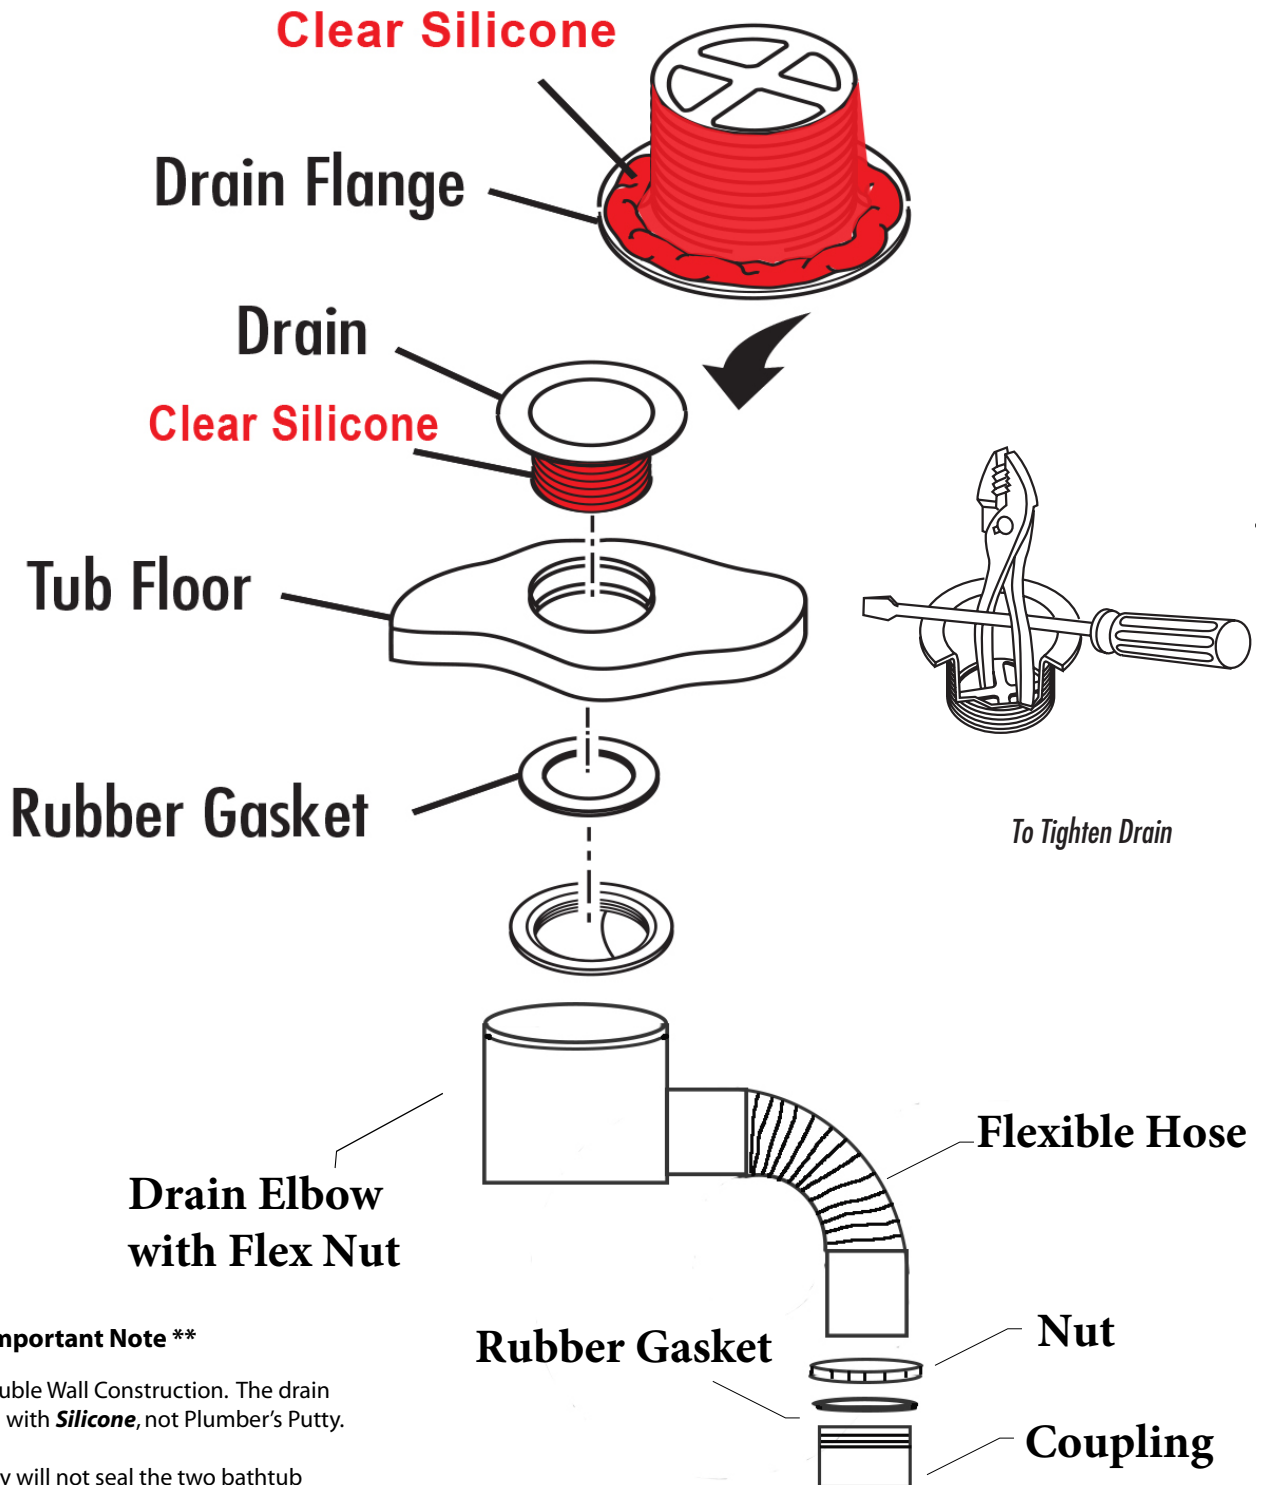

**** Important Note ****

Our bathtubs are Double Wall Construction. The drain needs to be installed with **Silicone**, not Plumber's Putty.

Using plumbers putty will not seal the two bathtub layers properly. Using **Silicone** on the drain threads and drain cavity will completely seal the drain connection to the bathtub.