


## Nomad Mounting Clamp Installation

P/N 850-800

**Step 1:** Choose three # 10 bolts or screws with appropriate washers, (make sure that they are rated for the material that they are being affixed to). DO NOT OVER TIGHTEN.

Image 1

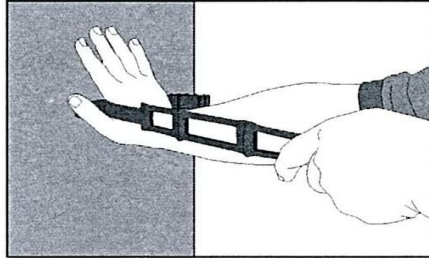

**Step 2:**

Once fastened, stretch the straps by placing one hand on the base and the other on the straps, then pull on the straps, do this several times. (Make sure to pull them straight out or perpendicular from the surface, Reference Image 1)

Image 2



**Step 3:**

Feed the end with teeth through the hole closest to the wall, and pull until securely tightened. (Reference Image 2)

**Step 4:**

If two clamps are used, repeat steps 1-3.

**Step 5:**

To unfasten, place one hand on the side with teeth and hold, with the other hand, pull from the loose end of the side with no teeth.


For use with P/N 200-800 & 200-900

## Nomad Mounting Clamp Installation

P/N 850-800

**Step 1:** Choose three # 10 bolts or screws with appropriate washers, (make sure that they are rated for the material that they are being affixed to). DO NOT OVER TIGHTEN.

Image 1

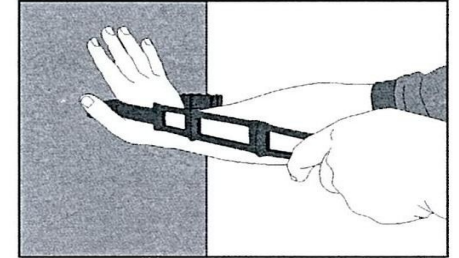

**Step 2:**

Once fastened, stretch the straps by placing one hand on the base and the other on the straps, then pull on the straps, do this several times. (Make sure to pull them straight out or perpendicular from the surface, Reference Image 1)

Image 2



**Step 3:**

Feed the end with teeth through the hole closest to the wall, and pull until securely tightened. (Reference Image 2)

**Step 4:**

If two clamps are used, repeat steps 1-3.

**Step 5:**

To unfasten, place one hand on the side with teeth and hold, with the other hand, pull from the loose end of the side with no teeth.

For use with P/N 200-800 & 200-900