



**12 Metre Windbreak**  
**(1 constant use gate 1 static gate)**

**V1**

**WB12M-V1**

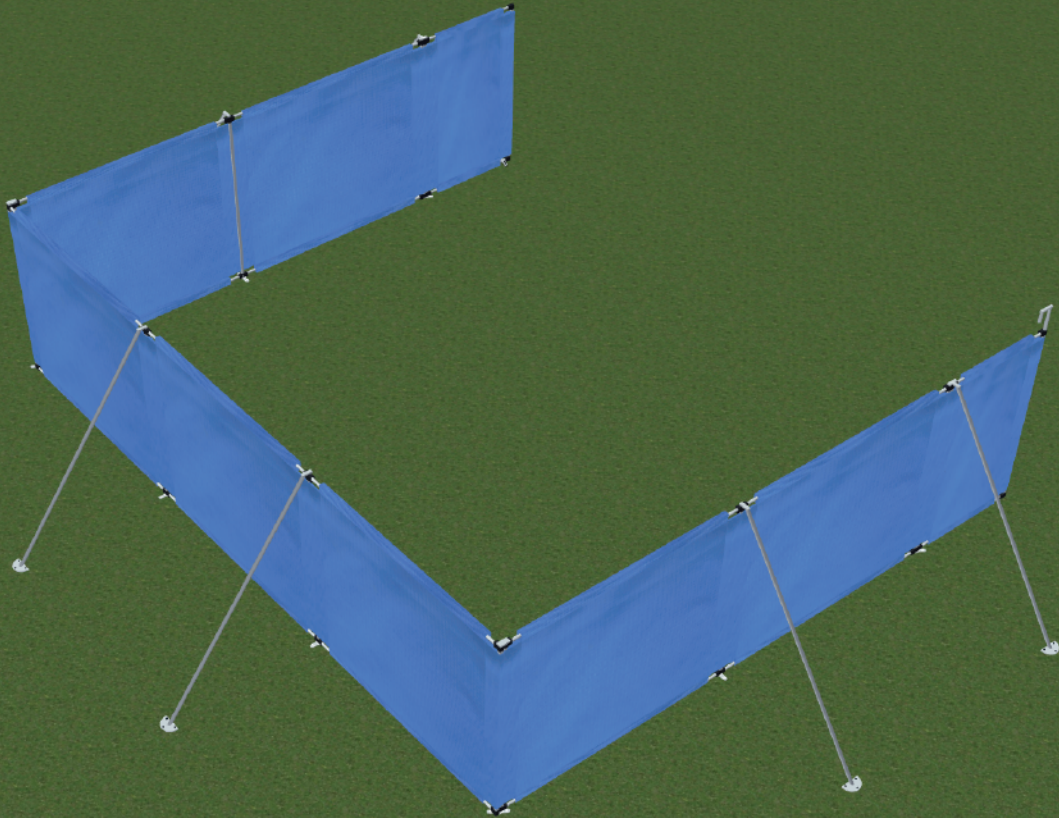

**NO ORDINARY WINDBREAKS**

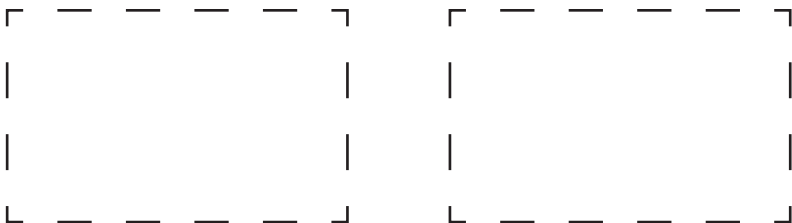

**Scan the code  
and watch the  
video instructions**

**12 Metre Windbreak**  
**(1 constant use gate 1 static gate)**






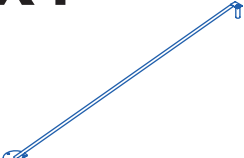
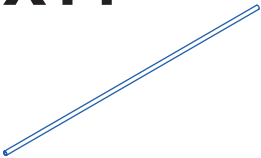

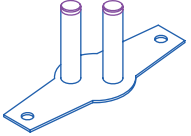
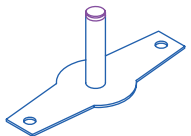
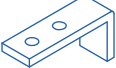

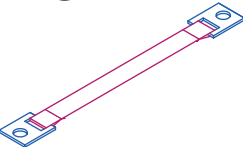
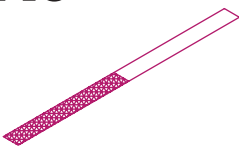
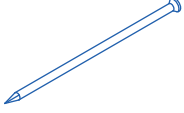
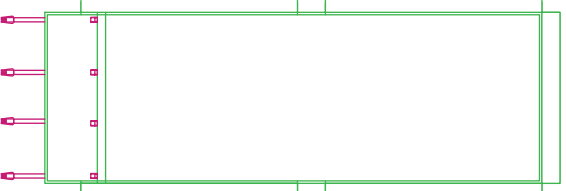
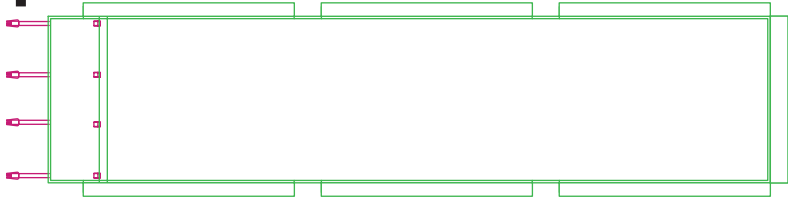
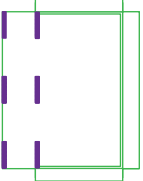
**V1**

**WB12M-V1**

Windbreak Colour

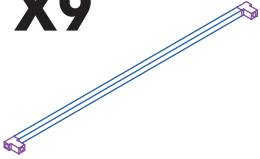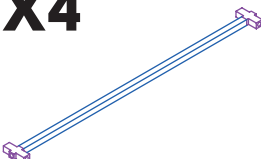


**Parts List**

<p><b>X9</b></p>  <p><b>UPRIGHT END POLE</b></p>	<p><b>X4</b></p>  <p><b>UPRIGHT T POLE</b></p>	<p><b>X0</b></p>  <p><b>UPRIGHT CORNER POLE</b></p>	<p><b>X1</b></p>  <p><b>GATE SPIKE</b></p>	<p><b>X2</b></p>  <p><b>DOUBLE PIN SUPPORT POLE</b></p>
<p><b>X4</b></p>  <p><b>SINGLE PIN SUPPORT POLE</b></p>	<p><b>X14</b></p>  <p><b>HORIZONTAL POLE</b></p>	<p><b>X4</b></p>  <p><b>GATE POLE</b></p>	<p><b>X4</b></p>  <p><b>DOUBLE GROUND PLATE</b></p>	<p><b>X4</b></p>  <p><b>SINGLE GROUND PLATE</b></p>
<p><b>X1</b></p>  <p><b>STATIC GATE STOP</b></p>	<p><b>X2</b></p>  <p><b>TOP JOINT</b></p>	<p><b>X8</b></p>  <p><b>NYLON STRAP</b></p>	<p><b>X6</b></p>  <p><b>VELCRO STRAP</b></p>	<p><b>X36</b></p>  <p><b>GROUND PEG</b></p>
<p><b>X2</b></p>  <p><b>3 METRE FABRIC (2 PANEL)</b></p>		<p><b>X1</b></p>  <p><b>4.5 METRE FABRIC (3 PANEL)</b></p>		
<p><b>X2</b></p>  <p><b>GATE FABRIC</b></p>				

## CONSTANT USE GATE ASSEMBLY


X1

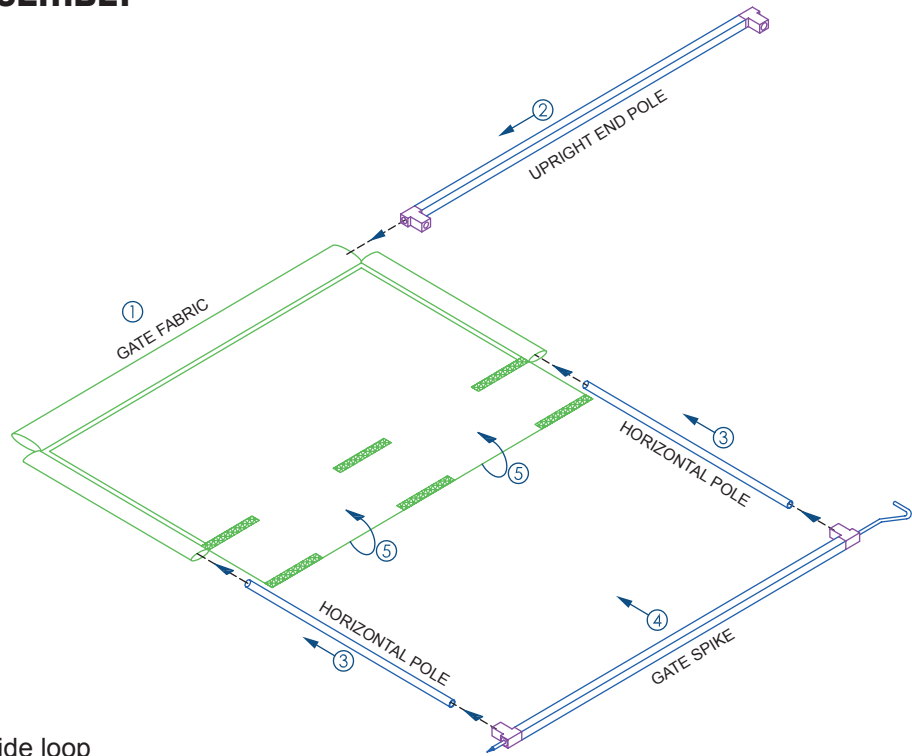

1. Lay on lawn the gate fabric
2. Slide the "Upright End Pole" in the Side loop
3. Slide the "Horizontal Poles" on the top and bottom Loop
4. Fit the "gate spike" into the "Horizontal Poles"
5. Wrap the fabric on the "gate spike" trough the velcro straps.

## STATIC USE GATE ASSEMBLY


X1

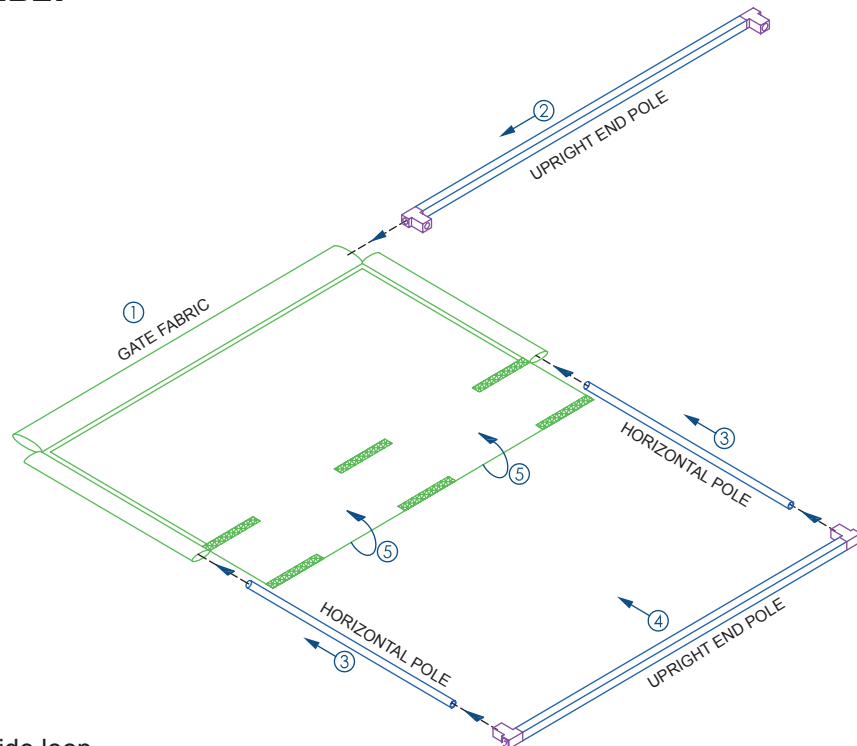

1. Lay on lawn the gate fabric
2. Slide the "Upright End Pole" in the Side loop
3. Slide the "Horizontal Poles" on the top and bottom Loop
4. Fit the "upright end pole" into the "Horizontal Poles"
5. Wrap the fabric on the "Upright End Pole" trough the velcro straps.


## 3 METRE PANEL ASSEMBLY

x2

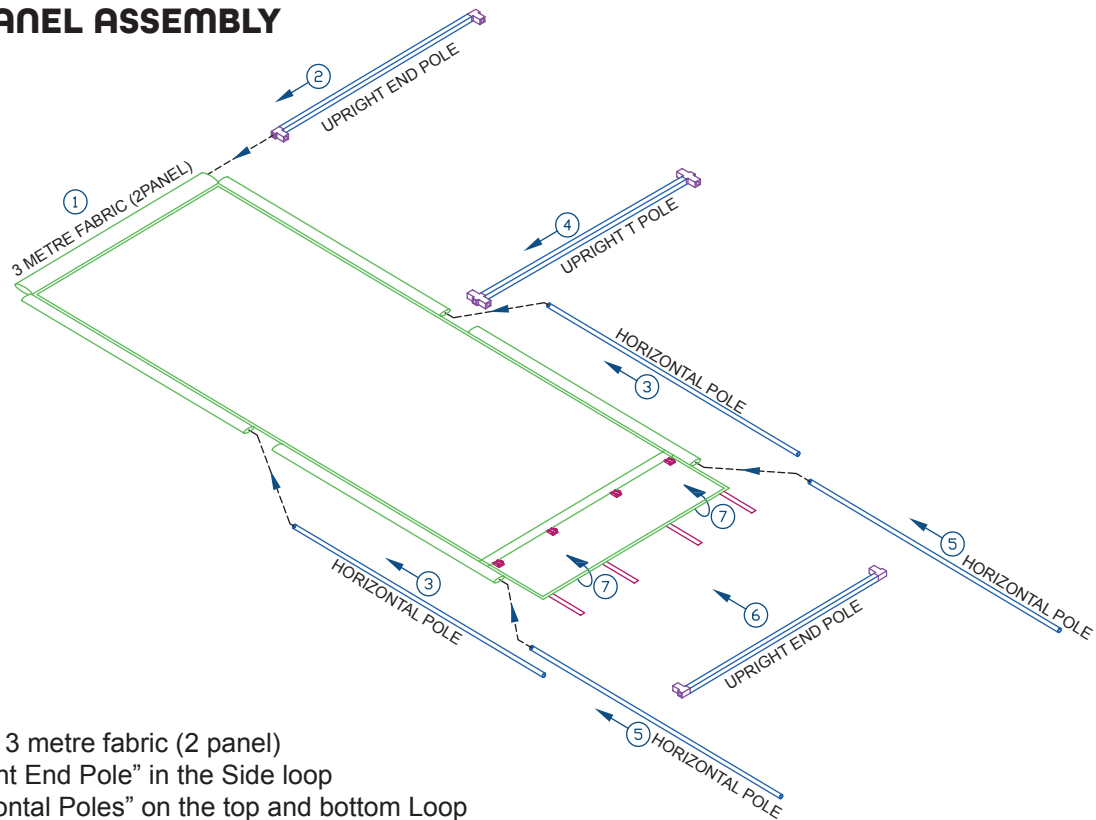


1. Lay on lawn the 3 metre fabric (2 panel)
2. Slide the "Upright End Pole" in the Side loop
3. Slide the "Horizontal Poles" on the top and bottom Loop
4. Lay on the "Upright T Pole" and fit it onto the "Horizontal Poles"
5. Slide the other 2 "Horizontal Poles" into the top and bottom loop push them into the "Upright T Poles"
6. Fit the "Upright End Pole" into the "Horizontal Poles"
7. Wrap the fabric on the "Upright End Pole" trough the Plastic Buckle Clip, then pull the Plastic Buckle straps to tension the fabric.

## 4.5 METRE PANEL ASSEMBLY


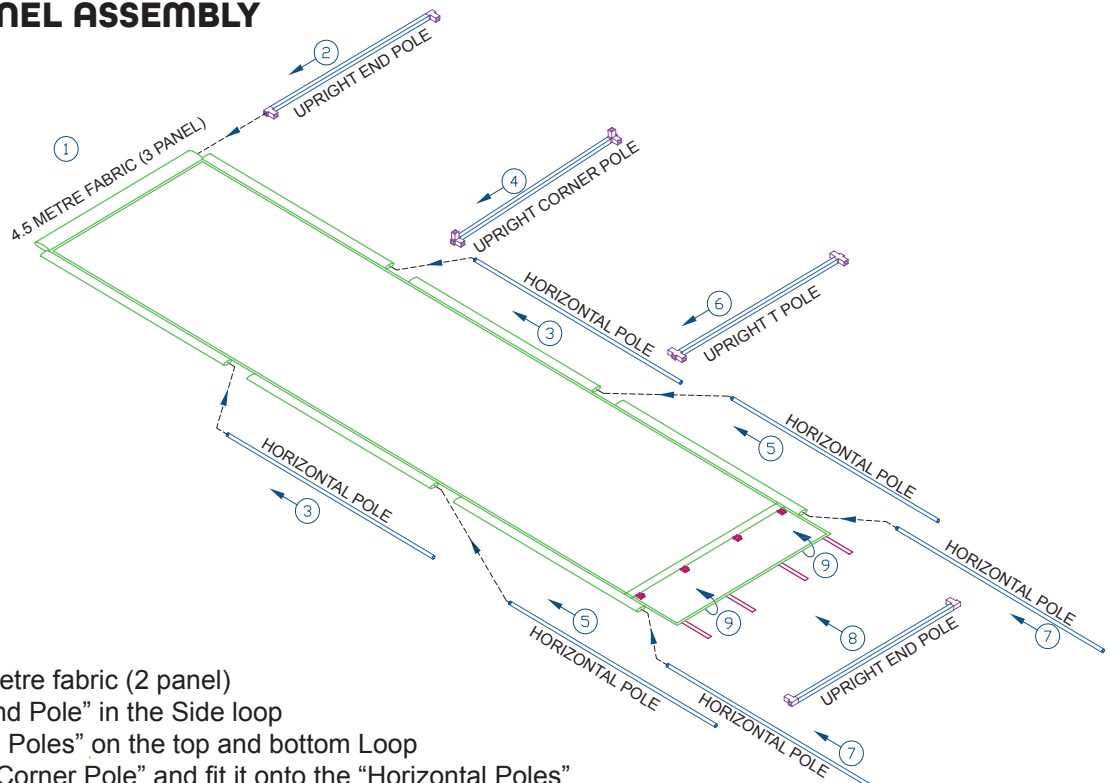



1. Lay on lawn the 3 metre fabric (2 panel)
2. Slide the "Upright End Pole" in the Side loop
3. Slide the "Horizontal Poles" on the top and bottom Loop
4. Lay on the "Upright Corner Pole" and fit it onto the "Horizontal Poles"
5. Slide the other 2 "Horizontal Poles" into the top and bottom loop push them into the "Upright Corner Poles"
6. Fit the "Upright T Pole" into the "Horizontal Poles"
7. Slide the other 2 "Horizontal Poles" into the top and bottom loop push them into the "Upright T Poles"
8. Wrap the fabric on the "Upright End Pole" trough the Plastic Buckle Clip,
9. Then pull the Plastic Buckle straps to tension the fabric.



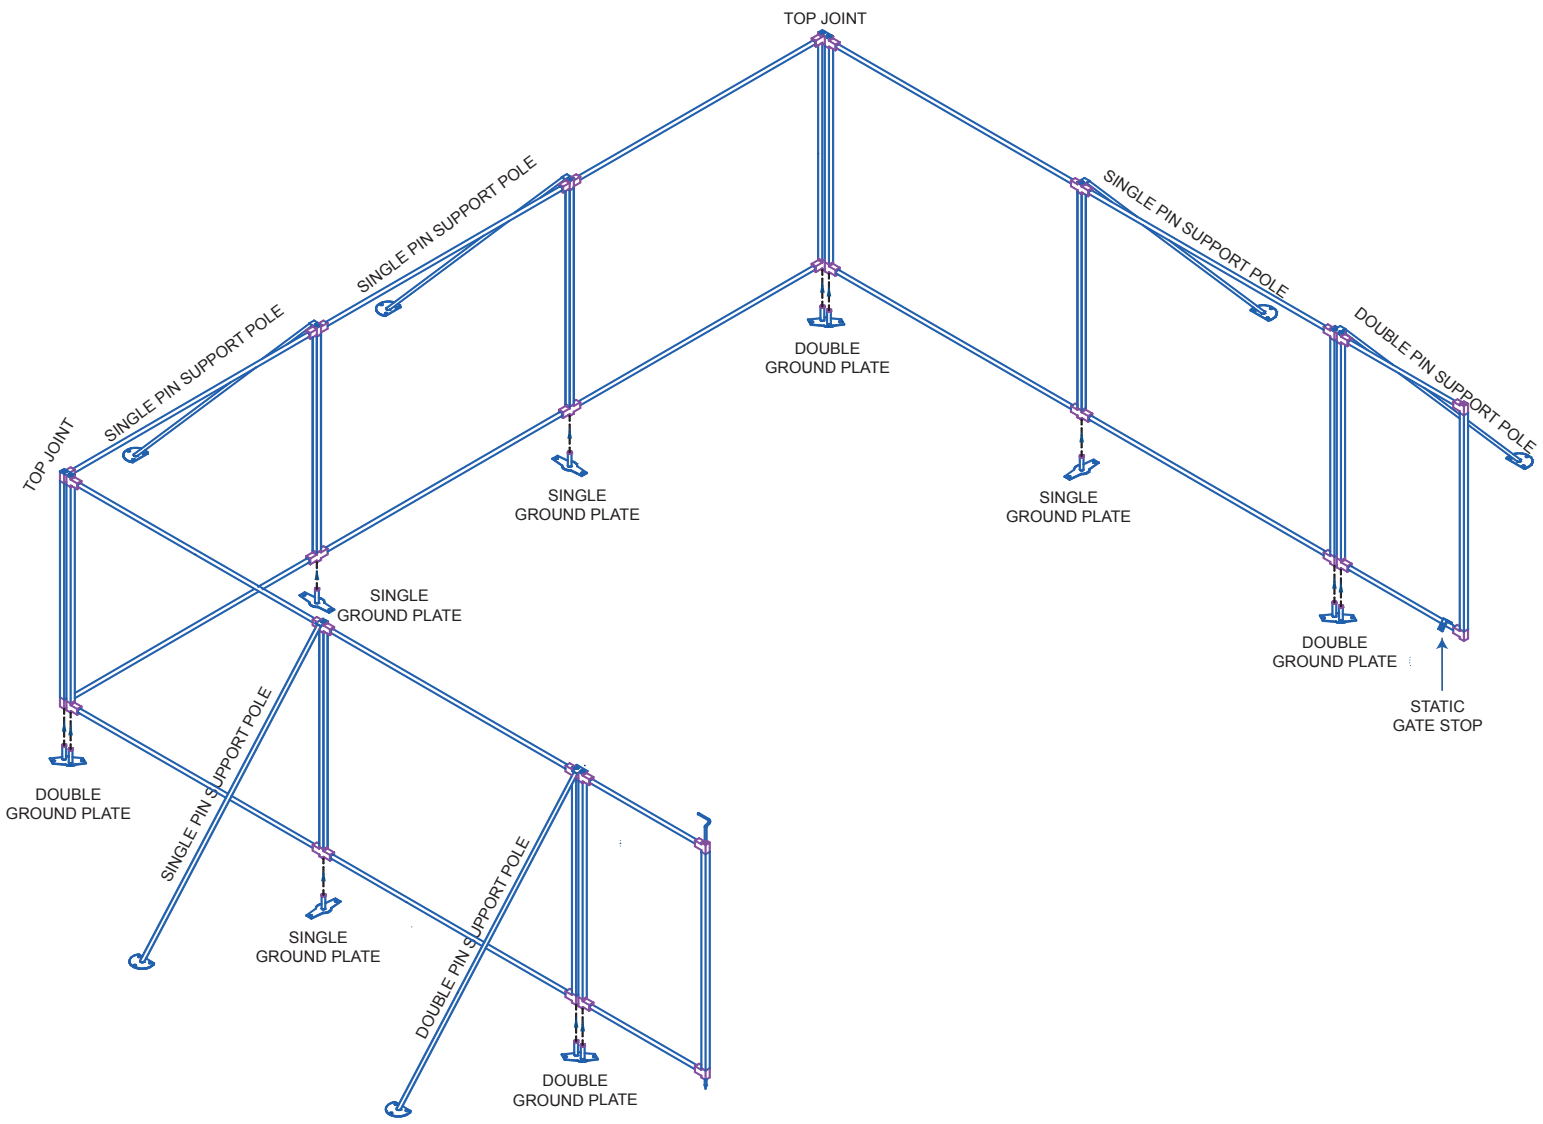

1. Lay on the lawn the ground plates
2. Fit the sections on the ground plates
3. Add the support poles
4. Nail down to the ground the support poles
5. Add the nylon straps and nail down with the ground plates
6. Add the velcro strap to hold the support pole with the section.
7. Add the static gate stop to hold the static gate
8. Add the top joint in the corner to hold the sections together

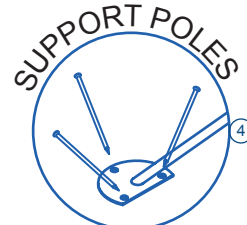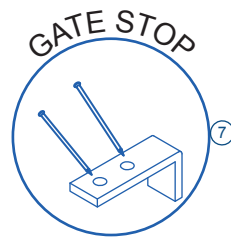

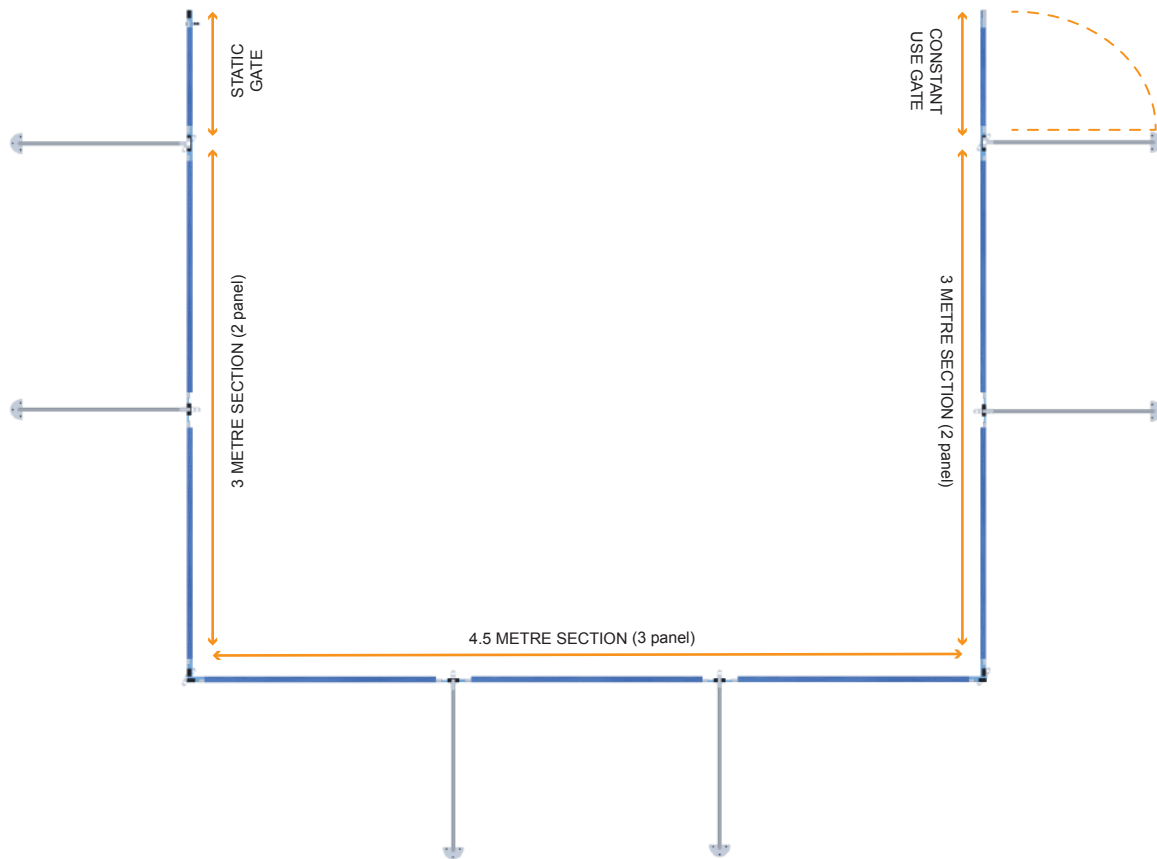

WINDBREAK HEIGHT: 120 CM

