



**9 Metre Windbreak
(2 constant use gates)**

V2

WB9M-V2

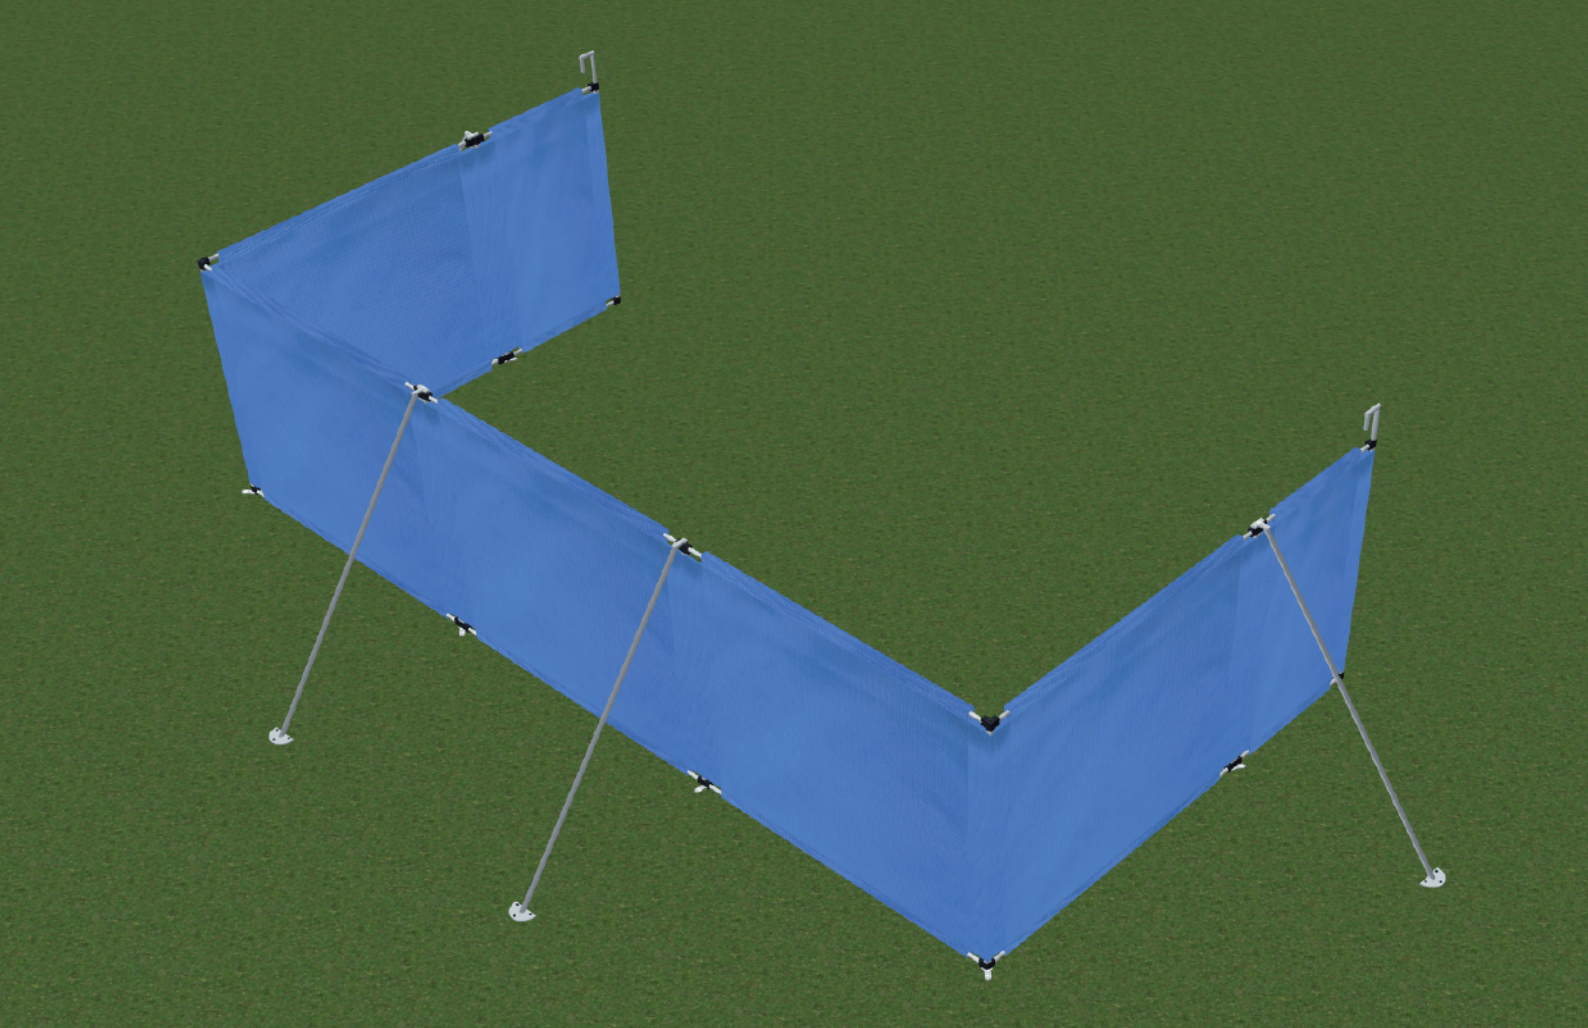

NO ORDINARY WINDBREAKS

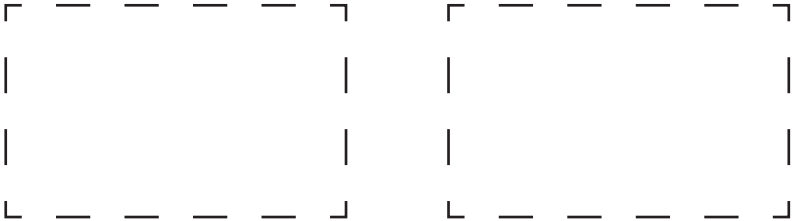

Scan the code
and watch the
video instructions

**9 Metre Windbreak
(2 constant use gate)**













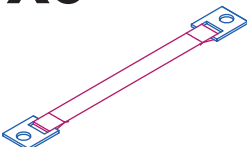
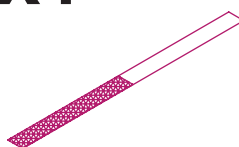
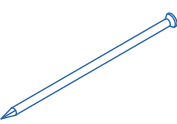
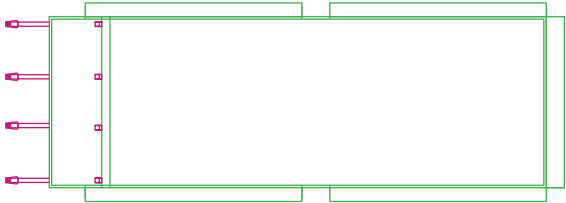
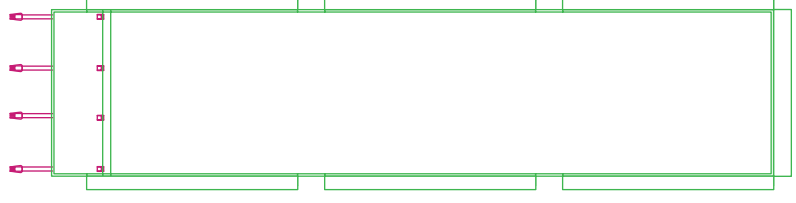
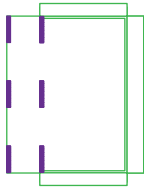
V2

WB9M-V2


Windbreak Colour

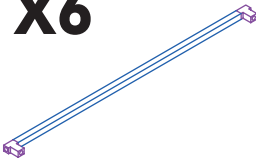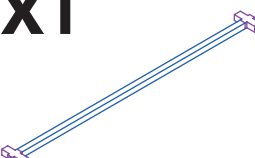

Parts List

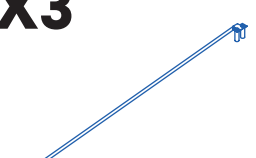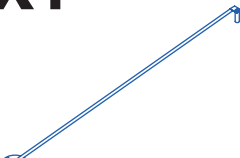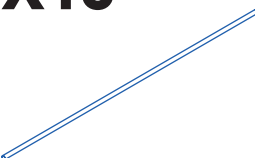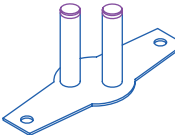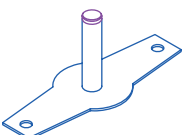
<p>X6</p>  <p>UPRIGHT END POLE</p>	<p>X1</p>  <p>UPRIGHT T POLE</p>	<p>X2</p>  <p>UPRIGHT CORNER POLE</p>	<p>X2</p>  <p>GATE SPIKE</p>	<p>X3</p>  <p>DOUBLE PIN SUPPORT POLE</p>
<p>X1</p>  <p>SINGLE PIN SUPPORT POLE</p>	<p>X10</p>  <p>HORIZONTAL POLE</p>	<p>X4</p>  <p>GATE POLE</p>	<p>X3</p>  <p>DOUBLE GROUND PLATE</p>	<p>X3</p>  <p>SINGLE GROUND PLATE</p>
<p>X0</p>  <p>STATIC GATE STOP</p>	<p>X0</p>  <p>TOP JOINT</p>	<p>X6</p>  <p>NYLON STRAP</p>	<p>X4</p>  <p>VELCRO STRAP</p>	<p>X24</p>  <p>GROUND PEG</p>
<p>X1</p>  <p>3 METRE FABRIC (2 PANEL)</p>		<p>X1</p>  <p>4.5 METRE FABRIC (3 PANEL)</p>		
<p>X2</p>  <p>GATE FABRIC</p>				

CONSTANT USE GATE ASSEMBLY

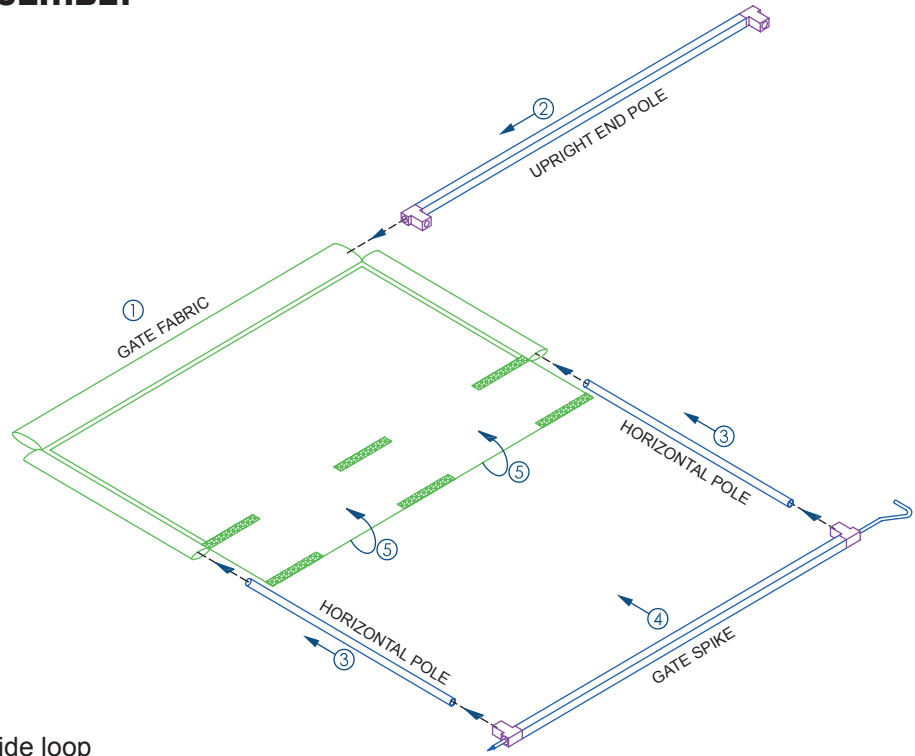


1. Lay on lawn the gate fabric
2. Slide the "Upright End Pole" in the Side loop
3. Slide the "Horizontal Poles" on the top and bottom Loop
4. Fit the "gate spike" into the "Horizontal Poles"
5. Wrap the fabric on the "gate spike" trough the velcro straps.

CONSTANT USE GATE ASSEMBLY

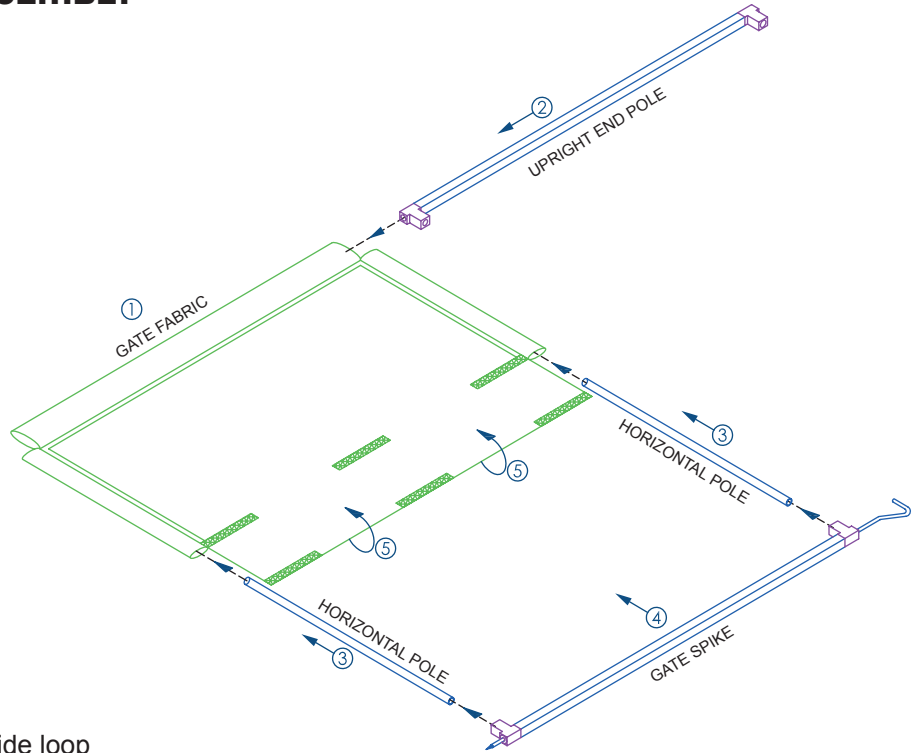


1. Lay on lawn the gate fabric
2. Slide the "Upright End Pole" in the Side loop
3. Slide the "Horizontal Poles" on the top and bottom Loop
4. Fit the "gate spike" into the "Horizontal Poles"
5. Wrap the fabric on the "gate spike" trough the velcro straps.

3 METRE PANEL ASSEMBLY

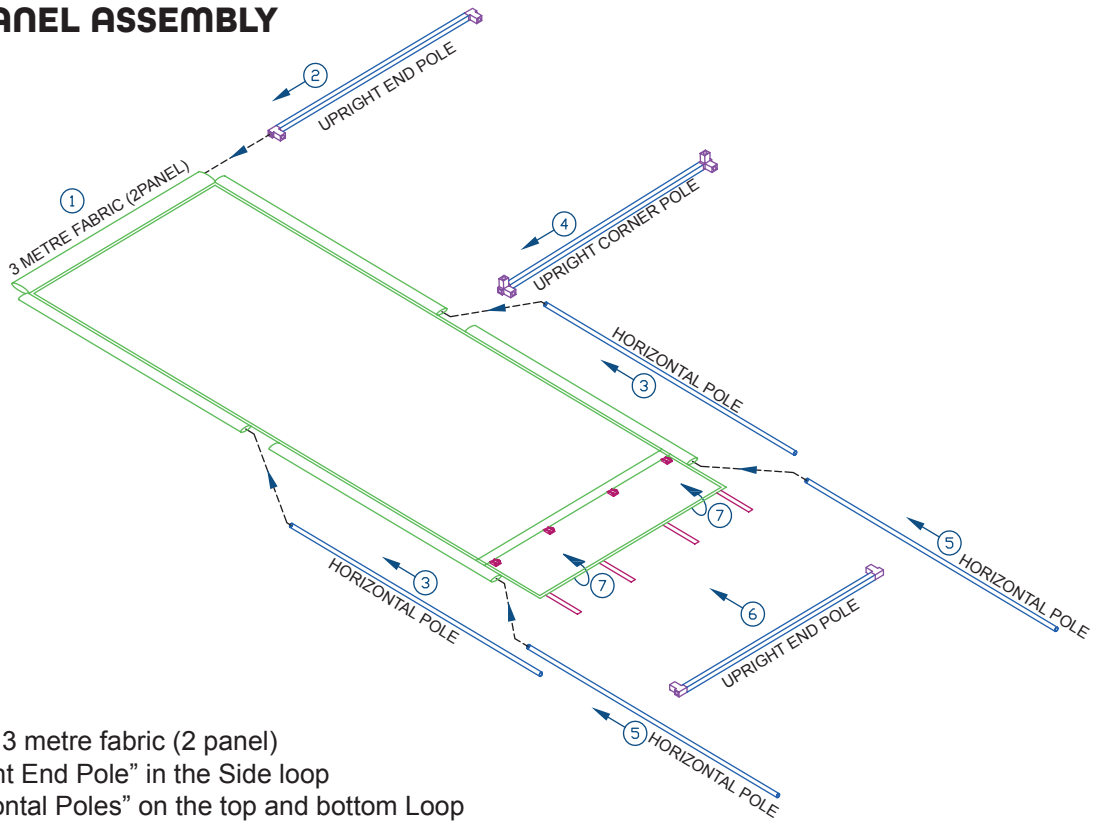


1. Lay on lawn the 3 metre fabric (2 panel)
2. Slide the "Upright End Pole" in the Side loop
3. Slide the "Horizontal Poles" on the top and bottom Loop
4. Lay on the "Upright Corner Pole" and fit it onto the "Horizontal Poles"
5. Slide the other 2 "Horizontal Poles" into the top and bottom loop push them into the "Upright Corner Poles"
6. Fit the "Upright Pole" into the "Horizontal Poles"
7. Wrap the fabric on the "Upright End Pole" trough the Plastic Buckle Clip, then pull the Plastic Buckle straps to tension the fabric.



4.5 METRE PANEL ASSEMBLY

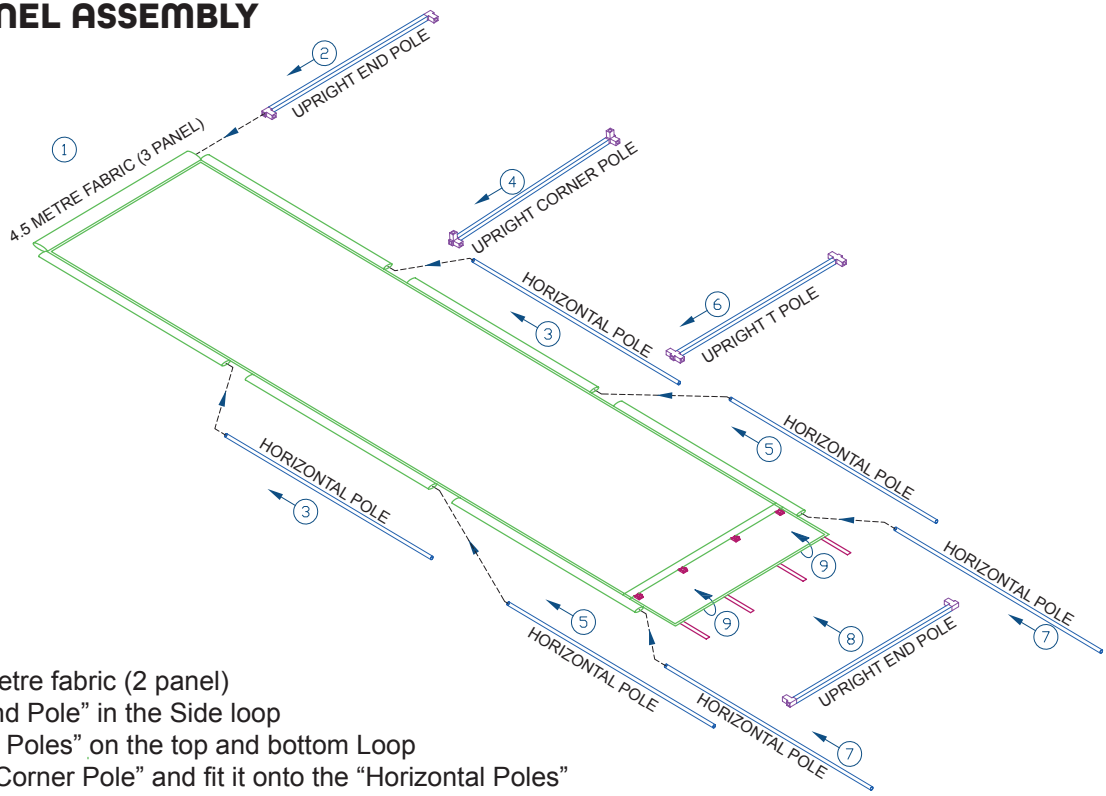


1. Lay on lawn the 3 metre fabric (2 panel)
2. Slide the "Upright End Pole" in the Side loop
3. Slide the "Horizontal Poles" on the top and bottom Loop
4. Lay on the "Upright Corner Pole" and fit it onto the "Horizontal Poles"
5. Slide the other 2 "Horizontal Poles" into the top and bottom loop push them into the "Upright Corner Poles"
6. Fit the "Upright T Pole" into the "Horizontal Poles"
7. Slide the other 2 "Horizontal Poles" into the top and bottom loop push them into the "Upright T Poles"
8. Wrap the fabric on the "Upright End Pole" trough the Plastic Buckle Clip,
9. Then pull the Plastic Buckle straps to tension the fabric.

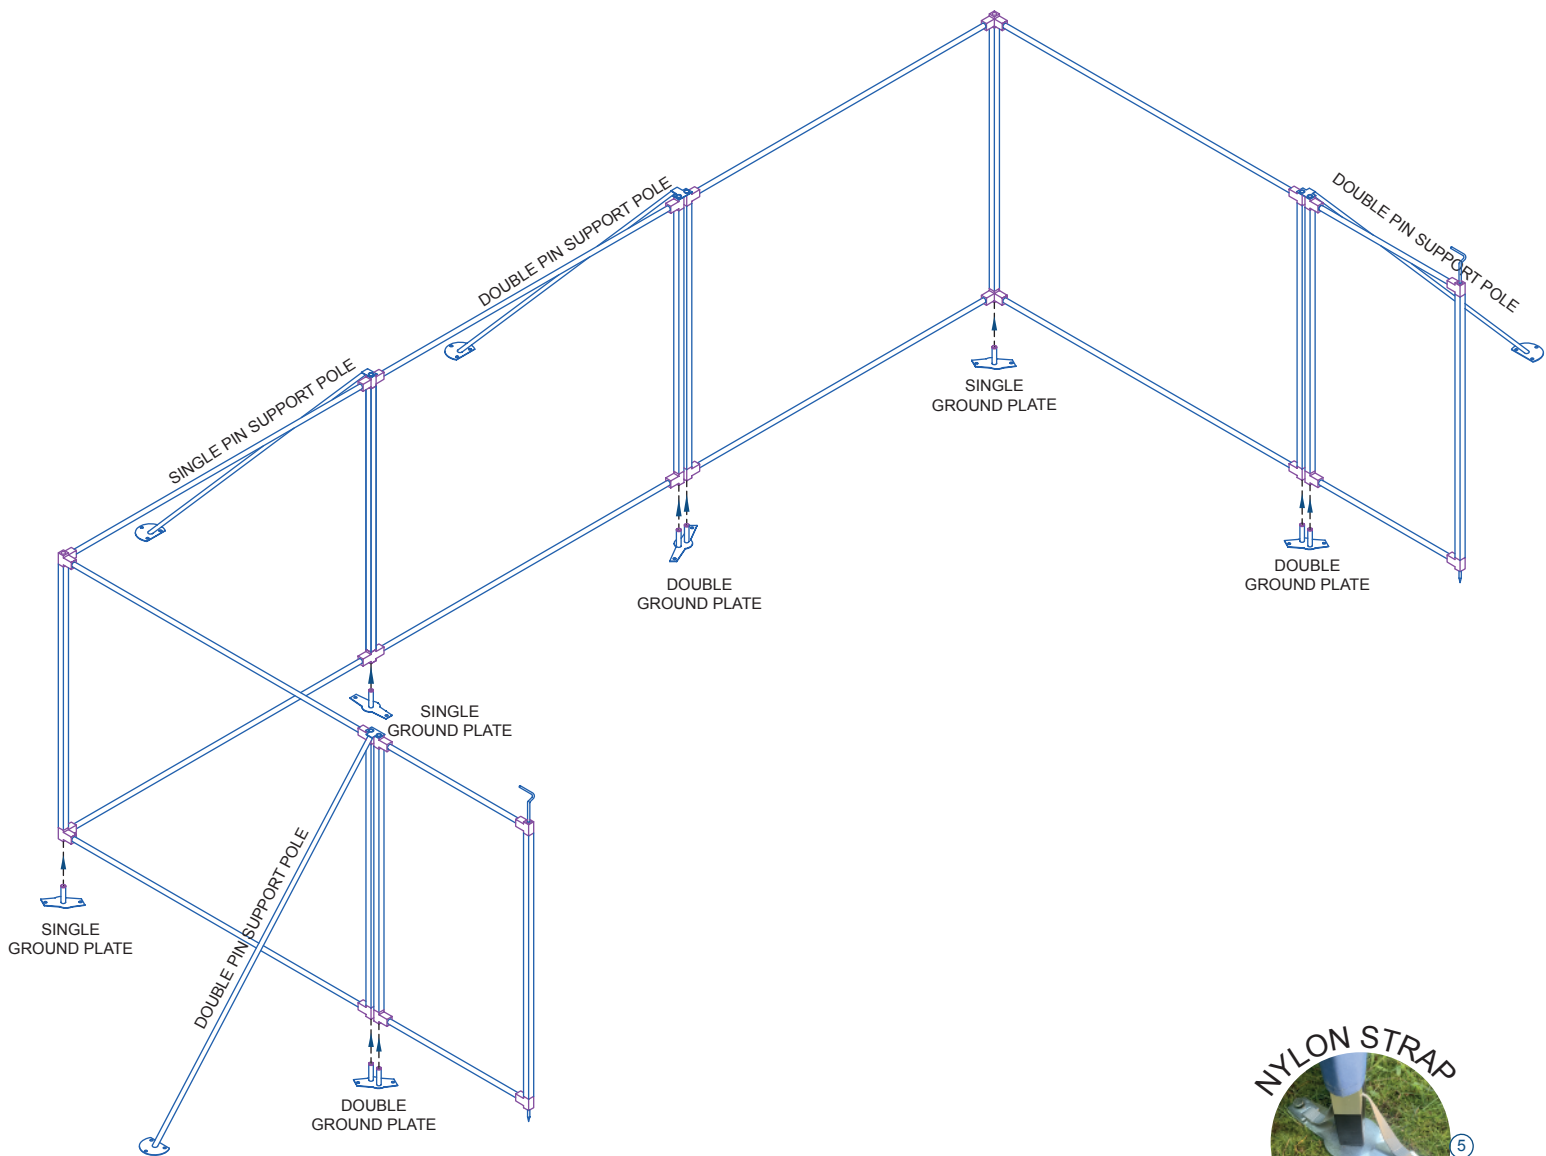

1. Lay on the lawn the ground plates
2. Fit the sections on the ground plates
3. Add the support poles
4. Nail down to the ground the support poles
5. Add the nylon straps and nail down with the ground plates
6. Add the velcro strap to hold the support pole with the section.

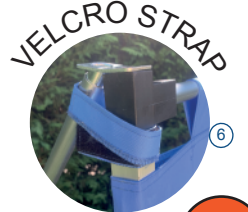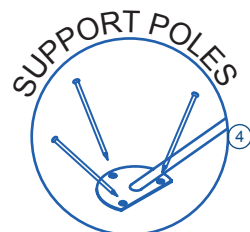

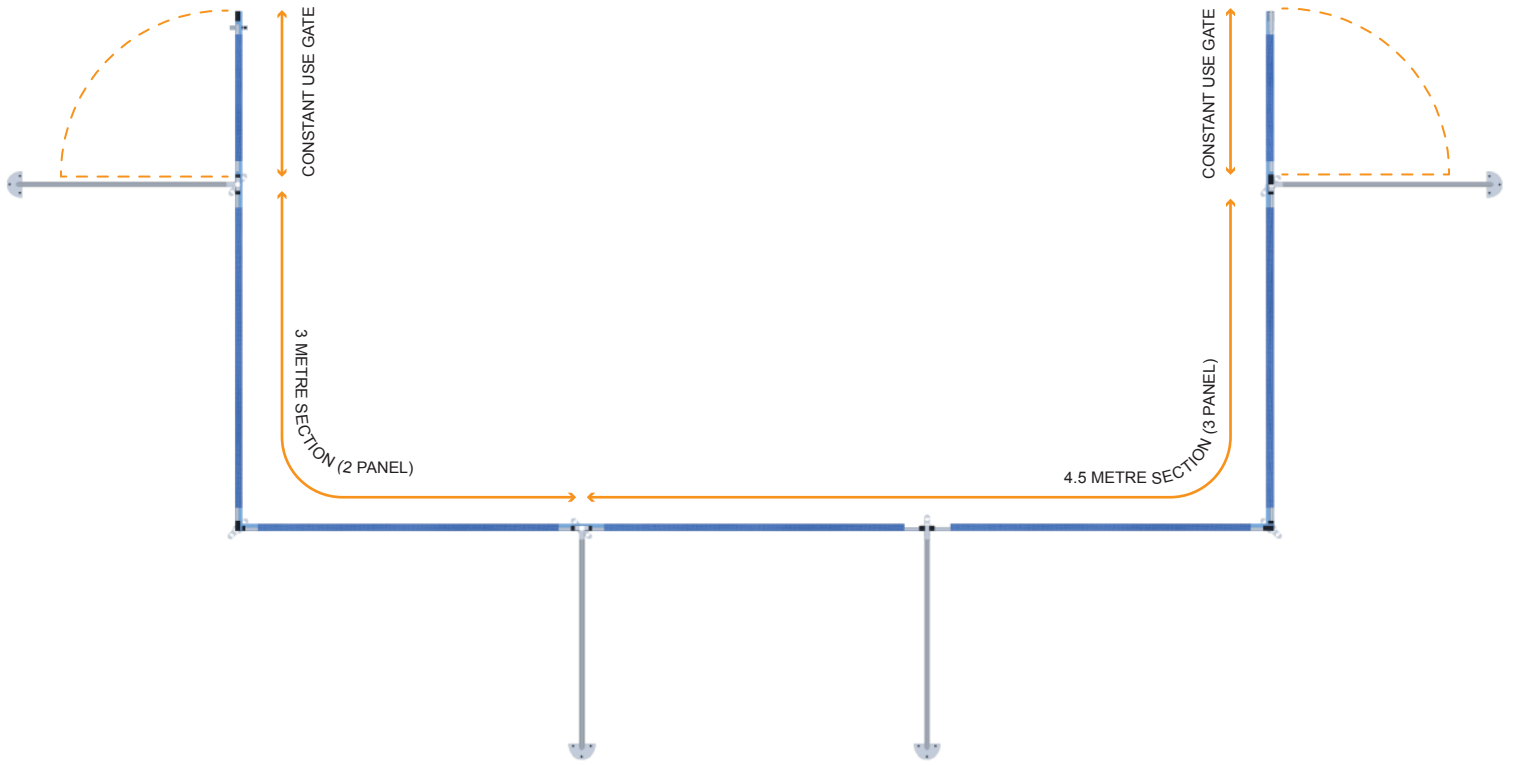

WINDBREAK HEIGHT: 120 CM

