



# FRONT SPLITTER

## INSTALLATION MANUAL

### Disclaimer

These are fitting guidelines only and we highly recommend installations are undertaken by a professional. Maxton Design Ltd. can't be held liable for any damages or liabilities that may arise from following any guidelines given by the Company.

Vehicle modifications caused by the usage, abuse, or incorrect installation of Maxton Design Ltd. products might result in significant vehicle malfunction. Vehicle damage, major bodily injury, disability, and/or death are among the dangers. Any changes you make to your or someone else's car using Maxton Design Ltd. goods are your responsibility. Maxton Design Ltd. is not responsible for any changes made to automobiles as a result of the usage or abuse of its product and will not be held accountable. If you have little to no expertise installing any of the products sold via [maxtondesign.co.uk](http://maxtondesign.co.uk) website, professional installation is highly suggested.

Products are sold as-is, and we are not responsible for any damages or injuries sustained during installation or subsequent use of the vehicle. Because proper installation is crucial to our product's performance and longevity, please go through the documentation carefully and test your installation before resuming driving.

**COMPLETE SET CONTAINS:**

- Splitter /Front Bumper Lip Spoiler
- Mounting Kit
- Mounting Manual



For more Installation Manuals visit  
[www.maxtondesign.co.uk/fitting-manuals](http://www.maxtondesign.co.uk/fitting-manuals)

### 1 CHECK THE FITTING

Line up the splitter to the bumper's bottom. Level splitter edges with the bumper edges, near the wheels on both sides. (this fitting should be done by two individuals)

### 2 MARK DRILLING POINTS

With levelled splitter (pt.1) mark the points through the splitter and the bumper every 15-20cm.

Use 6mm driller to make holes where the splitter


### 3 INSTALL THE SPLITTER

Insert enclosed screws through the drilled holes in the splitter and the bumper. Secure with nuts.

### ! IMPORTANT


You need to use poliethylene glue if the gap between spolitter's edge adjoining bumper and drilled hole is more than 3cm.

Glue needs to dry for minimum 24h before driving.

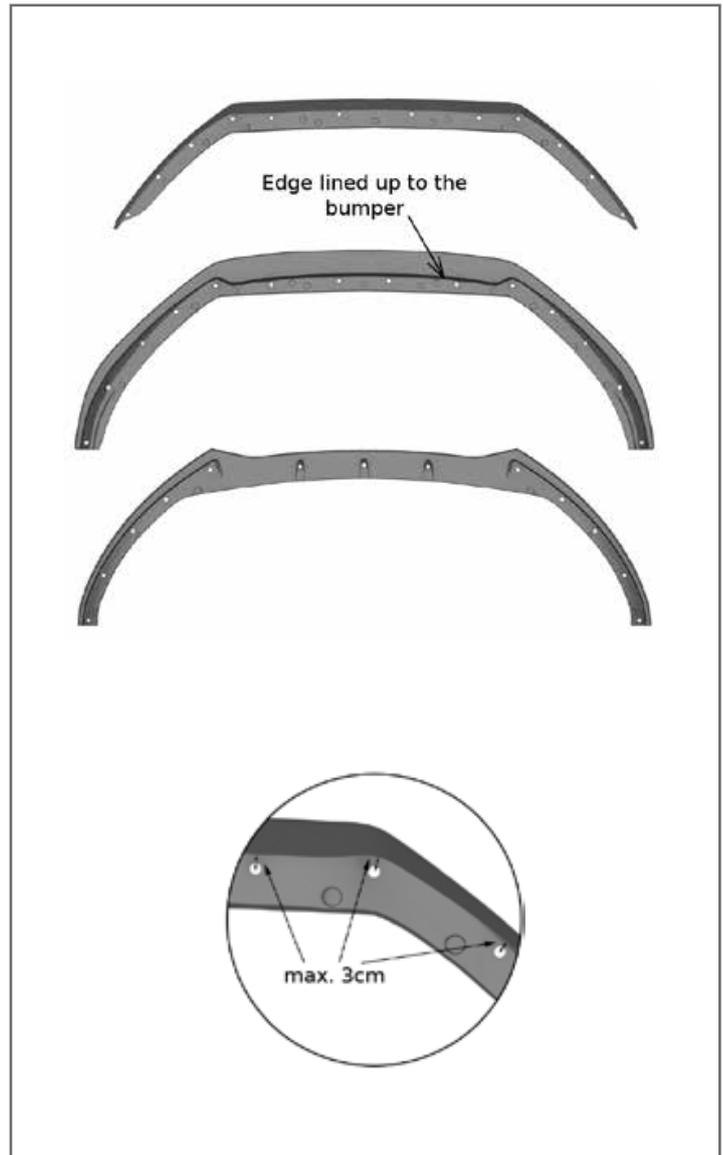


Please note these instructions are for guidance only. It is your responsibility to ensure the installation is undertaken in a safe and correct way. We strongly recommend you leave the installation to a qualified professional.

✓ **PERFECT FIT!**  
Splitter mounted correctly.


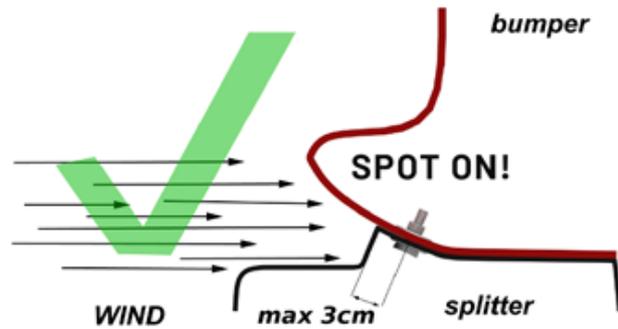


✓ **OK.**  
This is acceptable.

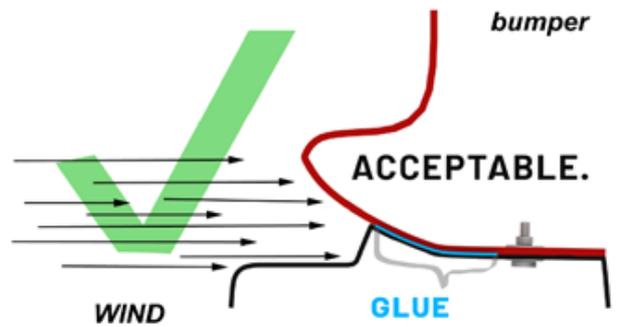

✗ **NOT ACCEPTABLE**

Wind can cause damage to the splitter if it's not correctly positioned or if the bolts are not firmly fixed in place.

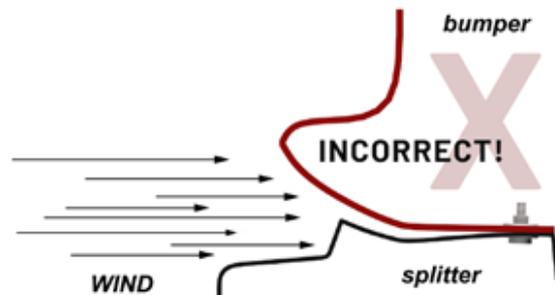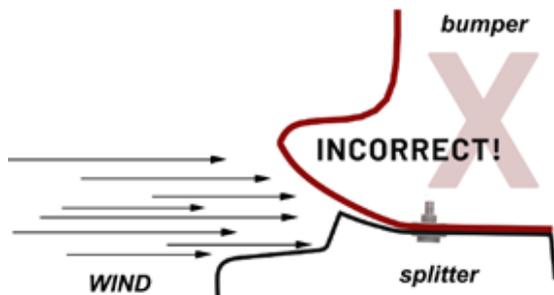

# Thank you for choosing Maxton Design!

We hope our product will meet your expectations.  
Let us know if you have any questions.

+44 (0) 113 531 6574

[sales@maxtondesign.co.uk](mailto:sales@maxtondesign.co.uk)

[www.maxtondesign.co.uk](http://www.maxtondesign.co.uk)

