



SPOILER EXTENSION

-INSTALLATION MANUAL-

Disclaimer

These are fitting guidelines only and we highly recommend installations are undertaken by a professional. Maxton Design Ltd. can't be held liable for any damages or liabilities that may arise from following any guidelines given by the Company.

Vehicle modifications caused by the usage, abuse, or incorrect installation of Maxton Design Ltd. products might result in significant vehicle malfunction. Vehicle damage, major bodily injury, disability, and/or death are among the dangers. Any changes you make to your or someone else's car using Maxton Design Ltd. goods are your responsibility. Maxton Design Ltd. is not responsible for any changes made to automobiles as a result of the usage or abuse of its product and will not be held accountable. If you have little to no expertise installing any of the products sold via maxtondesign.co.uk website, professional installation is highly suggested.

Products are sold as-is, and we are not responsible for any damages or injuries sustained during installation or subsequent use of the vehicle. Because proper installation is crucial to our product's performance and longevity, please go through the documentation carefully and test your installation before resuming driving.

COMPLETE SET CONTAINS:

- Spoiler Extension
- Mounting Kit
- Mounting Manual



For more Installation Manuals visit
www.maxtondesign.co.uk/fitting-manuals

1 STEP 1

Place the spoiler extension on the spoiler for the initial fitment testing

2 STEP 2

Place masking tape on the cars spoiler around the edges, this will be used to help mark the placement of the product.



3 STEP 3

Use a measuring tape to find an even distance from the the end of the cars spoiler to the end of the product on both sides. We recommend you request assistance for this step.



4 STEP 4

Outline the edges of the spoiler extension on the masking tape before removing.



5 STEP 5

Lift the spoiler extension and place it to the side. Use the provided degreasing cloth to clean the spoiler prior to installation.



6 STEP 6

Peel back 2-3cm of the 3M tape cover on one of the edges of the product.



7 STEP 7

Align the spoiler extension with the markings drawn on the masking tape from step 4.

Do not put excessive pressure on the product at this point as you will need to further remove the 3m tape.



8 STEP 8


Slowly peel off the remaining 3M tape. Keep a small amount of pressure on the spoiler extension throughout this process to stop any movement from occurring. We recommend again that you should ask for assistance.

Once this is done you can clamp the product down or apply downwards pressure from above to ensure it has a more secure fit.



9 STEP 9

Now for the most satisfying step, remove the protective film from the product where applicable (Carbon look and Gloss black surface finishes).

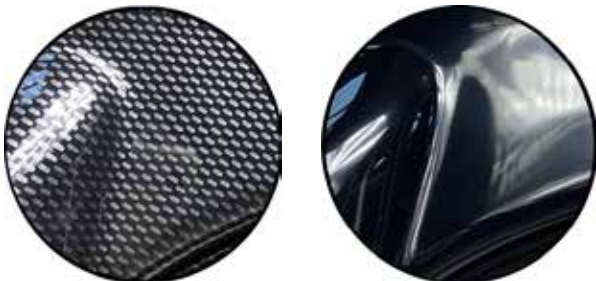

10 STEP 10

Use a heat gun to slightly heat the spoiler extension. This will further improve how well the 3M tape bonds to the car. Be cautious not to use excessive heat as it could cause deformities to the product. We recommend you keep a 30-40cm distance while completing this process.

You can now sit back, relax and enjoy your new modification.



Please note these instructions are for guidance only. It is your responsibility to ensure the installation is undertaken in a safe and correct way. We strongly recommend you leave the installation to a qualified professional.

Thank you for choosing Maxton Design!

We hope our product will meet your expectations.
Let us know if you have any questions.

+44 (0) 113 531 6574

sales@maxtondesign.co.uk

www.maxtondesign.co.uk

