

2011-2016 SUPER DUTY CARGO LIGHTS


STEP 1

Make sure there is no power going to your Cargo lights.
Remove two phillips head screws.



STEP 2

Pull your assembly away from your truck exposing your three cargo bulbs.

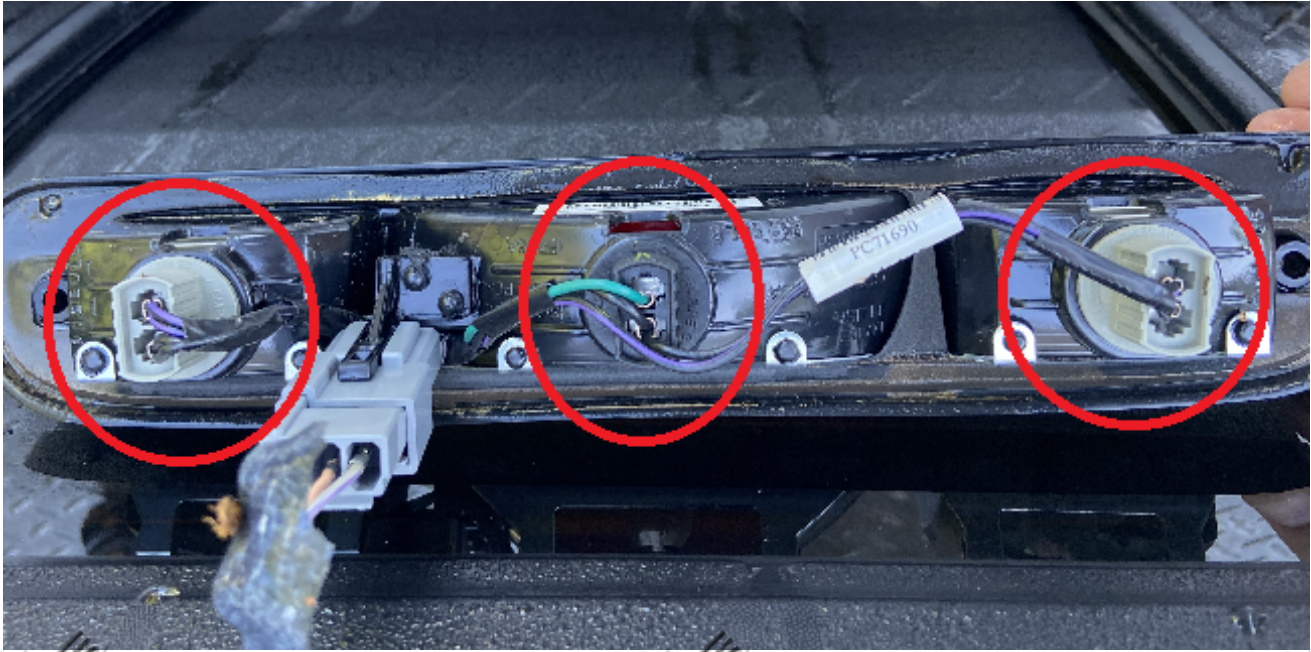

STEP 3

Turn the cargo bulb socket counterclockwise exposing your OEM bulb.

Carefully pull away from the base of the bulb to remove the OEM glass bulb.

Make sure that this bulb is not hot before removing it





STEP 4

Insert your MKII Cargo light bulb.

Test your bulb, if the bulb does not light remove the bulb and flip it 180 degrees.



Text for support: 706-214-2618

Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com

