

2011-2016 SUPER DUTY FOG LIGHTS

STEP 1

Use a counterclockwise turn to remove the stock fog bulb from the housing.





STEP 2

Disconnect the fog light bulb from the factory plug then install the MKII Fog light bulb into the fog housing by lining up the tabs on the bulb with the tabs in the housing and turning the bulb clockwise to lock it into place.



STEP 3

Now that the bulb is installed, plug the male end of the fog light resistor into the factory fog light connector.

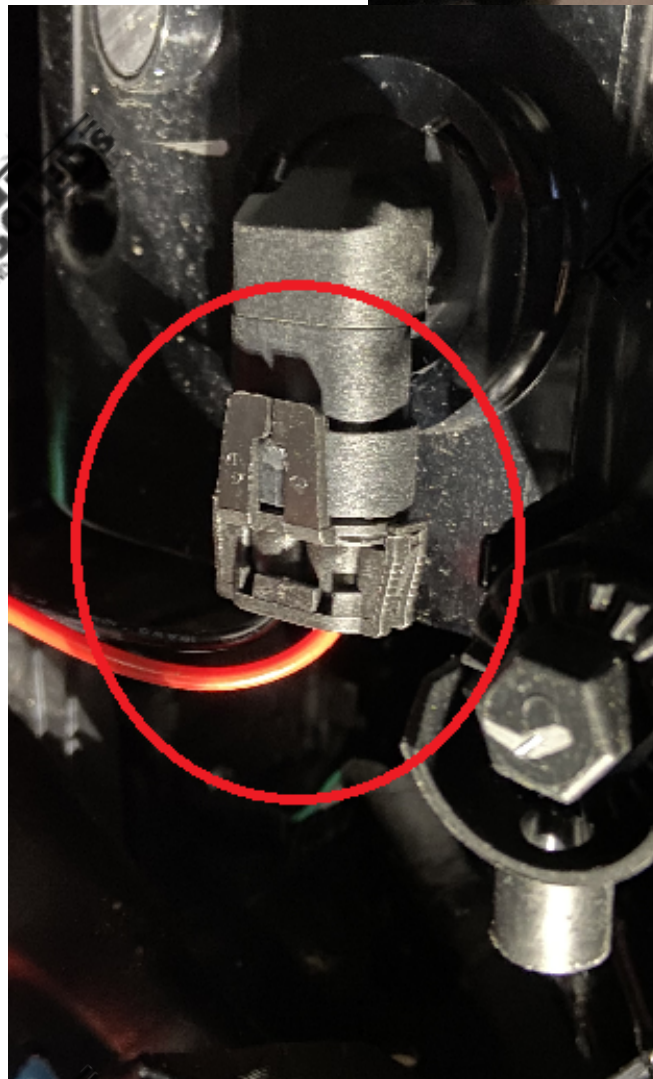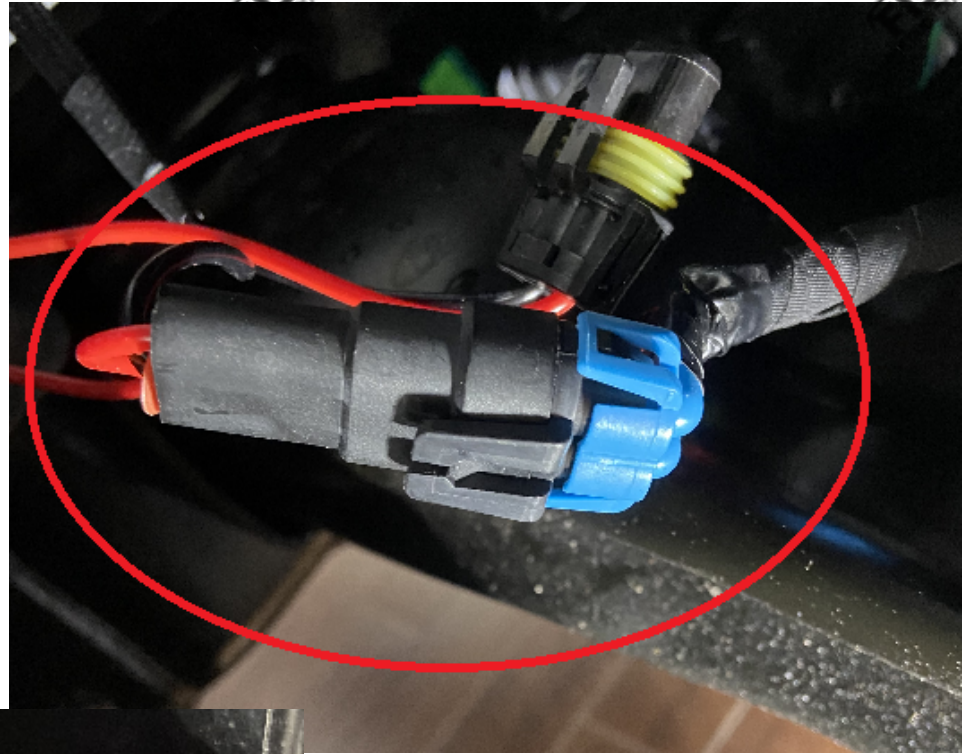

Now take the female end of the fog light resistor and plug it into the MKII Fog light bulb.

STEP 4

Using the screws provided with the kit mount the resistor unit to a metal surface so that it is not touching any plastic surface or any other wires as the resistor unit gets very hot due to the amount of voltage running through it.

An alternate way to ensure the resistor is not touching any plastic surface or any other wires is using a zip tie to secure it as seen below.





Text for support: 706-214-2618
Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com

