

2011-2016 SUPER DUTY REAR DOME

STEP 1

Use a pry tool or small flat screw driver at the back of the covering to pop the clear plastic cover off. This will expose the rear dome bulbs.



FISOLED'S
STAND OUT. SHINE BRIGHTER.

FISOLED'S
STAND OUT. SHINE BRIGHTER.

FISOLED'S
STAND OUT. SHINE BRIGHTER.



FISOLED'S
STAND OUT. SHINE BRIGHTER.

FISOLED'S
STAND OUT. SHINE BRIGHTER.

FISOLED'S
STAND OUT. SHINE BRIGHTER.

FISOLED'S
STAND OUT. SHINE BRIGHTER.


FISOLED'S
STAND OUT. SHINE BRIGHTER.



STEP 2

Remove the glass stock bulbs
(be careful removing them as they may be hot).

Once the bulbs are removed replace them with the MKII Rear Dome light kit. Then reinstall the covering for this housing.

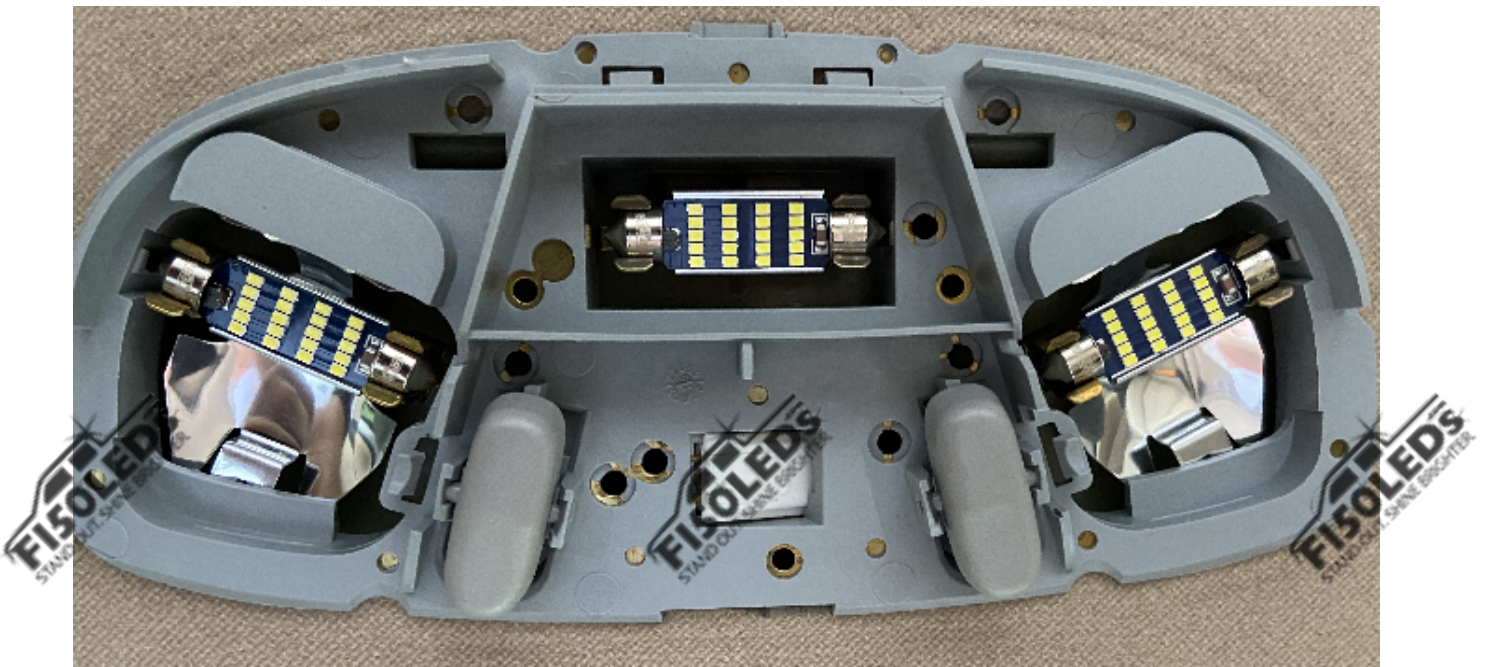

Text for support: 706-214-2618

Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com

