

2011-2016 SUPER DUTY SIDE MIRROR

STEP 1

Turn the mirror all the way towards the inside of the truck.

Once you have done that you will be able to see a metal tab in between the mirror and the black plastic housing for the mirror.



STEP 2

Use a flat head screwdriver to press on this tab and it will release the amber color housing from the front of the mirror assembly.





STEP 3


Use a counterclockwise turn on the socket on the back of the amber housing to expose the bulb.



STEP 4

Remove the stock bulb (*be careful when removing this bulb as it may be hot*)
Then install the MKII Side marker lights.

Test the bulbs before reinstalling them, if the bulb does not light take the bulb out and rotate it 180 degrees then reinstall it.

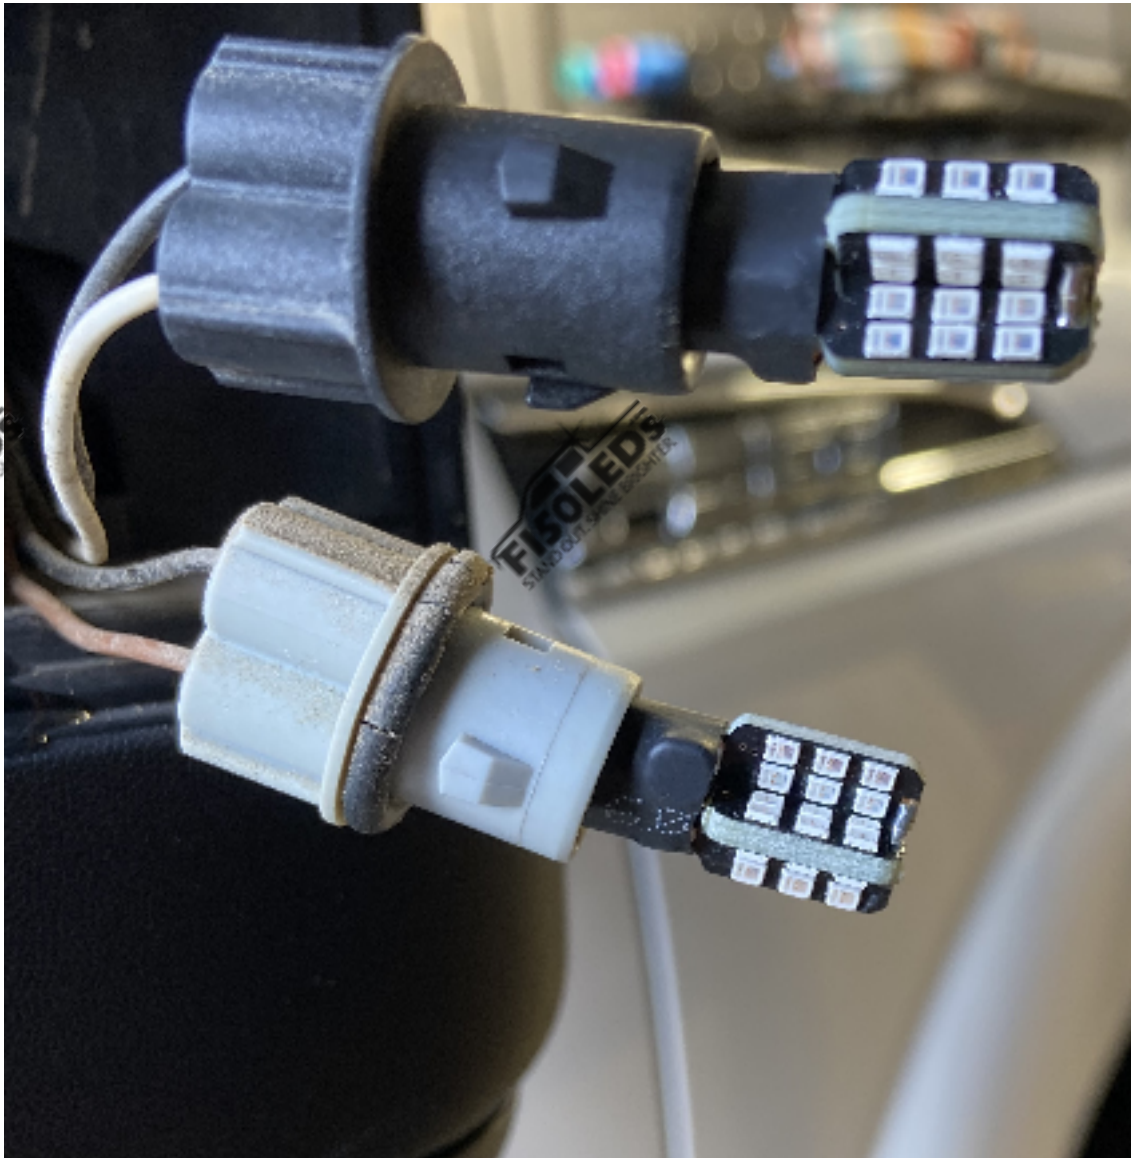



STEP 5

Repeat steps 1-4 for the other mirror then reinstall the amber housing into the mirror.



Text for support: 706-214-2618

Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com

