


2011-2016 SUPER DUTY TAG LIGHTS

STEP 1

Be sure that there is no power going to you Tag lights.

Locate tag bulb socket by looking under your bumper.

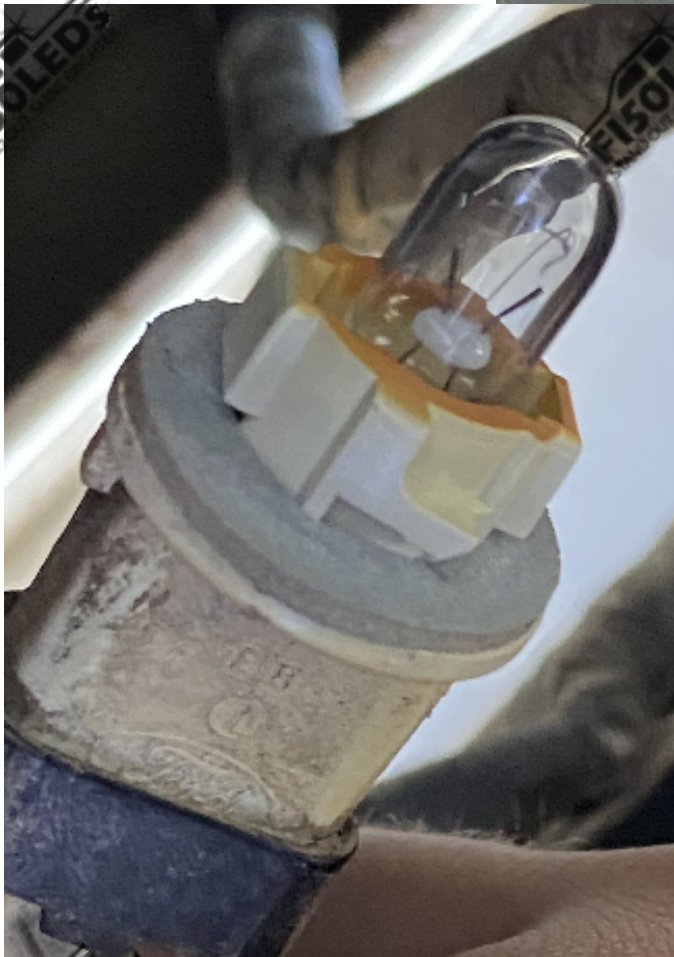


STEP 2

Twist the socket counterclockwise and pull away from the truck to expose the bulb, carefully pull the stock bulb out of the socket.



STEP 3

Insert the MKII tag light bulb.
Test your bulb to ensure that it is working, if not rotate your bulb 180 degrees. Reinsert your tag light socket back into your housing using a clockwise turn to lock it into place.

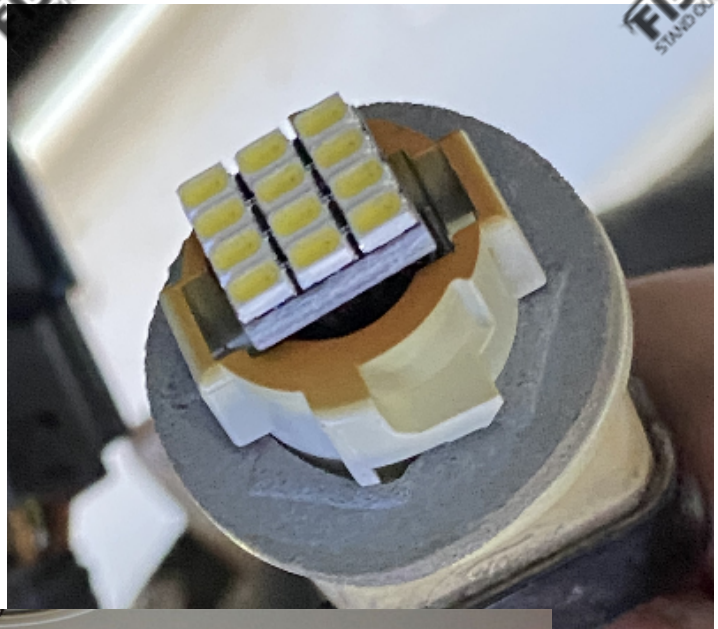

Text for support: 706-214-2618

Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com

