

2011-2016 SUPER DUTY VANITY MIRROR LIGHTS

STEP 1

Open the cover to the vanity mirror then take a small screwdriver or pry tool and use it to pry the plastic covering off to expose the bulb.






There are four tabs in total on this cover that will need to be pushed out to release this cover, they are located in the image below.



STEP 2

Carefully remove the stock vanity light bulb, **this bulb will be hot** so we recommend using a small screwdriver to pull the bulb out at the metal piece on the bottom of the bulb. *Repeat steps 1-2 on for all four bulbs.*

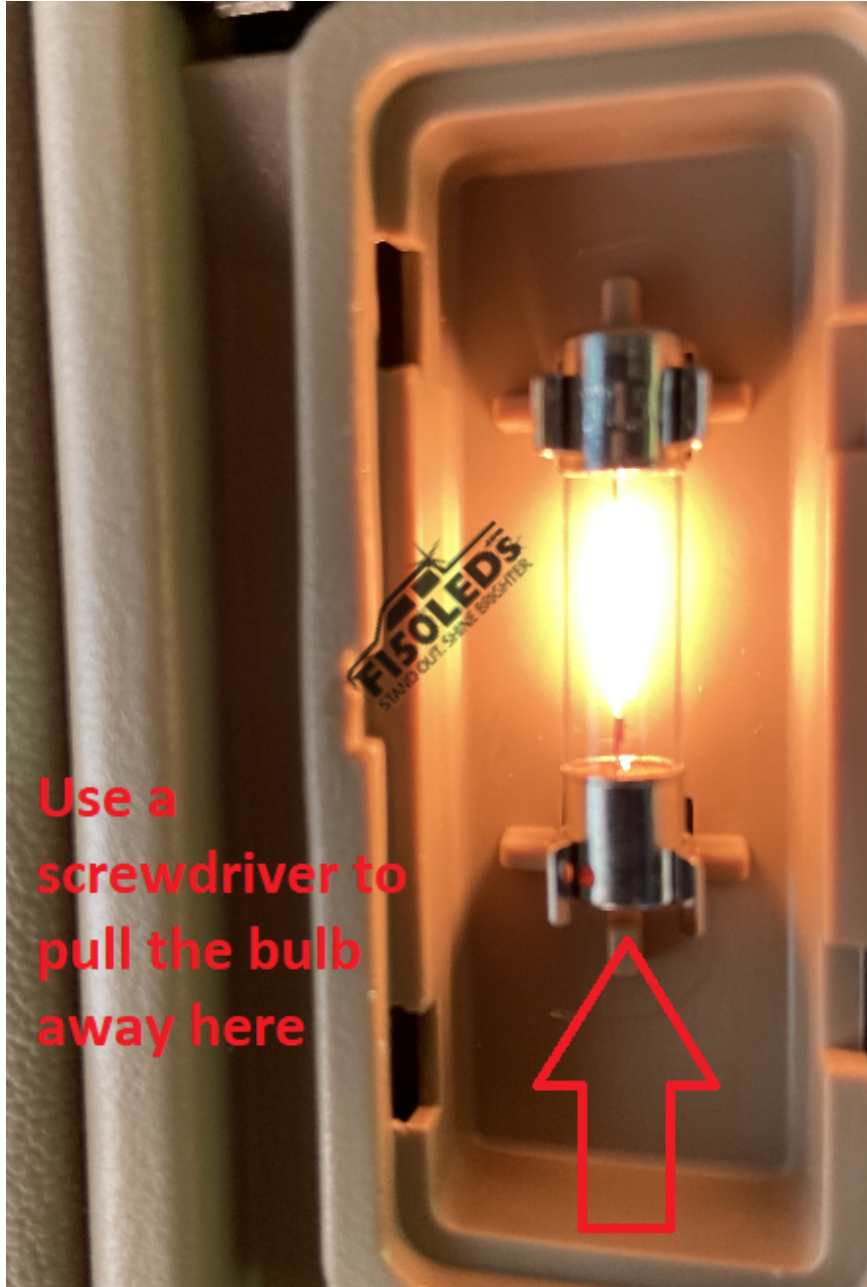

Use a
screwdriver to
pull the bulb
away here



STEP 3

Once all of the stock bulbs are moved, install the MKII Vanity lights. Make sure both metal ends of the bulb have a solid connection to the metal prongs. Make sure that the LEDs on the bulb are facing out.





STEP 4

Reinstall the plastic covers back into place by lining up the tabs on the covers then push them into place.



Text for support: 706-214-2618

Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com

