


# 2017 - 2022 SUPER DUTY DOOR SILL KIT

## STEP 1

Starting at the driver side front door use the included prep wipes to clean off the mounting surface for one of the longer door sill plates with the longer wire connected to it.

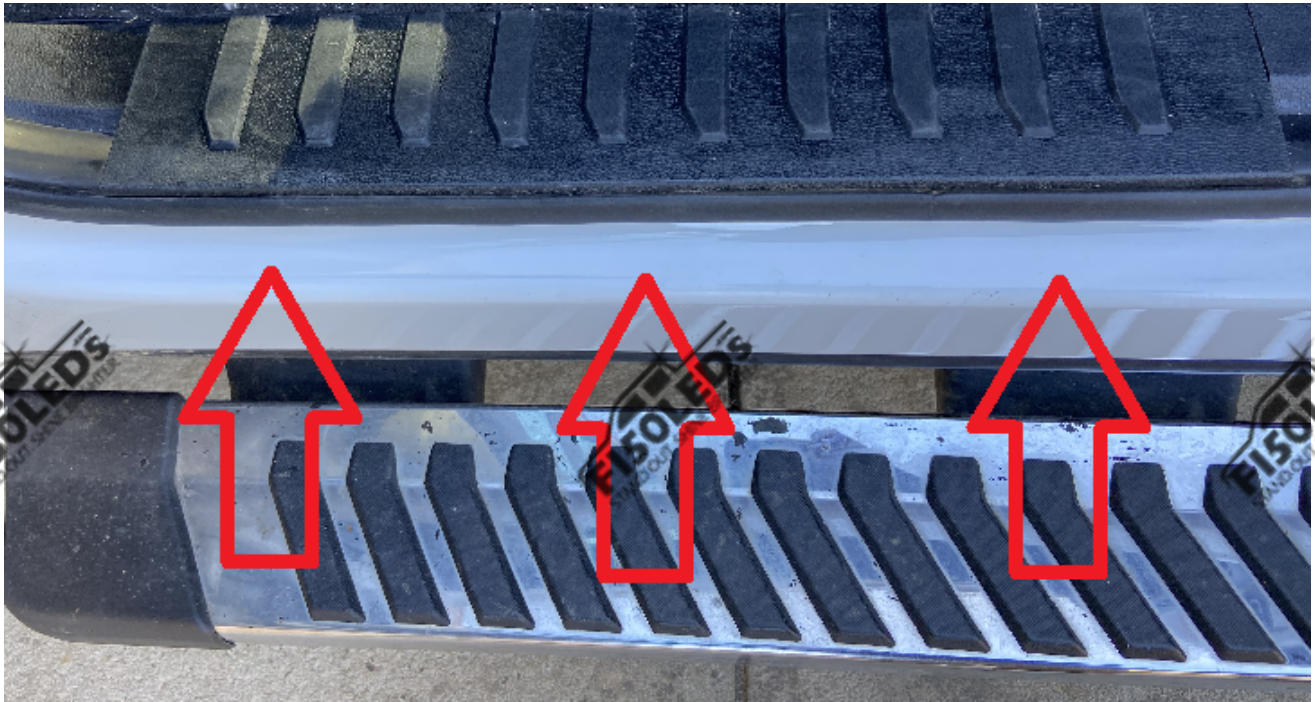

## STEP 2

Line up the door sill plate with the plastic trim cover then remove the 3M from the back of the door sill plate and mount it to the truck. (Press and hold each plate for 30-60 seconds)




## STEP 3

Remove the plastic trim cover then pull up on the rubber seal and pass the wire from the door sill plate under the seal into the truck.





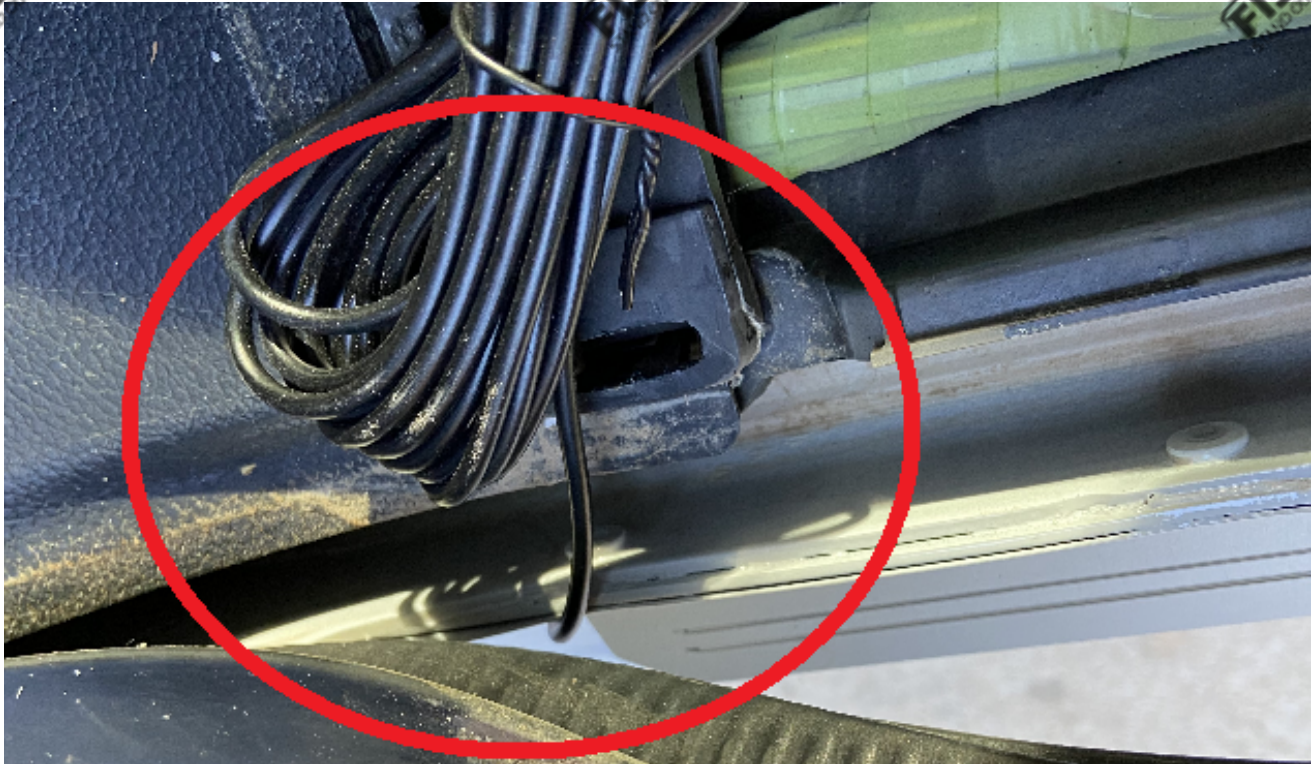

## STEP 4

Place the rubber seal back into place then run the wire from the door dill plate towards the rear of the truck then reinstall the plastic trim cover, we recommend hiding the wire by tucking it under the plastic trim.





**FISOLEDs**  
STAND OUT...SHINE BRIGHTER.

**FISOLEDs**  
STAND OUT...SHINE BRIGHTER.

**FISOLEDs**  
STAND OUT...SHINE BRIGHTER.



**FISOLEDs**  
STAND OUT...SHINE BRIGHTER.

**FISOLEDs**  
STAND OUT...SHINE BRIGHTER.

**FISOLEDs**  
STAND OUT...SHINE BRIGHTER.

**FISOLEDs**  
STAND OUT...SHINE BRIGHTER.

**FISOLEDs**  
STAND OUT...SHINE BRIGHTER.



# STEP 5

Take the smaller door sill plate with the longer wire attached to it and repeat steps 1-4 at the rear driver side door.





# STEP 6

Take the two longer wires and tuck them under the plastic trim then run them across the back of the truck to the passenger side.






## STEP 7

Repeat steps 1-4 on the front passenger door using the long door sill plate with the shorter wire and run the wire to the rear passenger door sill then repeat steps 1-4 using the short door sill plate with shorter wire attached to it.


## STEP 8

Now that all four door sills are mounted remove the plastic trim cover from the rear passenger side to gain access to the wires that will power the door sill kit. If there is tape covering these wires using a box cutter to carefully cut this tape to expose the wires.

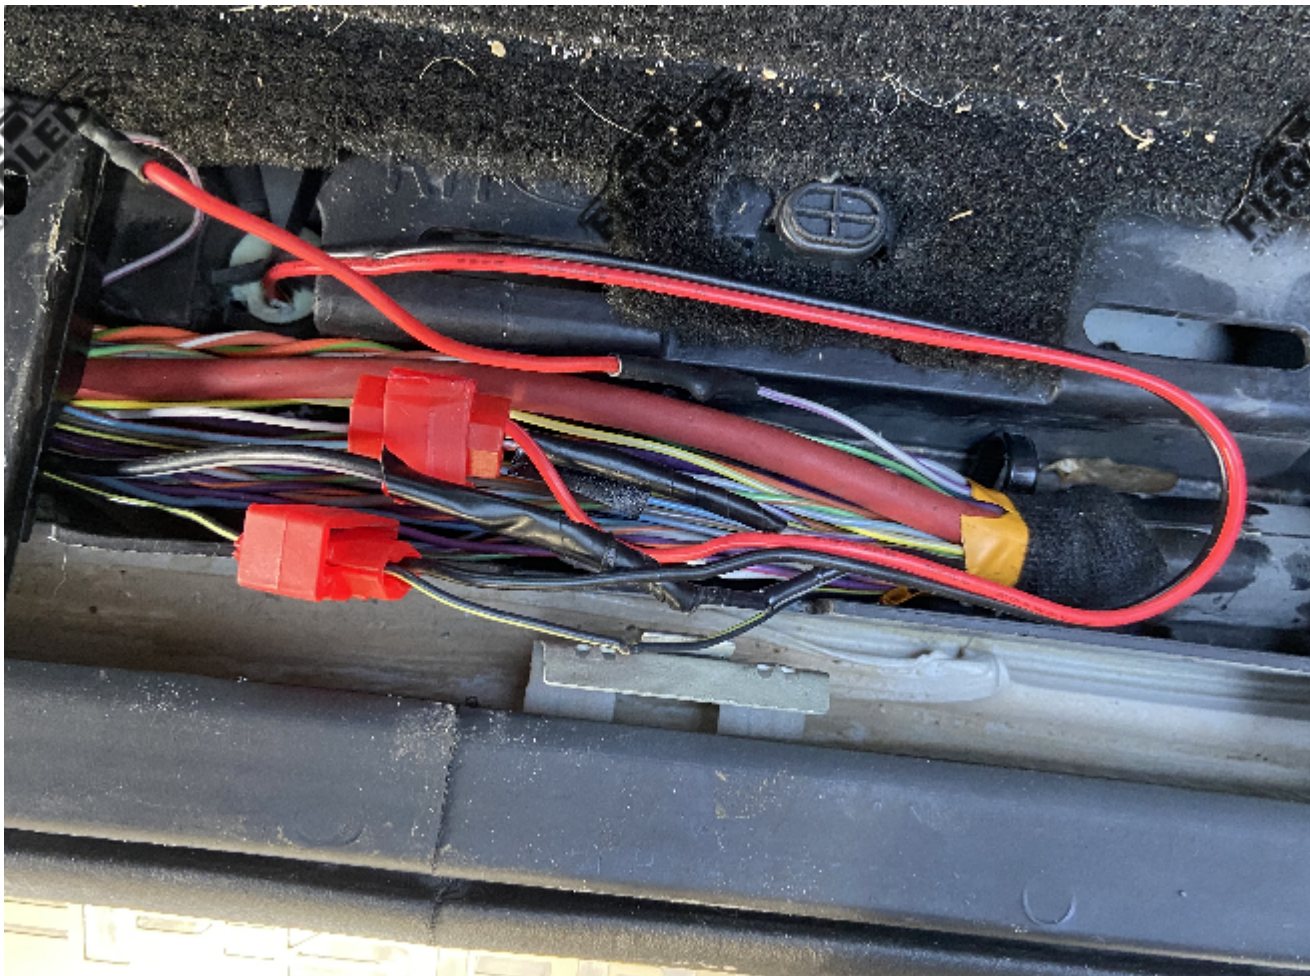

## STEP 9

Use the included red clip to connect the red power wire from the door sill kit to a grey wire with a violet strip. (Our Super duty had 3 of these grey wires with a violet strip and only one will work correctly.)

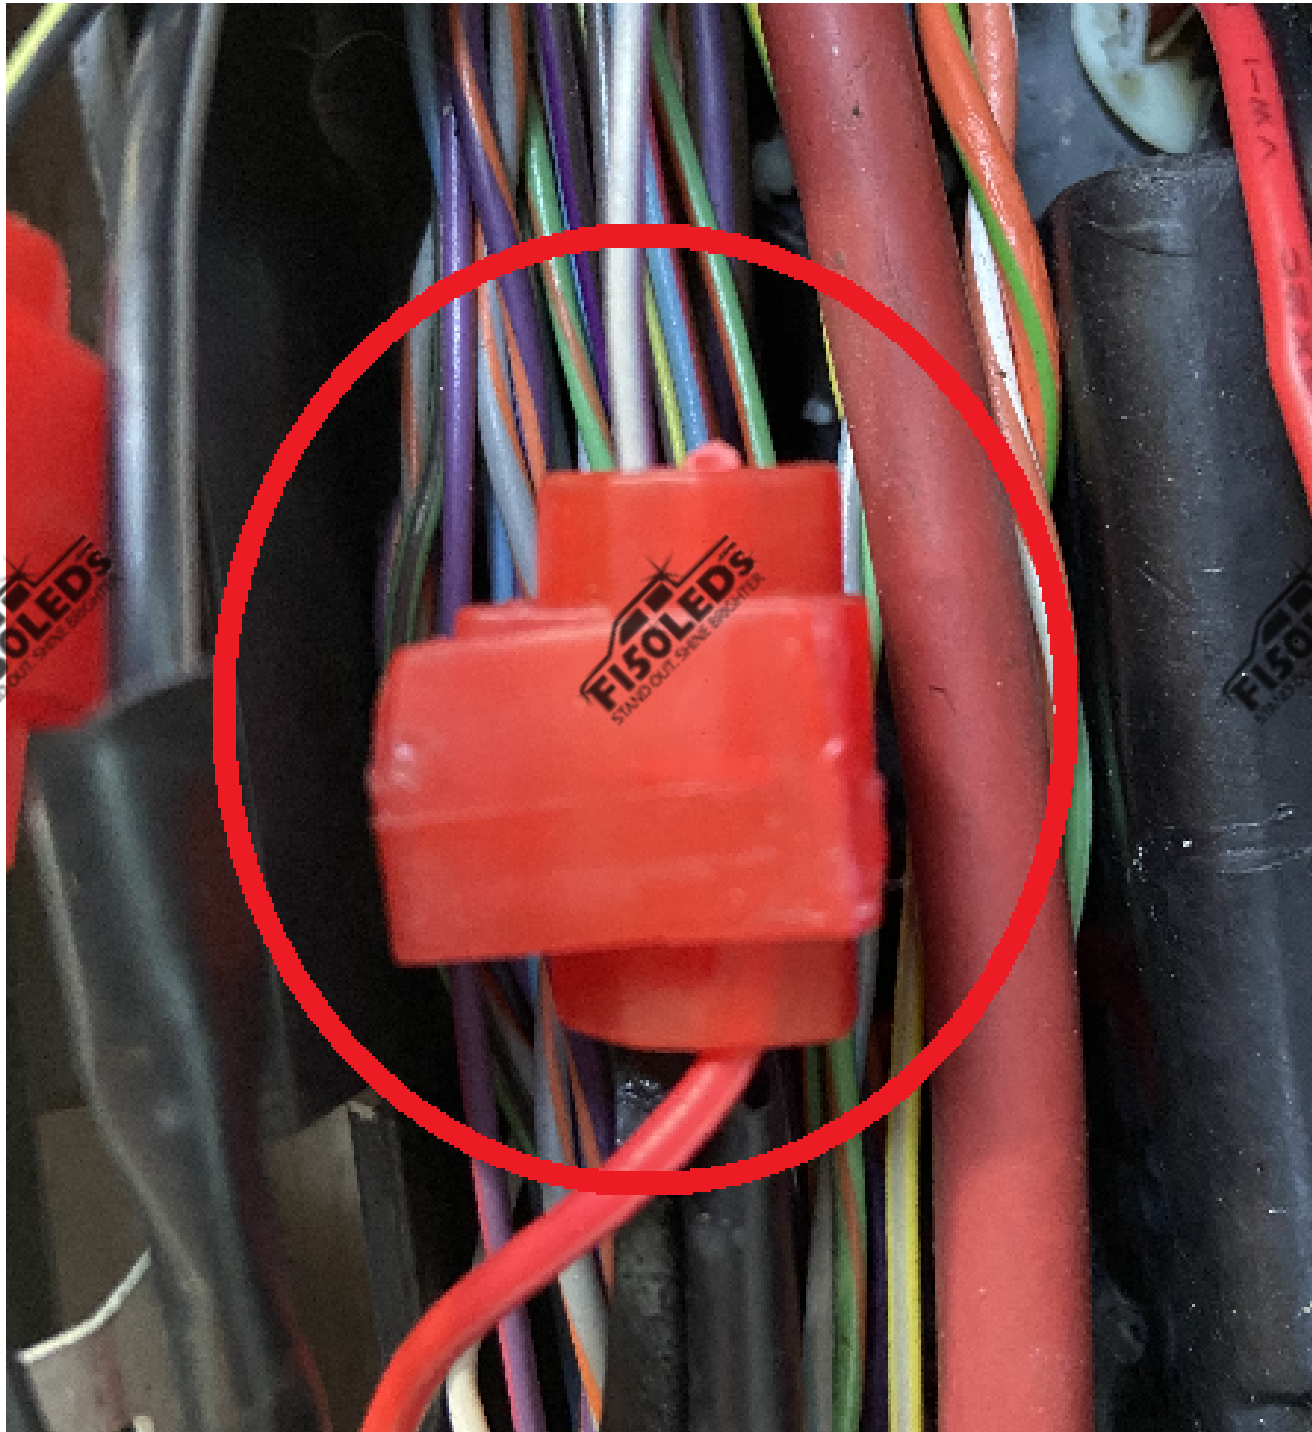



## STEP 10

Use the included red clip to connect the black ground wire from the door sill kit to a black and yellow wire. Then reinstall the plastic trim cover.

## STEP 11

Connect all of the round connectors from the door sills to the harness that is now connected to the trucks harness.







*\*If your kit does not immediately light up, shut all of the doors then reopen them and use the remote to make sure the kit is turned on. \**

We recommend leaving this receiver visible so that the color of the kit can be changed easily with the remote however if you plan on setting it to one color and leaving it you can hide this receiver.



Text for support: 706-214-2618  
Visit our site to chat: [www.F150LEDs.com](http://www.F150LEDs.com)  
or email [CustomerSupport@F150LEDs.com](mailto:CustomerSupport@F150LEDs.com)

