




2021 F150 AMBIENT KIT

STEP 1


Lay out your wiring in the back of your truck behind your passenger seat.

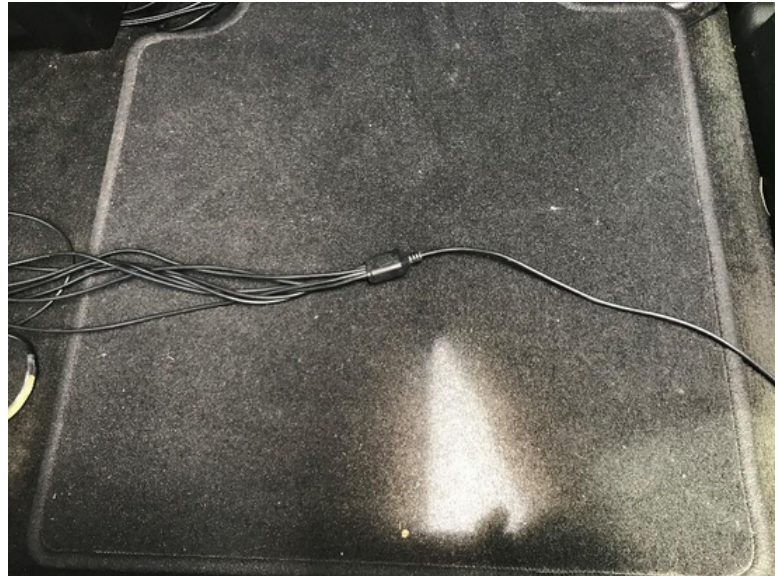

STEP 2

Identify each of your wires. Scroll down for full diagram.



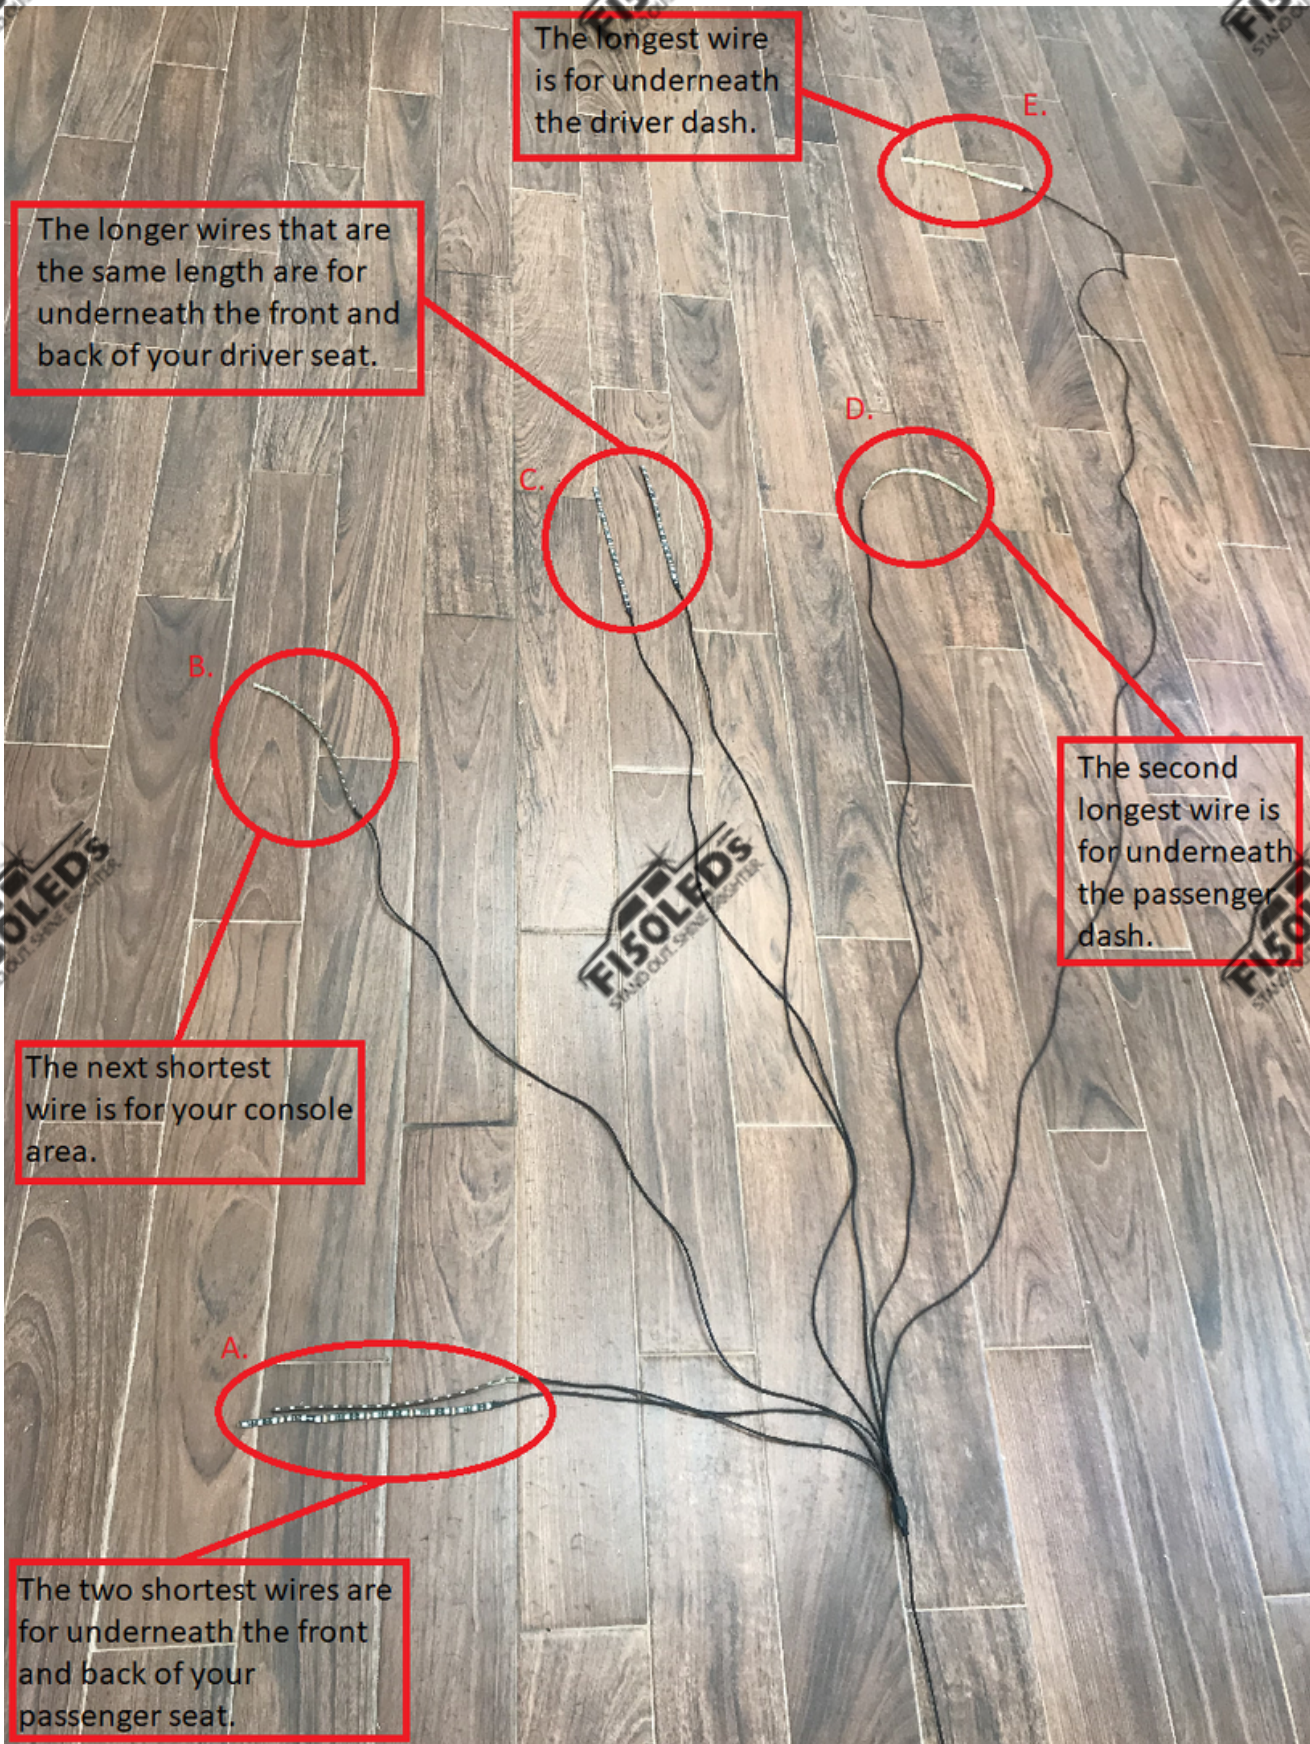

The longest wire is for underneath the driver dash.



The longer wires that are the same length are for underneath the front and back of your driver seat.



The second longest wire is for underneath the passenger dash.



The next shortest wire is for your console area.




The two shortest wires are for underneath the front and back of your passenger seat.





STEP 3

Run wire E across the back of your truck and past the outside of your driver seat.

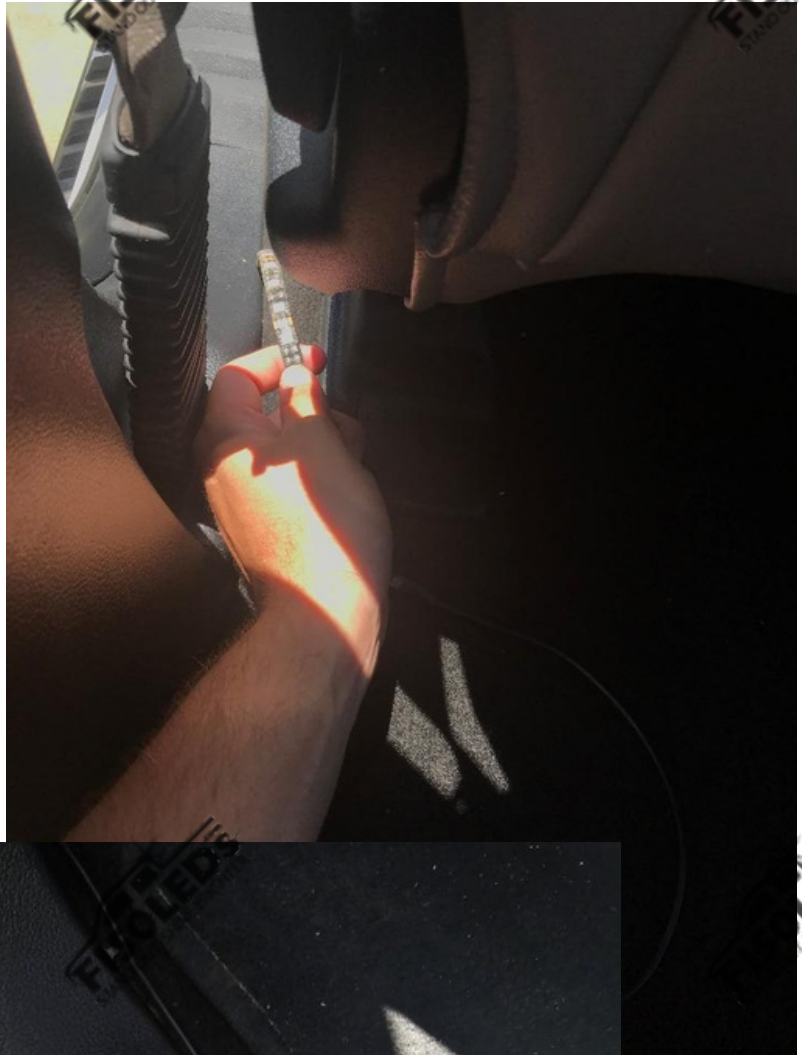

Tuck your wire under the plastic door sill area to hide the wire.






Once you have ran this wire under the steering wheel, mount your LED strip to the flat surface under the steering wheel.




STEP 4

Run wires C underneath the driver's seat. Run one of the C wires to the front of the driver seat and mount it to the metal bar seen below. *Use the included zip ties if needed. *

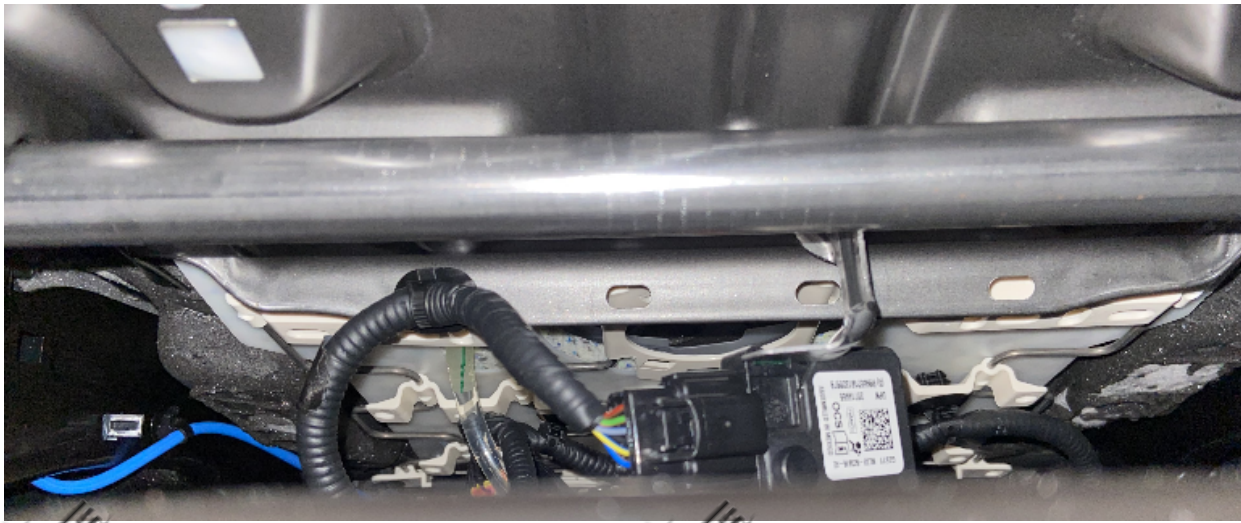





Run the other C wire to the back of the driver's seat and mount it under the elastic straps under the back of the seat.

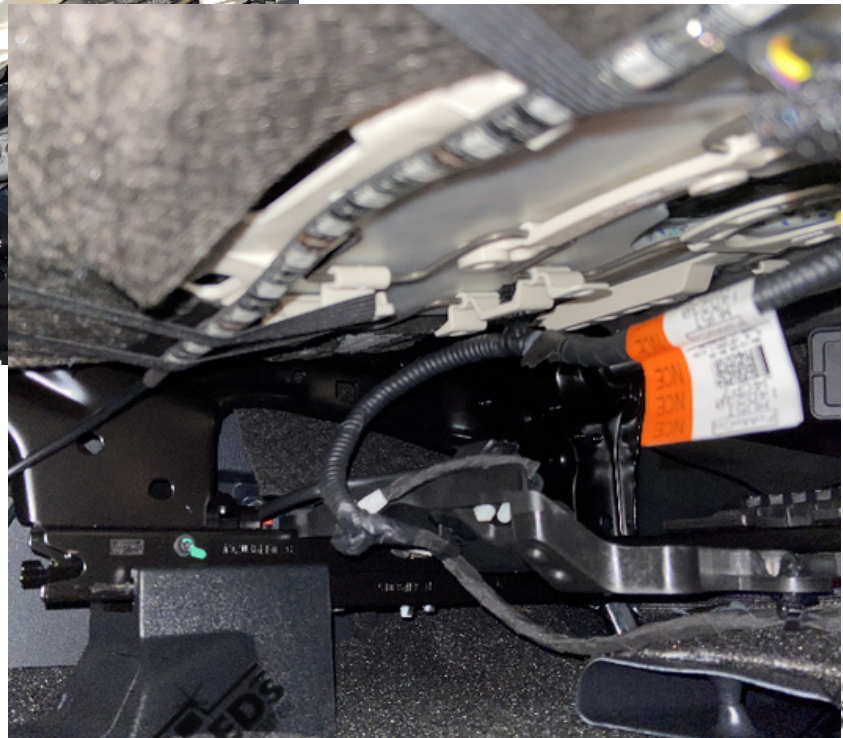




STEP 5

Run wire D on the outside of your passenger seat. As you are running the wire underneath the passenger dash tuck the wire under the plastic door sill area to hide the wire.

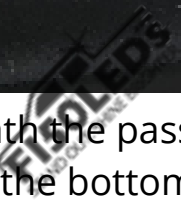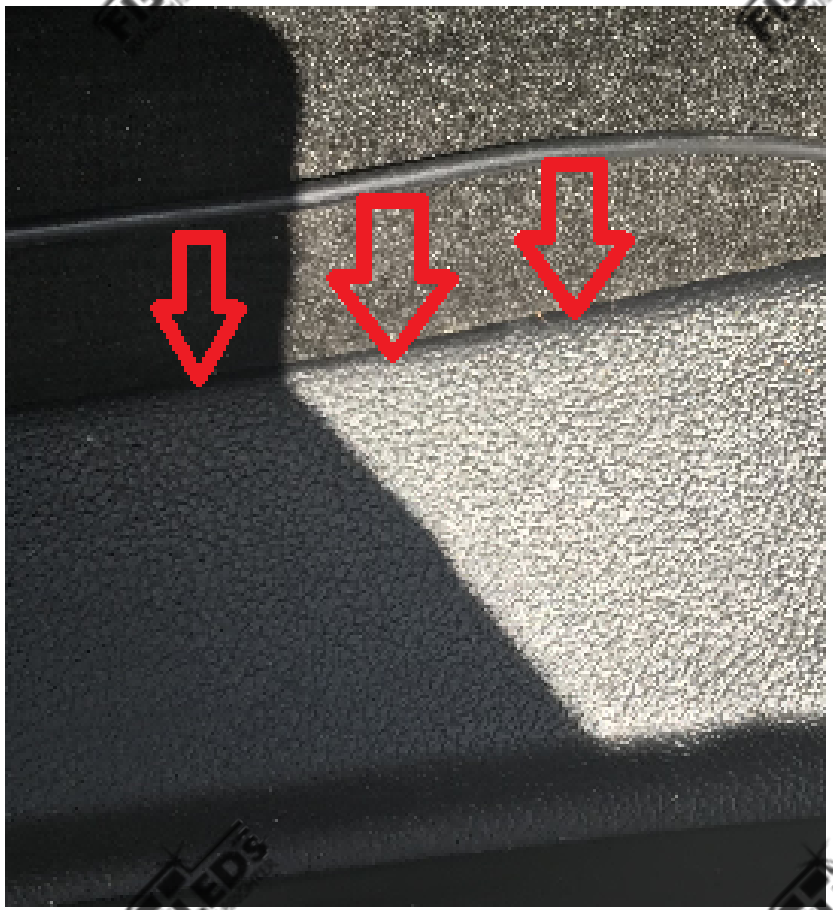

Once the wire is ran to underneath the passenger dash, mount the LED strip to the flat plastic surface at the bottom of the glove box. We recommend tucking the strip under the metal tabs in the photo below to help hold the strip in place.

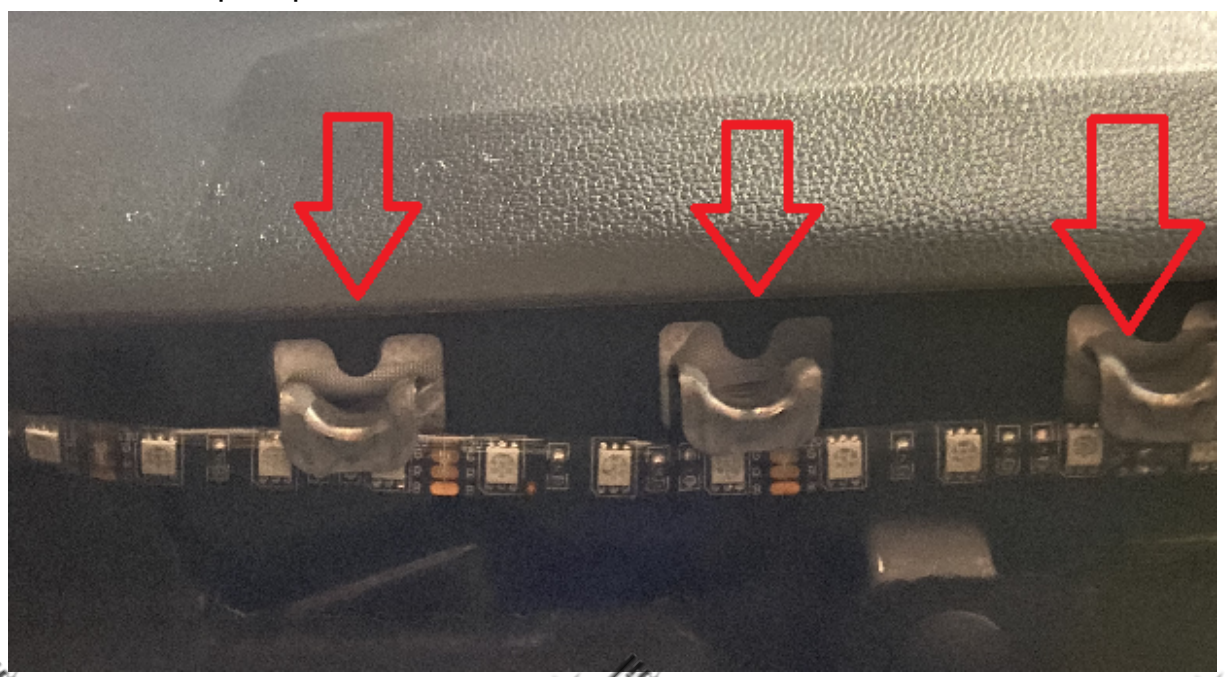


STEP 6

Run the A wires under the passenger seat.

Mount one of the A LED strips to the metal bar under the front of the passenger seat. *use the included zip ties if needed. *



Run the other A wire to the back of the passenger seat and mount it under the elastic straps under the back of the seat.

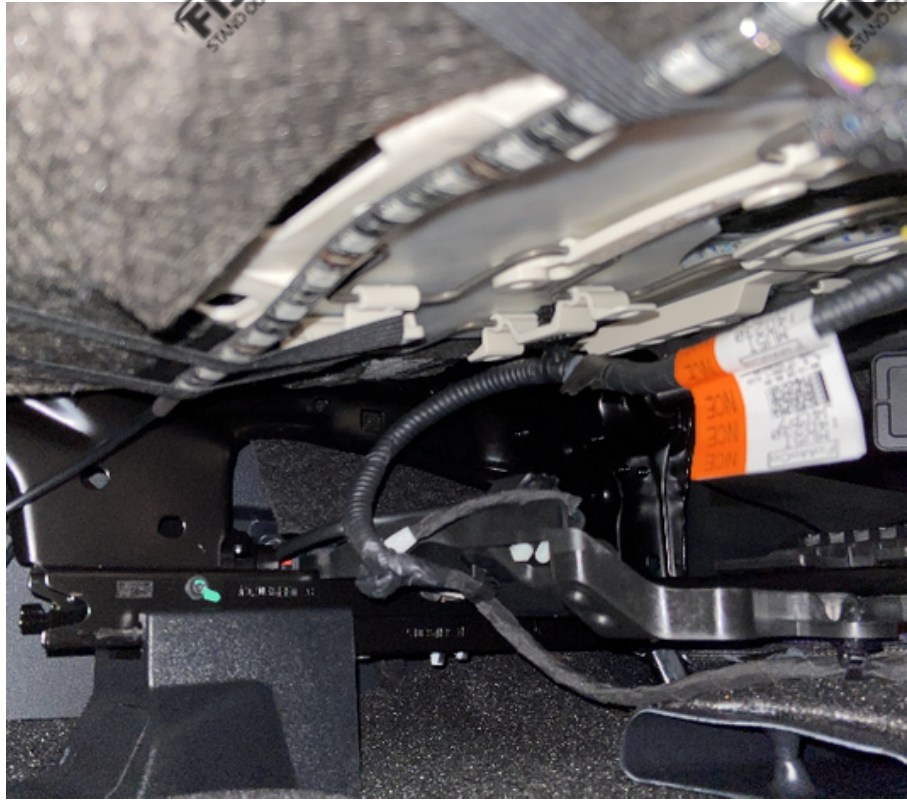


STEP 7

Run wire B between your center console and your passenger seat.

Use a pry tool to pull back on the trim piece of the console to allow the wire from the strip to pass through then mount the strip where you prefer inside the console.



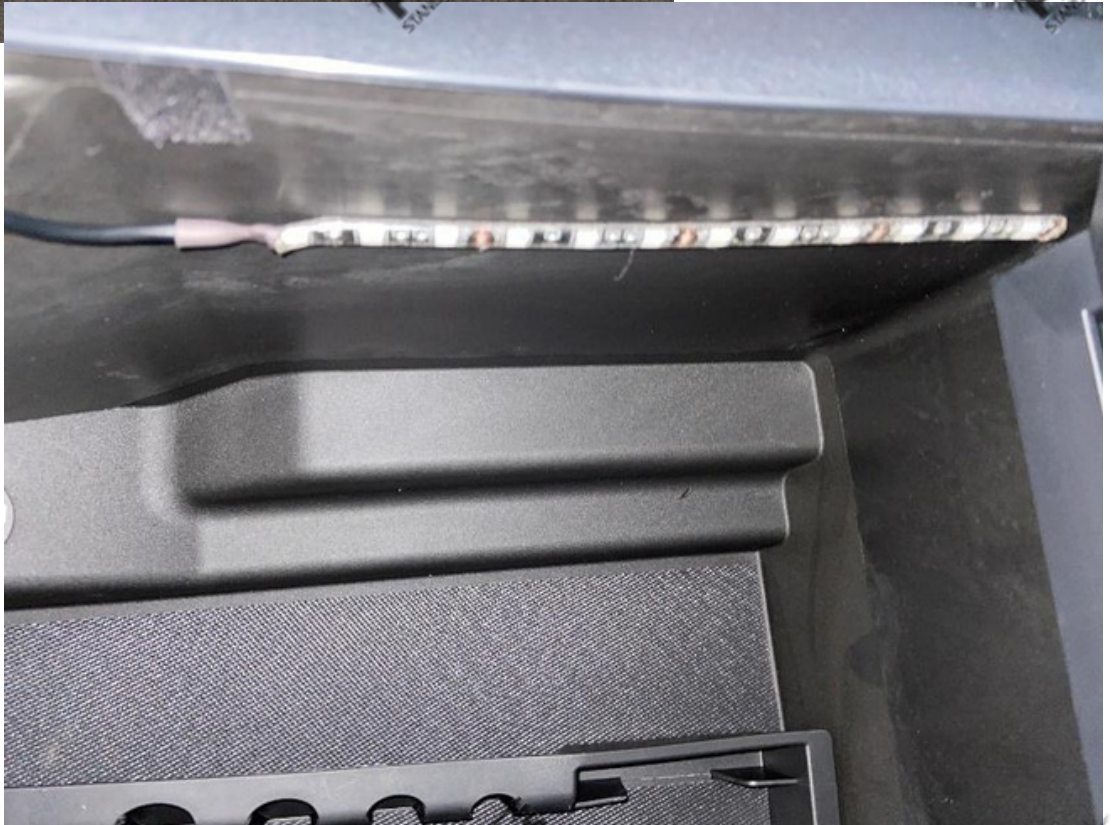

STEP 8


Ground your terminal ring to the bolt at the front of your passenger foot area.



STEP 9

Remove the plastic piece that is covering your fuse panel, remove the fuse that is inserted in fuse location 2 and insert it into the bottom of the fuse tap that comes with the kit.

Then insert your fuse tap into fuse location 2. You may need to wiggle the fuse tap under the green fuse above the fuse tap.

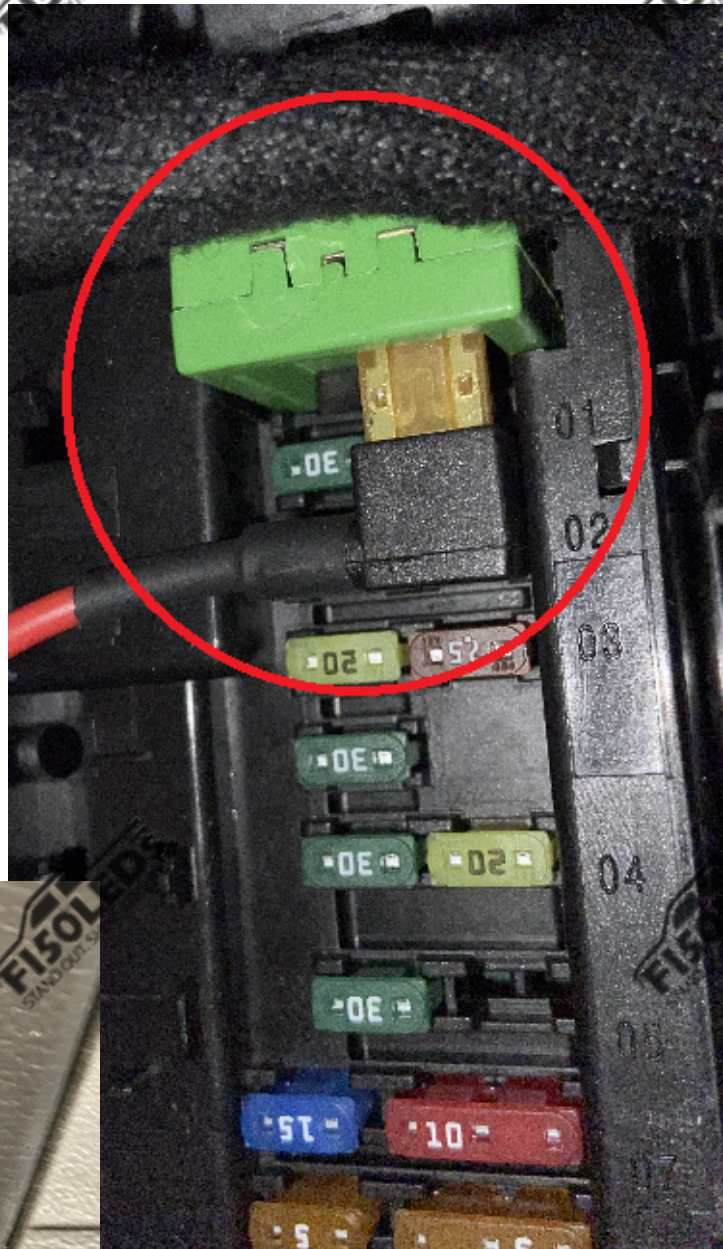

Then run the male end of the wire out from the fuse area and under the glove box so it can be connected to the receiver.



STEP 10

Mount your receiver so that the small piece circled below is visible to your remote.



Text for support: 706-214-2618
Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com

