



# 2021+ FORD F150 RGB DOOR SILL KIT

## STEP 1

Starting at the passenger side front door use the included prep wipes to clean off the mounting surface for the longer door sill plate with the longer wire connected to it.





## STEP 2

Line up the door sill plate with the plastic trim cover then remove the 3M from the back of the door sill plate and mount it to the truck. (Press and hold each plate for 30-60 seconds)



## STEP 3

Remove the plastic trim cover then pull up on the rubber seal and pass the wire from the door sill plate under the seal into the truck.





## STEP 4

Place the rubber seal back into place then run the wire from the door dill plate towards the rear of the truck then reinstall the plastic trim cover, we recommend hiding the wire by tucking it under the plastic trim.



## STEP 5


Take the smaller door sill plate with the longer wire attached to it and repeat steps 1-4 at the rear passenger side door.



## STEP 6

Take the two longer wires and tuck them under the plastic trim then run them across the back of the truck to the driver's side.



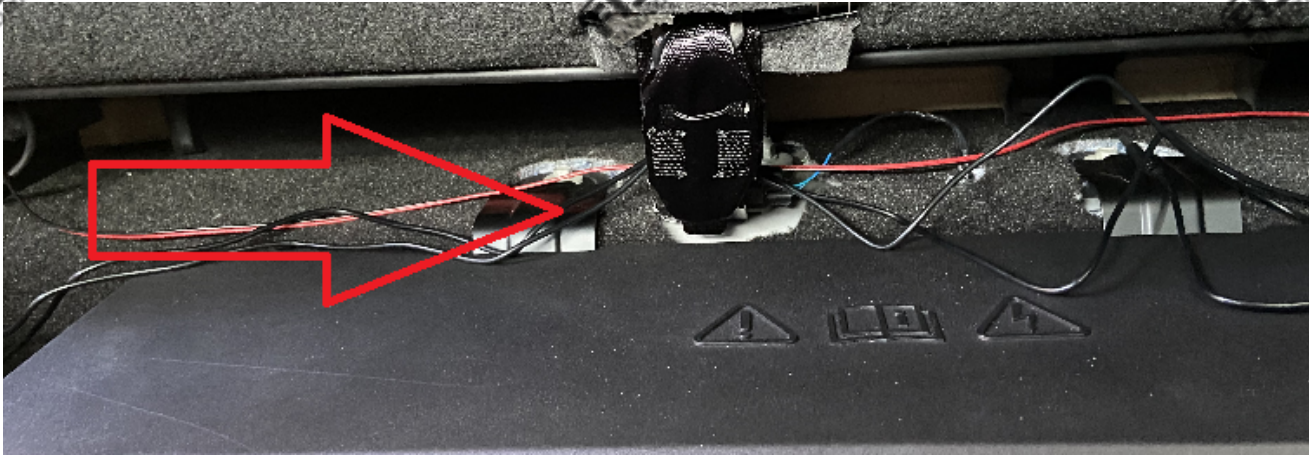

## STEP 7


Repeat steps 1-4 on the front driver door using the long door sill plate with the shorter wire and run the wire to the rear driver door sill then repeat steps 1-4 using the short door sill plate with shorter wire attached to it.

## STEP 8

Now that all four door sills are mounted remove the plastic trim cover from the rear driver side to gain access to the wires that will power the door sill kit. If there is tape covering these

wires using a box cutter to carefully cut this tape to expose the wires.



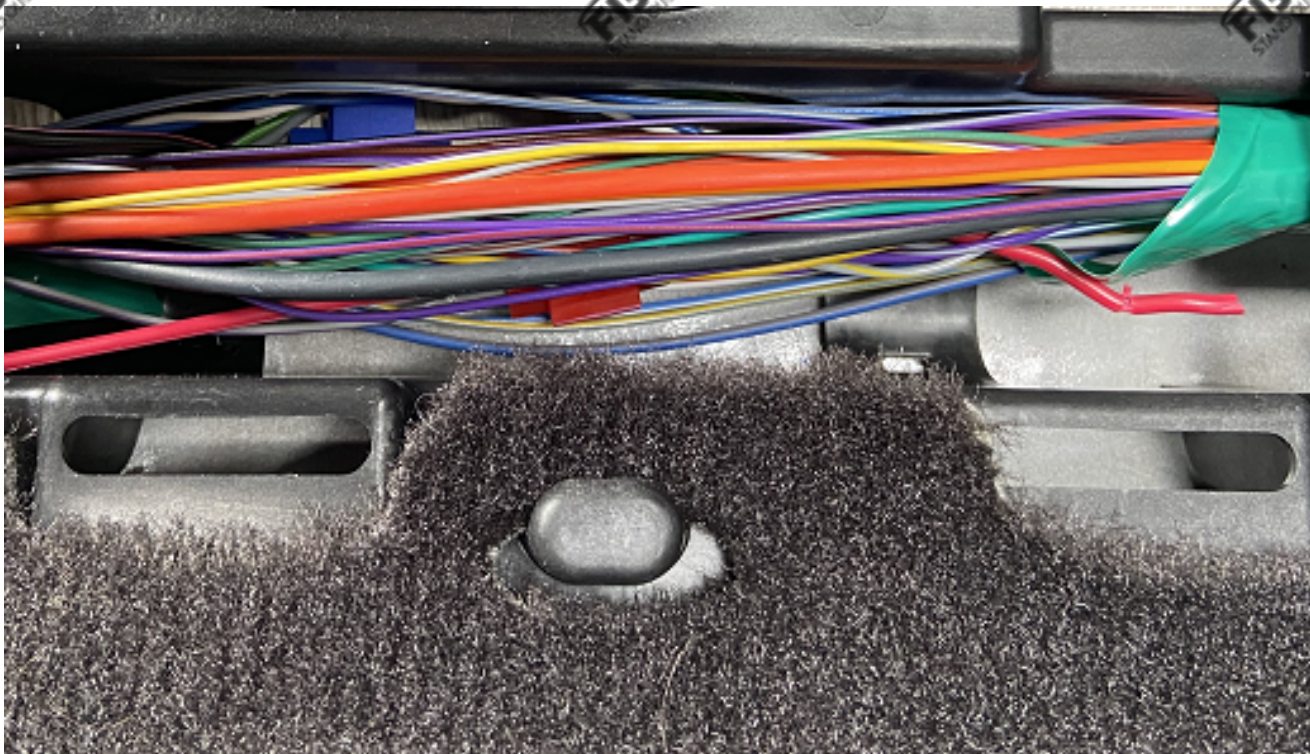

## STEP 9

Locate a grey wire with a violet strip (power) and a black wire with a purple strip (ground). If your truck has two black wires with a purple switch, use the thicker gauge wire.

## STEP 10

Use the quick splice connectors to connect the red power wire from the door sill harness to the grey wire with a violet strip, then connect the black ground wire from the door sill to the black wire with a purple strip. Then reinstall the plastic trim cover.

*\*Be careful not to use too much force when pressing down on the metal tab on the quick splice connectors as you do not want to sever a wire. \**

# STEP 11

Connect all of the round connectors from the door sills to the harness that is now connected to the trucks harness.







*\*If your kit does not immediately light up, shut all of the doors then reopen them and use the remote to make sure the kit is turned on. \**

We recommend leaving this receiver visible so that the color of the kit can be changed easily with the remote however if you plan on setting it to one color and leaving it you can hide this receiver.



Text for support: 706-214-2618  
Visit our site to chat: [www.F150LEDs.com](http://www.F150LEDs.com)  
or email [CustomerSupport@F150LEDs.com](mailto:CustomerSupport@F150LEDs.com)

