

2021 F150 FRONT MARKER INSTALLATION

To gain access to the Front Marker bulb, going through the wheel well liner is the easiest way.

STEP 1

Remove the three screws seen in the photos below to be able to push your wheel well liner out of the way. Using a size 7mm socket or a phillips head screw driver remove the screws in the photos below.




The first two screws are located right inside the wheel well, and the screw connecting the wheel well liner to the trim piece is at the top of the wheel well.

Once you have removed these screws, push the wheel well liner out of the way to gain access to the front marker bulb.

STEP 2


Remove your OEM Front Marker Bulb and replace it with the F150LEDs.com Front marker bulb.

To remove your bulb, reach behind your headlight assembly, locate your Front marker light, and give the marker light a counterclockwise turn to expose your front marker bulb.

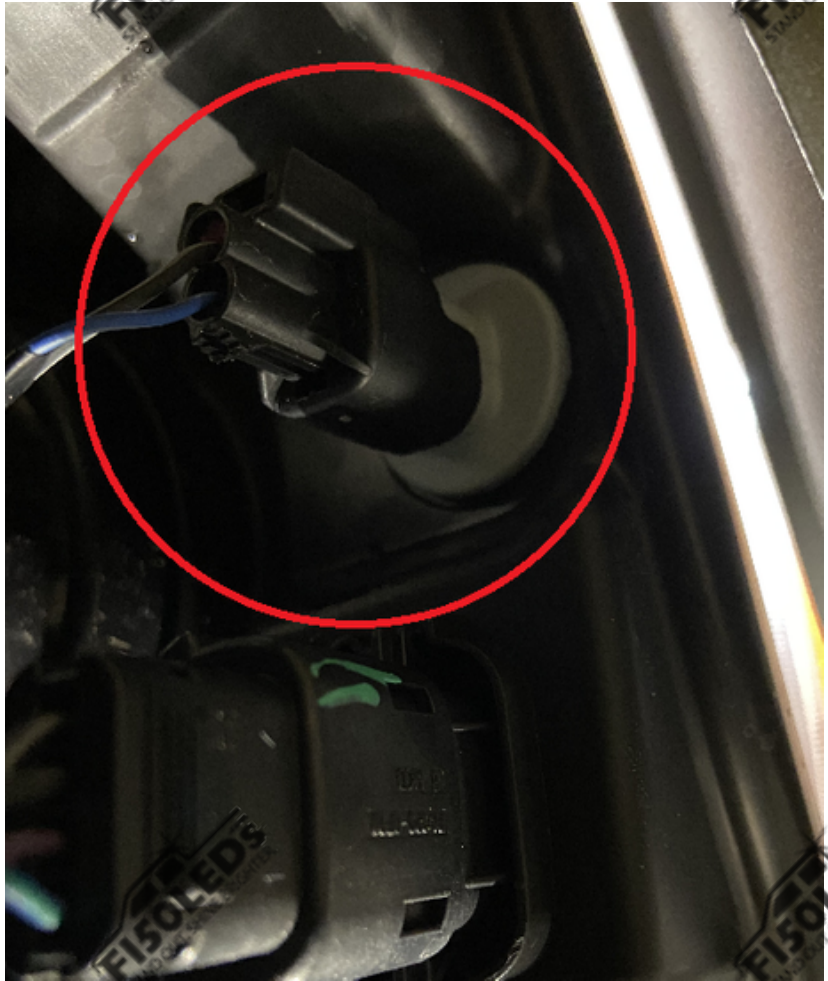



Be sure that this bulb is not hot before trying to remove it. Gently pull away from the base of the bulb to remove the OEM bulb. Use caution removing this glass bulb.

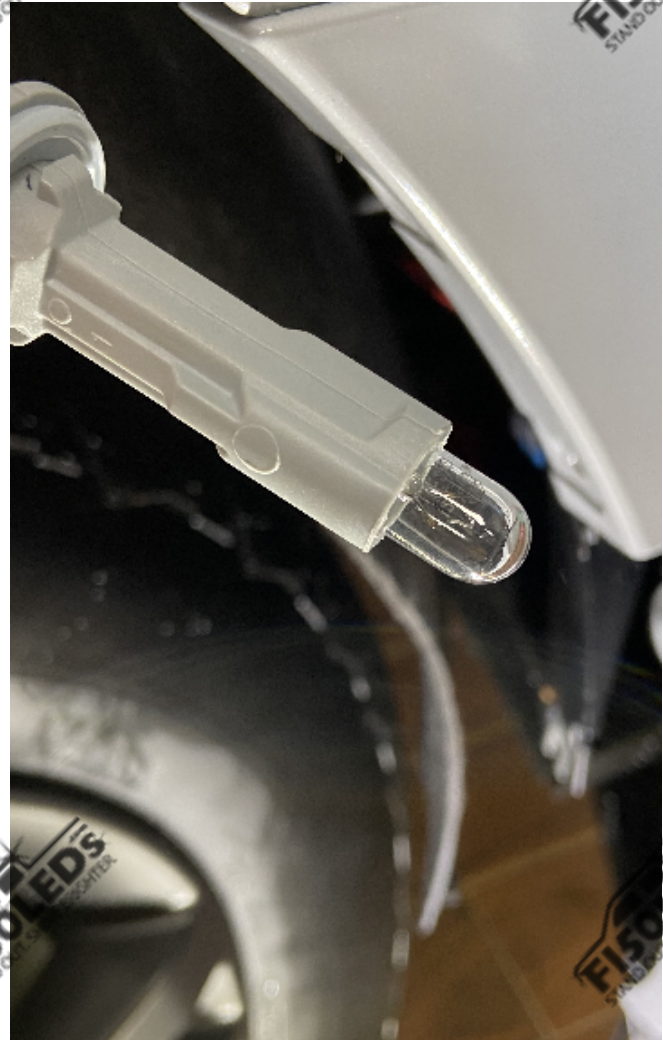

Install your F150LEDS.com Front Marker bulb.

Test this bulb and if it does not light remove it and rotate 180 degrees as these bulbs are polar sensitive!





STEP 3

Reinstall the front marker into the headlight housing and put the screws back in the wheel well liner!



Text for support: 706-214-2618

Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com

