



## STEP 1

Locate where you would like to mount your Raptor lights.

The location of the lights is completely up to your preference, for our truck we are going to be mounting them in the circled locations below.















Take the wires coming from the lights and run them through the grille and grab them from the other side and pull them into the engine bay.









Stick the auto grade 3M adhesive to each of the lights then mount them to your desired location by pressing them on your truck and applying firm pressure for 1-2 minutes. (Repeat for other lights)
















Connect the wires from the Raptor lights to the power harness in your kit. Be sure to fully press in these connections in until you hear a click.

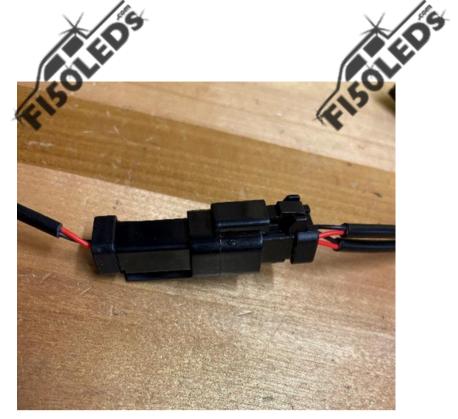










Use a box cutter or scissors to carefully cut back the protective covering that is covering the wires coming from the front marker assembly.

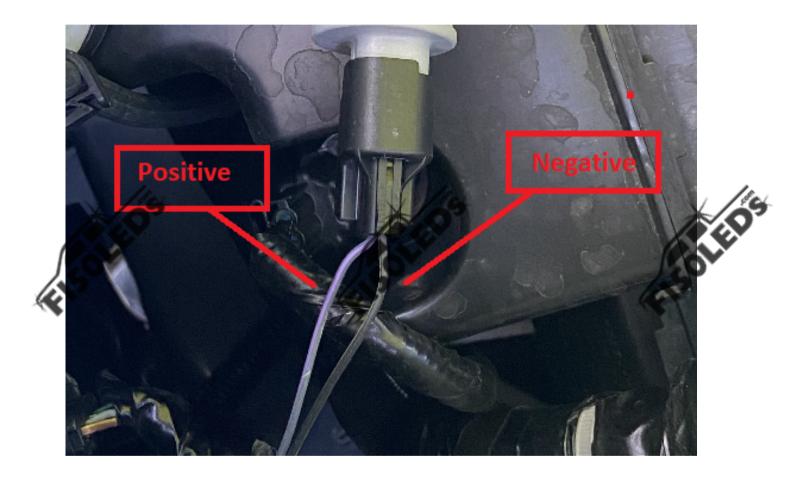













Take the red power wire from the Raptor wiring harness and use the quick splice connector from the kit to connect to the green wire with an orange tracer coming from the front marker. Then take the black ground wire from the Raptor wiring harness and use the other quick splice connector from the kit to connect to the black wire coming from the front marker.













Reinstall the front marker socket then use the included zip ties to clean up the wiring harness in the engine bay.









Text for support: 706-214-2618 Visit our site to chat: www.F150LEDs.com or email CustomerSupport@F150LEDs.com



