



2023 SUPER DUTY VENT LIGHT KIT INSTALL

STEP 1

Open the hood of the truck and reach down behind the vent and pull out the foam piece behind the vent.



FISOLEDs.com

FISOLEDs.com

FISOLEDs.com



FISOLEDs.com

FISOLEDs.com

FISOLEDs.com

FISOLEDs.com

FISOLEDs.com

FISOLEDs.com

STEP 2

Use moderate force with a pry tool to pry the vent off of the truck. You will need to push in on both sides of the alligator clips then pry the clip free. There are six alligator clips holding this vent on to the truck.

We recommend starting at the top and working your way down. **Be careful not to scratch the paint when removing the vents**





STEP 3

Run the LED strip to the vent area using the same opening that the foam was in.



STEP 4

Clean the mounting service using the included prep wipes. Then mount the strips to the mounting service highlighted in the photo.



****BE CAREFUL TO ONLY REMOVE THE RED COVERING, NOT THE ENTIRE GEL ADHESIVE****

STEP 5

Once the strip is installed reinstall the vent and foam piece. Then repeat steps 1-4 on the other side of the truck.

STEP 6

Run both wires from the vent light strip to the driver side headlight area.


STEP 5

Remove the Front Marker bulb by turning the socket counter clockwise.



STEP 8

Use a box cutter or scissors to carefully cut back the protective covering that is covering the wires coming from the front marker assembly.

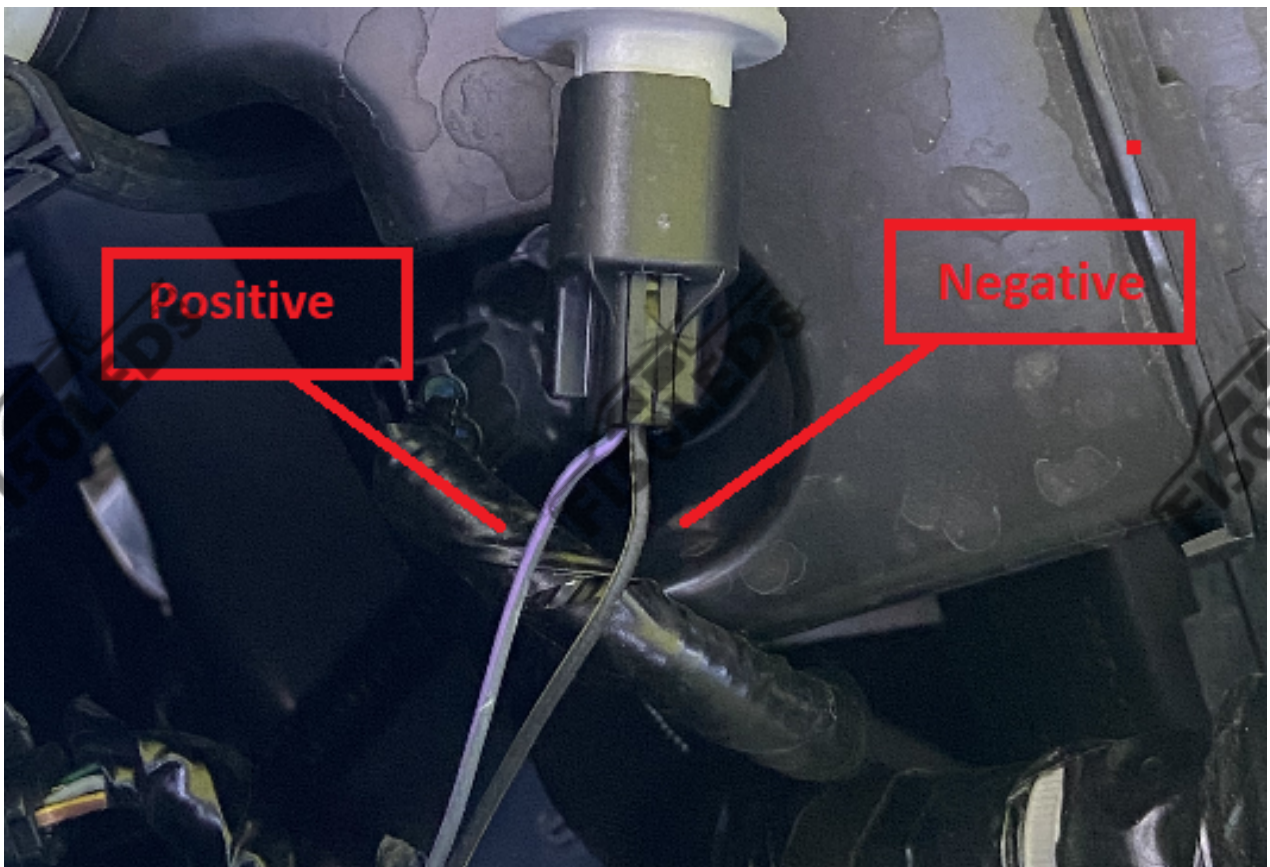

STEP 9

Take the red power wire from the Vent light kit and use the quick splice connector from the kit to connect to the green wire with an orange tracer coming from the front marker. Then take the black ground wire from the Raptor wiring harness and use the other quick splice connector from the kit to connect to the black wire coming from the front marker.



Text for support: 706-214-2618

Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com