

23 F250 HEADLIGHT INSTALLATION.

STEP 1

Remove the plastic dust cover.

There are 14 pop up tabs that need to be removed so you can remove the dust cover.



Use a pry tool or a small flat head screwdriver to pop up the tab. Once the tab is popped up you can remove this piece.





STEP 2

Remove your grille from your truck.

To remove your grille, there are 4 size 10MM bolts that need to be removed from the top of the grille.



Once these bolts are removed there are two more 10mm bolts located inside the grille, to access these bolts take a pry tool or a flat head screw driver to remove the plastic covering seen below.



FISOLEDs.com

FISOLEDs.com

FISOLEDs.com



FISOLEDs.com

FISOLEDs.com

FISOLEDs.com



FISOLEDs.com

FISOLEDs.com

FISOLEDs.com




Once these bolts are removed, pull the top of the grille away from the truck and look behind the grille to see four clips that need to be released. To release these clips grab where they are located from the front of the grille and pull away from the truck.



Once your grille is removed, we recommend laying your grille on a blanket or a surface that will not scratch your grille.


STEP 3

Remove two size 10MM bolts at the top of the headlight assembly.

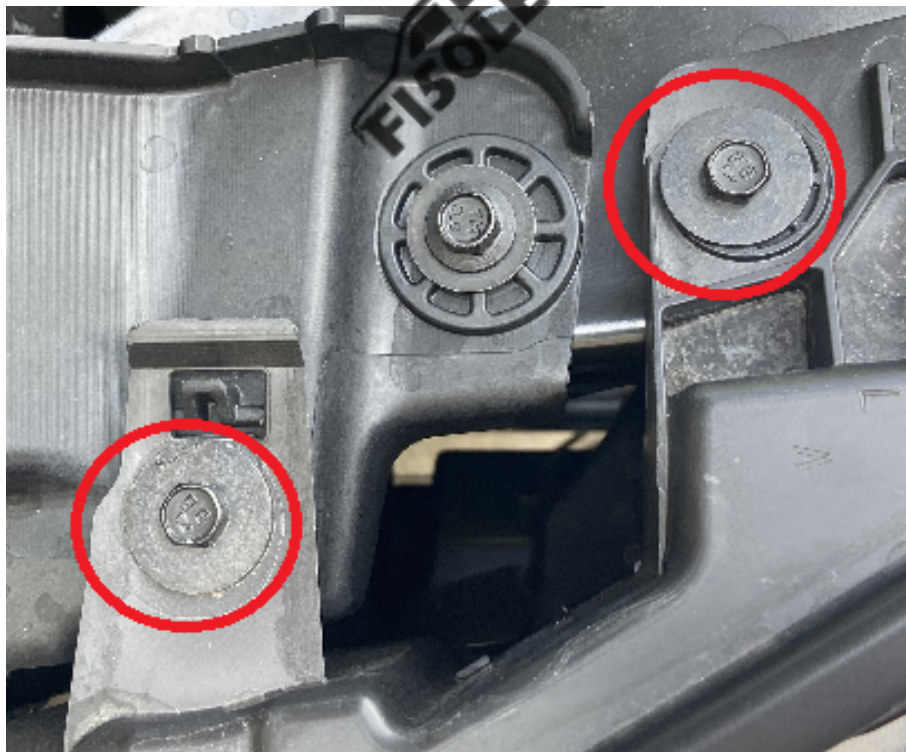



Remove one size 13mm bolt that is located behind the bumper.

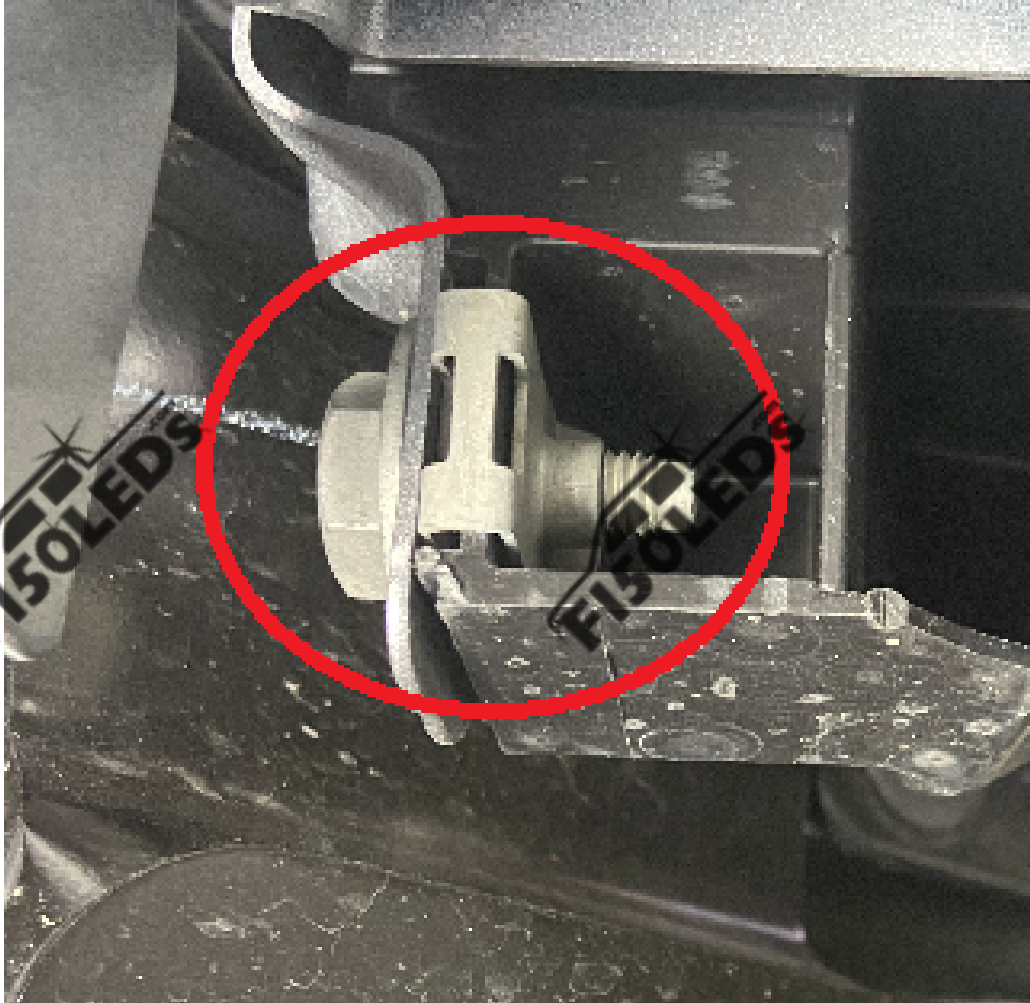


Once these bolts are removed pull the tab up on seen in the photo below then carefully pull the headlight assembly away from your truck. Unplug the factory connect and front marker and front turn signal then with some moderate force and some finesse, the assembly should come right out.





STEP 4

Remove the rubber grommet to expose the headlight bulb.

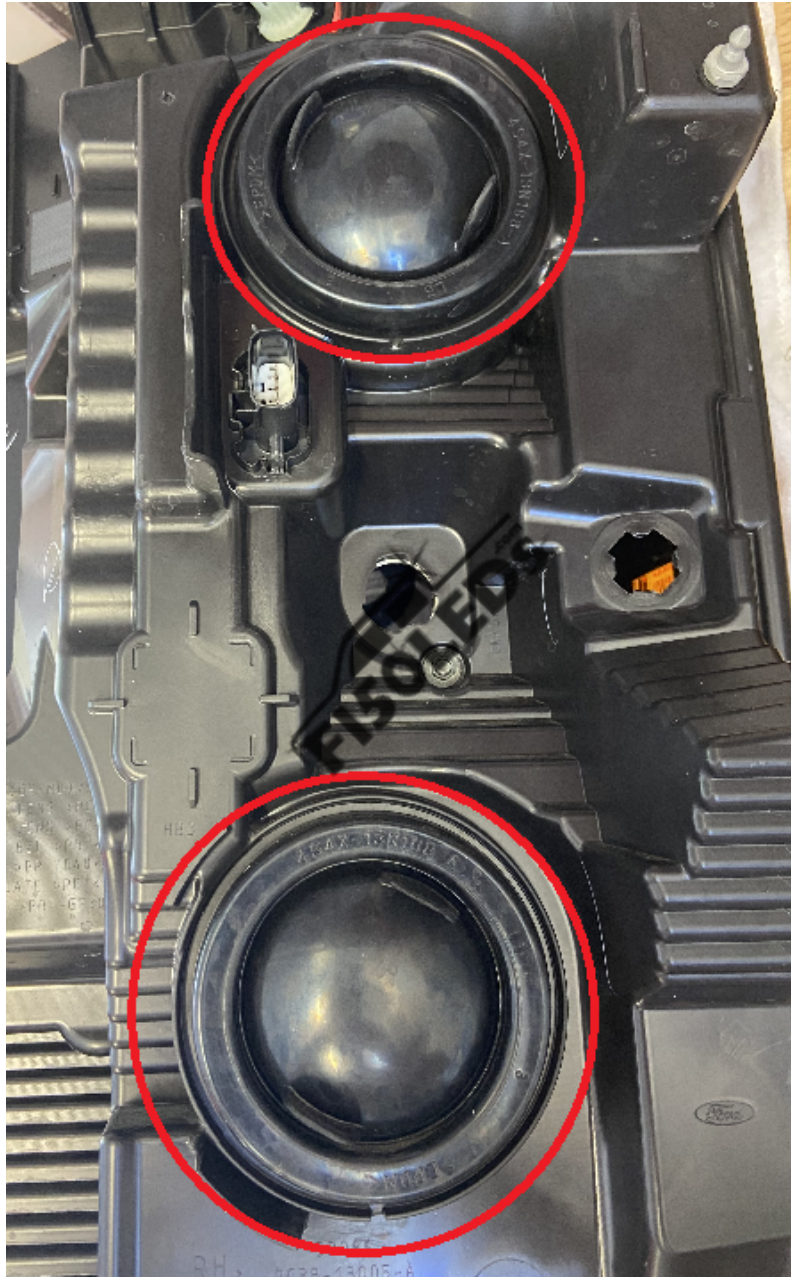





STEP 5



Use a counter clockwise turn to remove the high beam bulb (the lower bulb in the housing).




Once the bulb is out of the housing press down on the tab on the connector and release the bulb from the factory wiring. Then connect the ballast to the factory wiring then connect the ballast to the LED bulb.

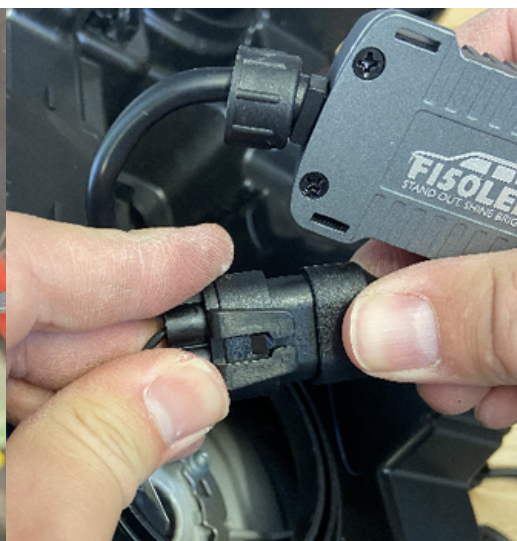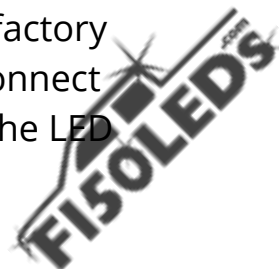

STEP 6

Take the connector and ballast and slide them into the housing then take the LED high beam bulb and insert it into the opening and lock it into place with a clockwise turn.

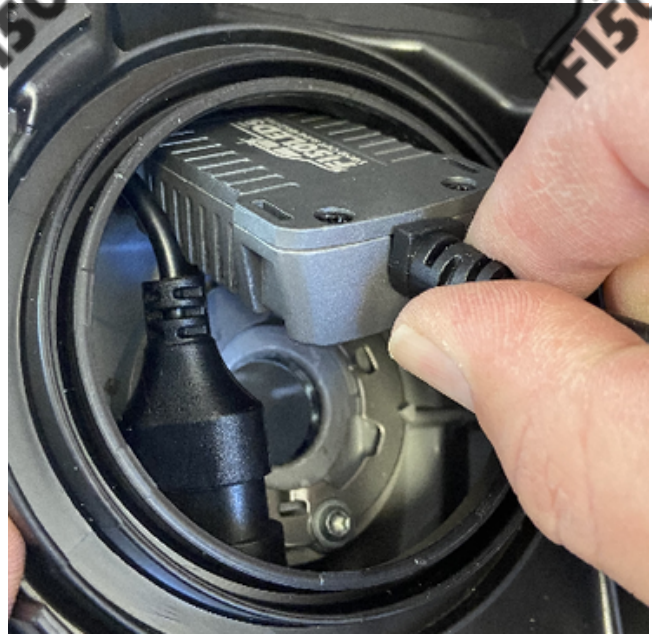



STEP 7

Take the included grommets and install them over the opening.



STEP 8

Repeat steps 4-7 for the Low beam bulb. Then repeat these steps for the other headlight housing.





STEP 9



Reinstall the headlight assemblies and the grille.



To see the complete installation watch our video at www.F150LEDs.com!



Text for support: 706-214-2618
Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com

