



MAVERICK AMBIENT KIT INSTALLATION

STEP 1

Lay out your wiring in the back of your truck behind your passenger seat.

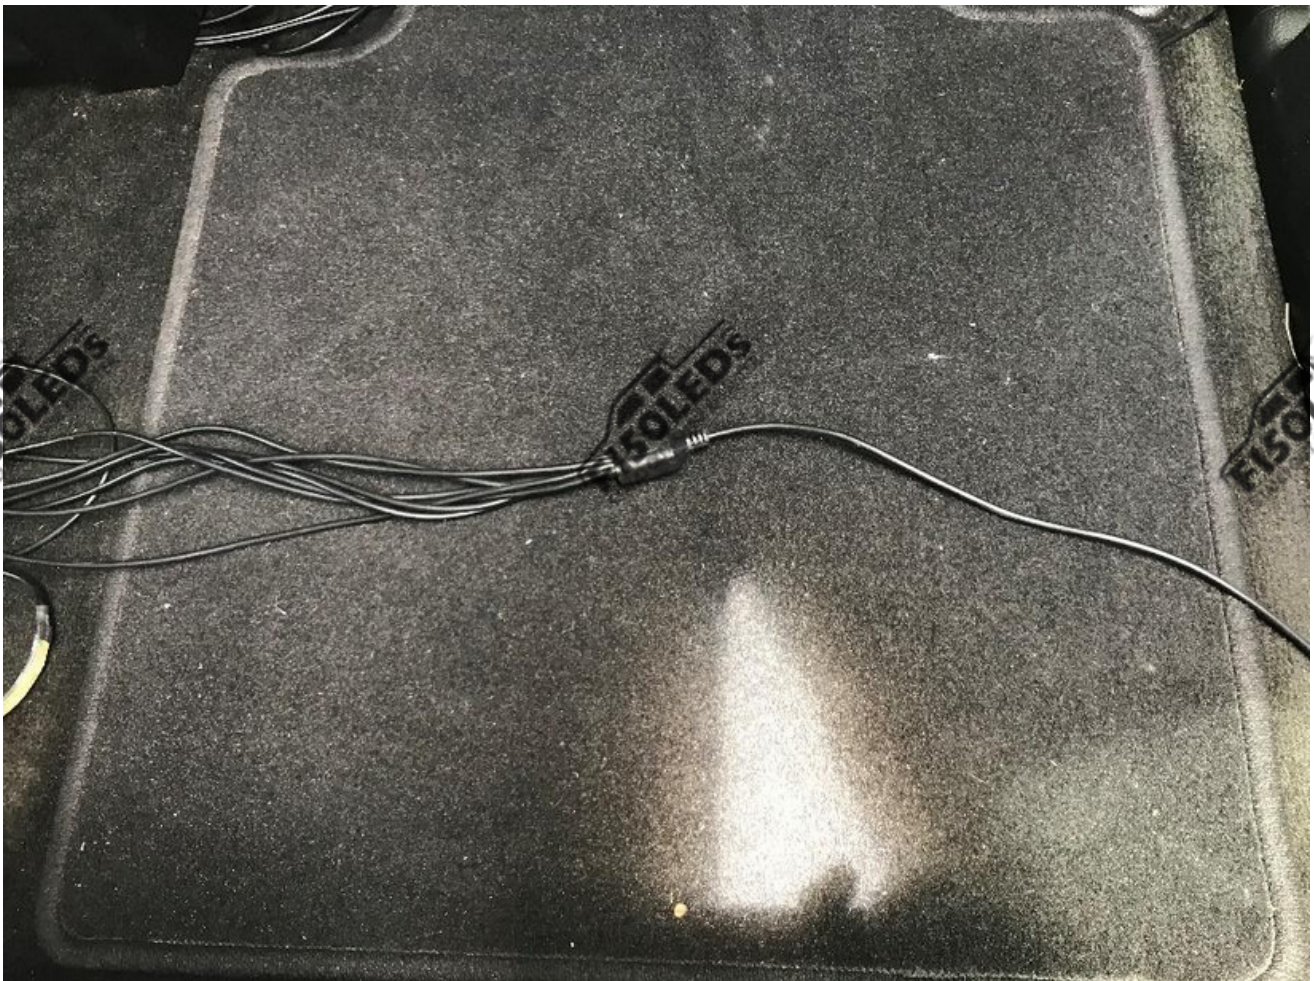

Separate your wiring and determined the correct zones.

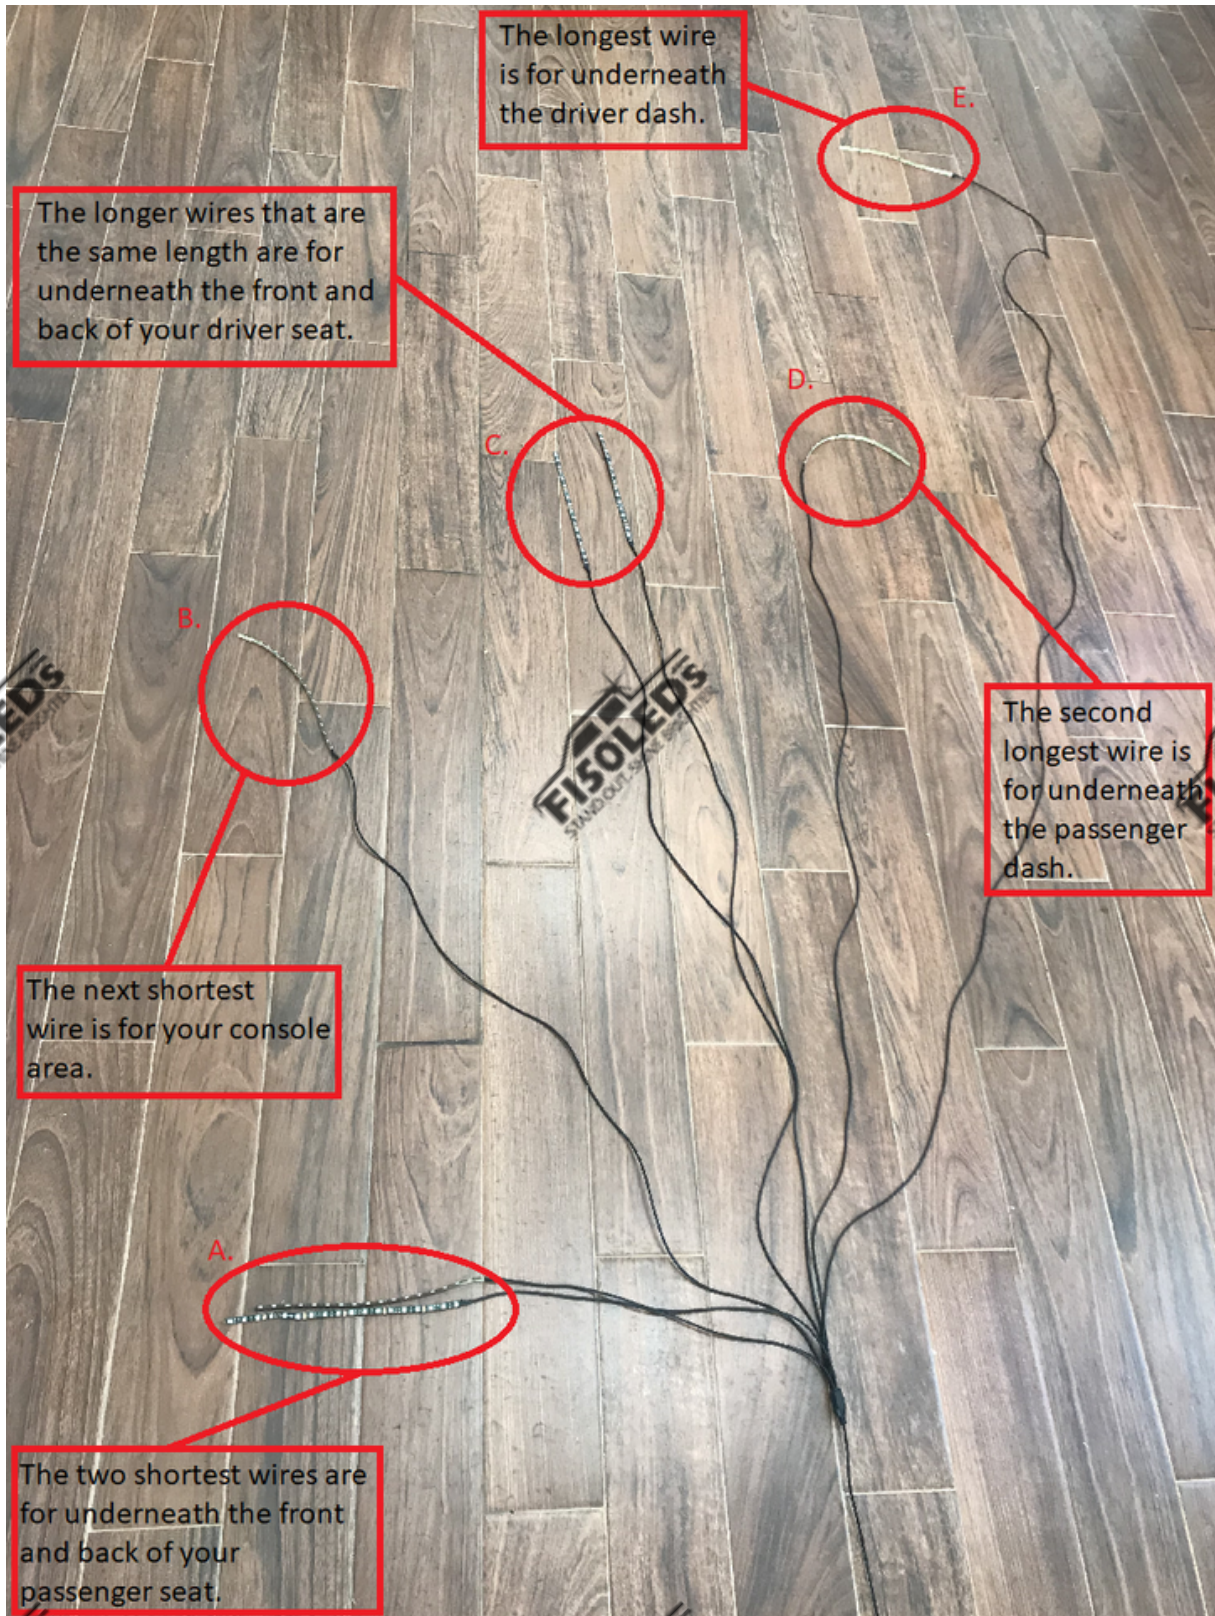


STEP 2

Run wire E between the driver seat and center console.


Once you have ran this wire under - Run both C wires under the driver seat

Tuck the wire behind the plastic trim piece of the center console.

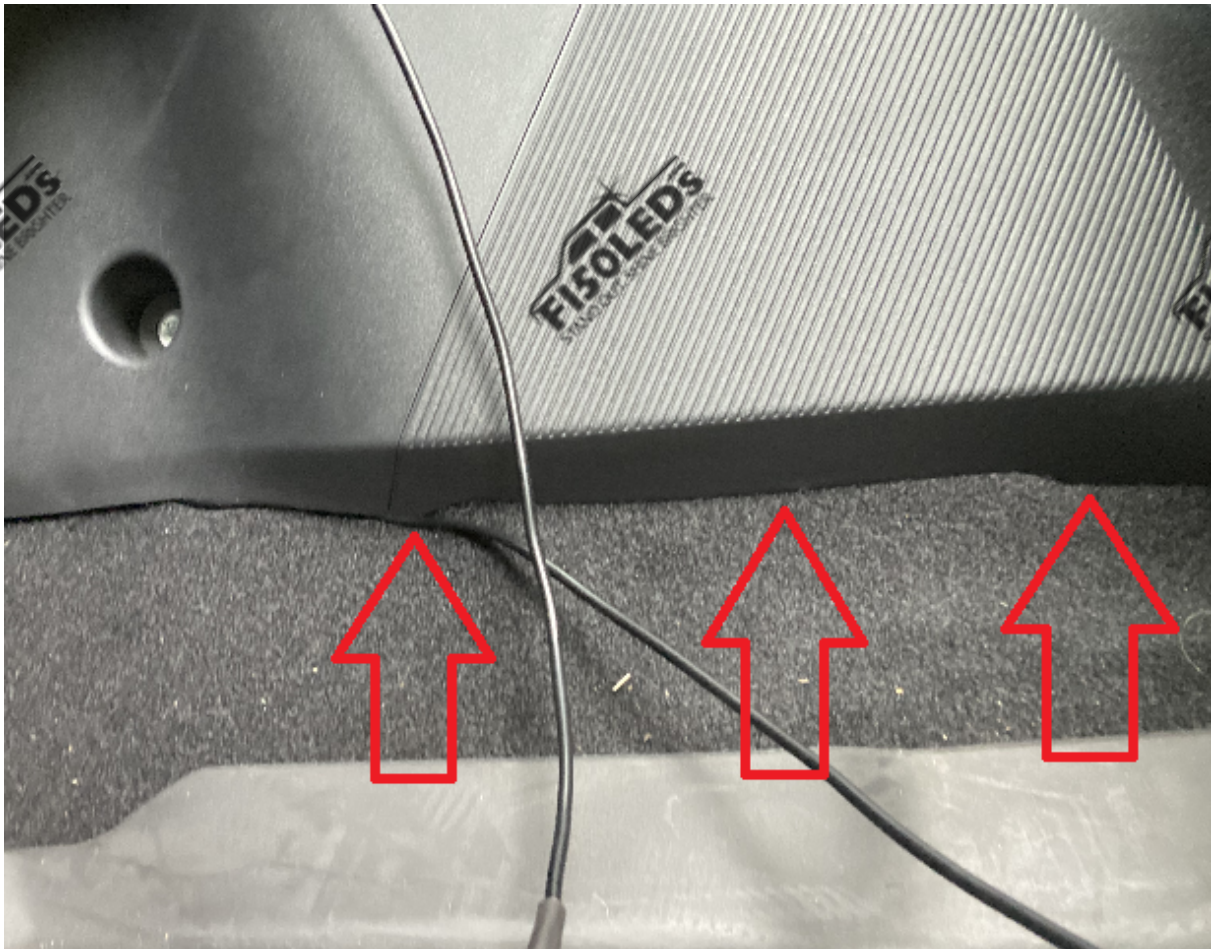




Once you have ran wire E under the steering wheel, mount the LED strip to the flat surface under the steering wheel.

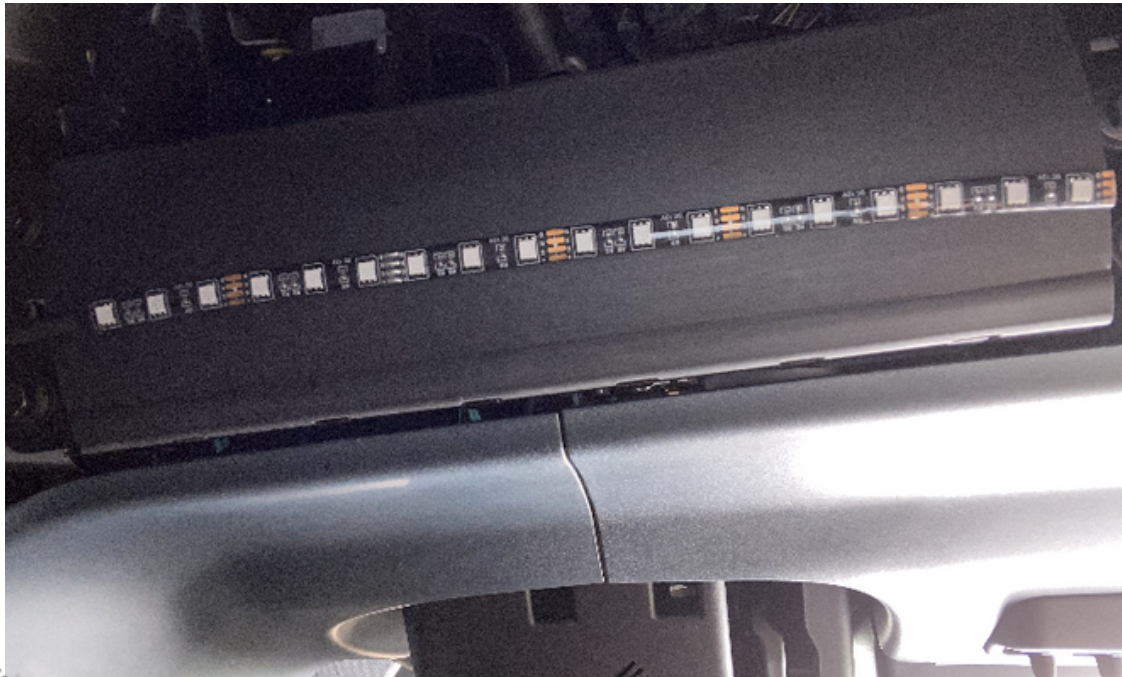

STEP 3


Run one of the C wires to the front of the driver seat and mount it to the metal bar seen below.

*Use the included zip ties if needed. *

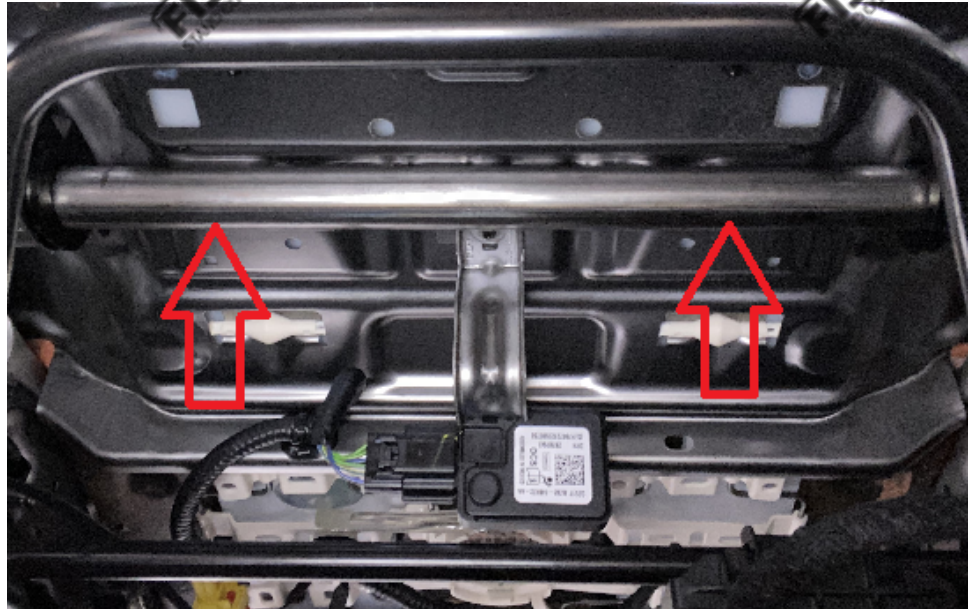




Run the other C wire to the back of the driver's seat and mount it under the elastic straps under the back of the seat.

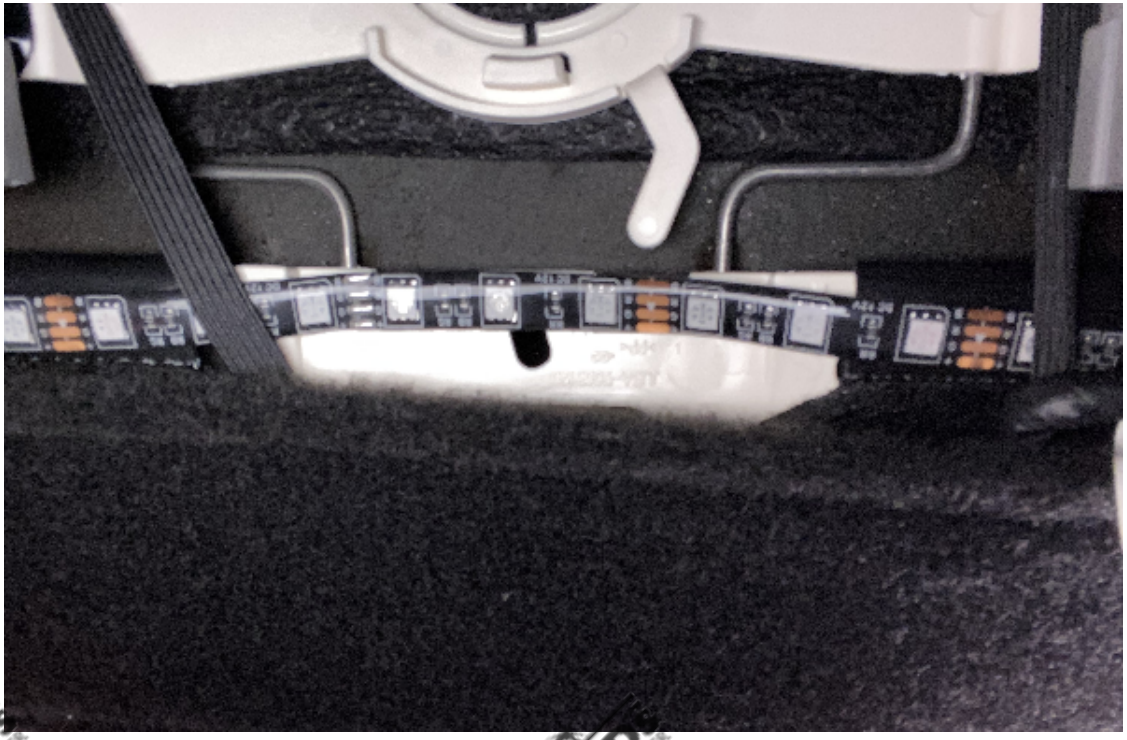

STEP 4


Run wire D in between the passenger seat and center console.

Tuck the wire behind the plastic trim piece of the center console.

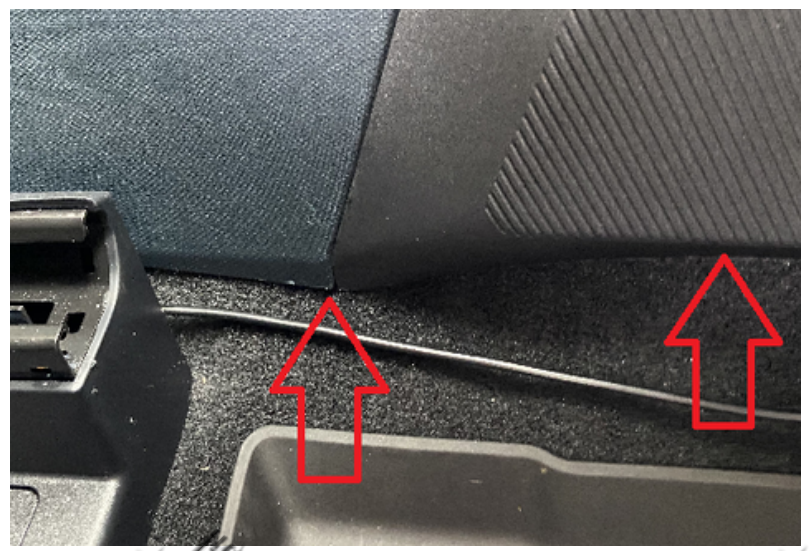



Once the wire is ran to underneath the passenger dash, mount the LED strip to the flat plastic surface at the bottom of the glove box.

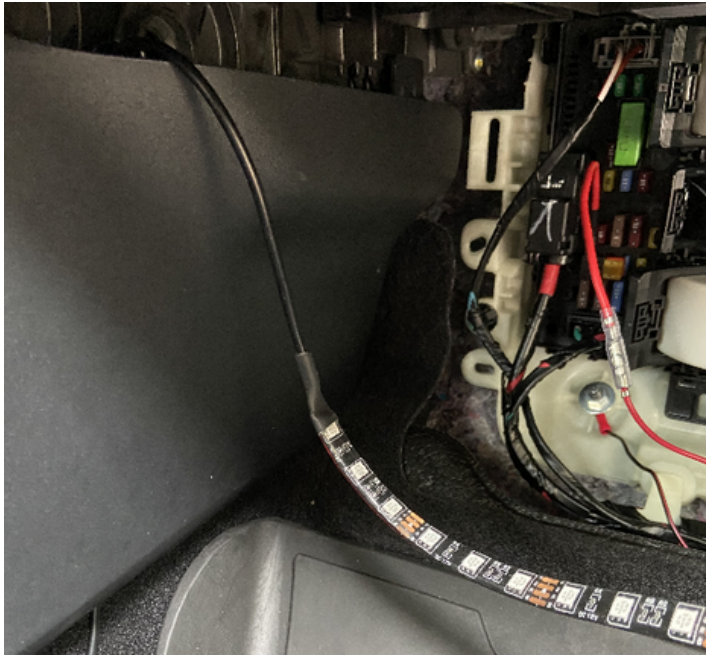


STEP 5

Run the A wires under the passenger seat. Mount one of the A LED strips to the metal bar under the front of the passenger seat.



*use the included zip ties if needed. *

Run the other A wire to the back of the passenger seat and mount it under the elastic straps under the back of the seat.

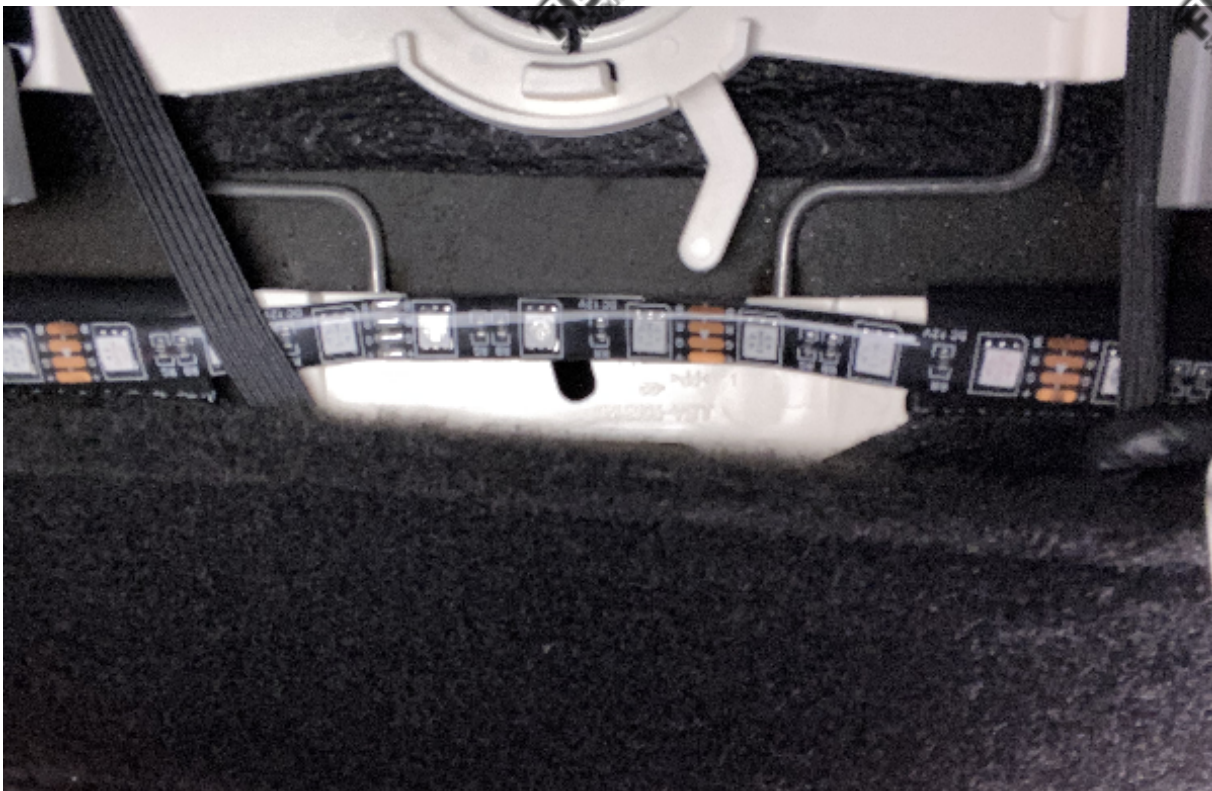


STEP 6

To run wire B into the center console, use a 10mm socket to remove the bolt on the side of the center console, this bolt is located on the passenger side of the center console near the bottom of the center console piece.




Then take a pry tool to pry the plastic trim piece open to run the wire behind the trim piece and the strip into the center console.

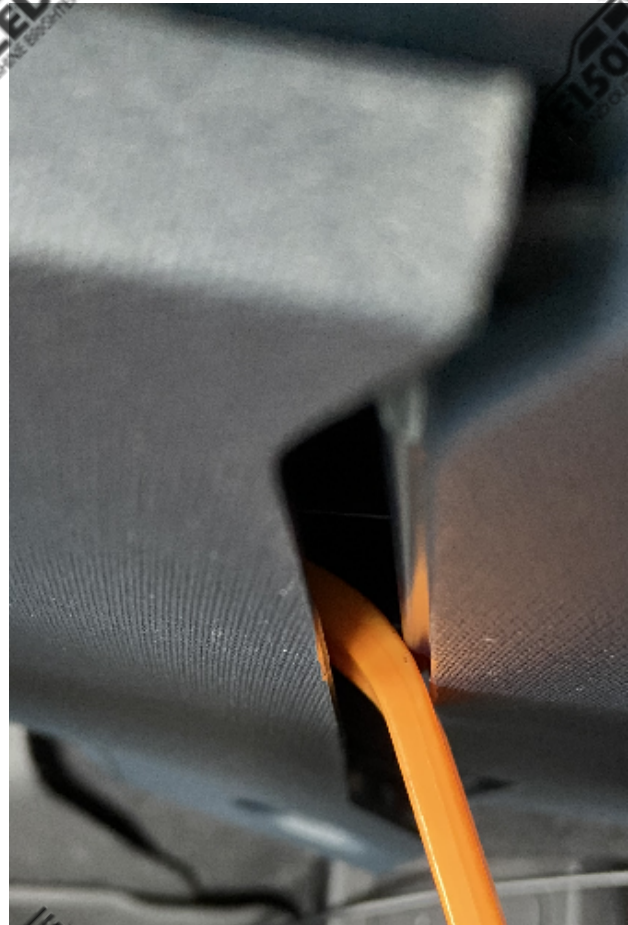




Once the wire is ran into the console pop the plastic trim piece bag into place then reinstall the 10mm bolt.

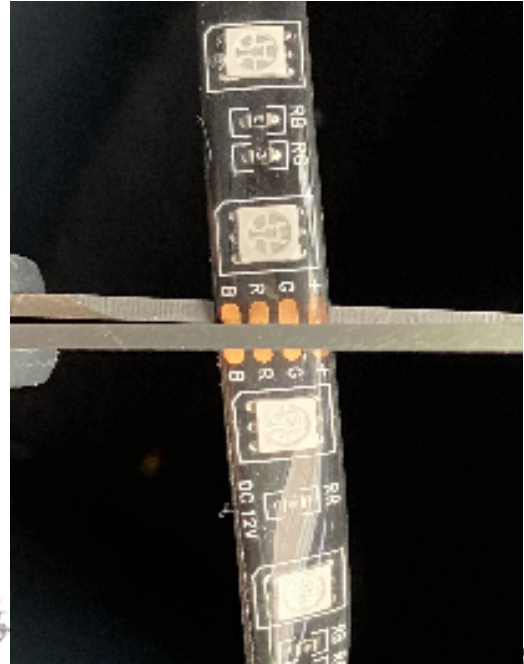

If the LED strip is too long, it can be trimmed with scissors along the copper color part of the strip, once it is trimmed to the correct length mount the strip where you would like in the console.


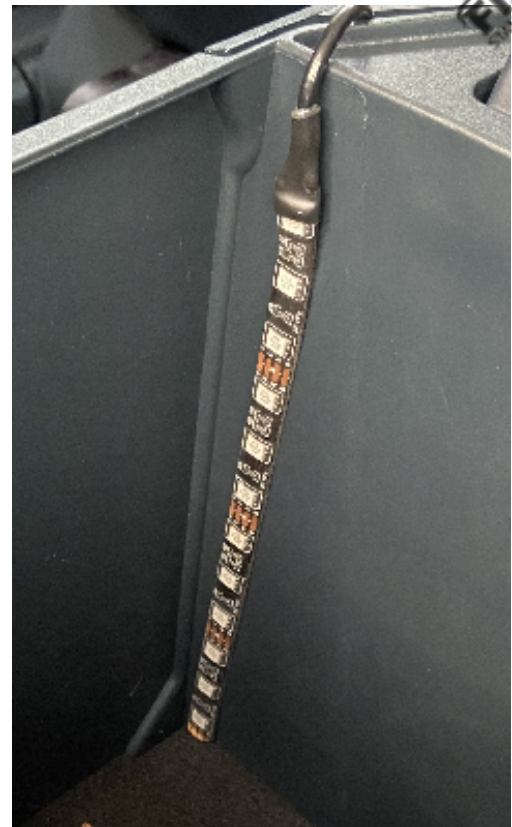




STEP 7



Now that all of your strips are mounted, run the single wire from your wiring bundle down the outside of your passenger seat.

As you are running this wire to your fuse panel tuck the wire under the plastic door sill area to hide the wire.

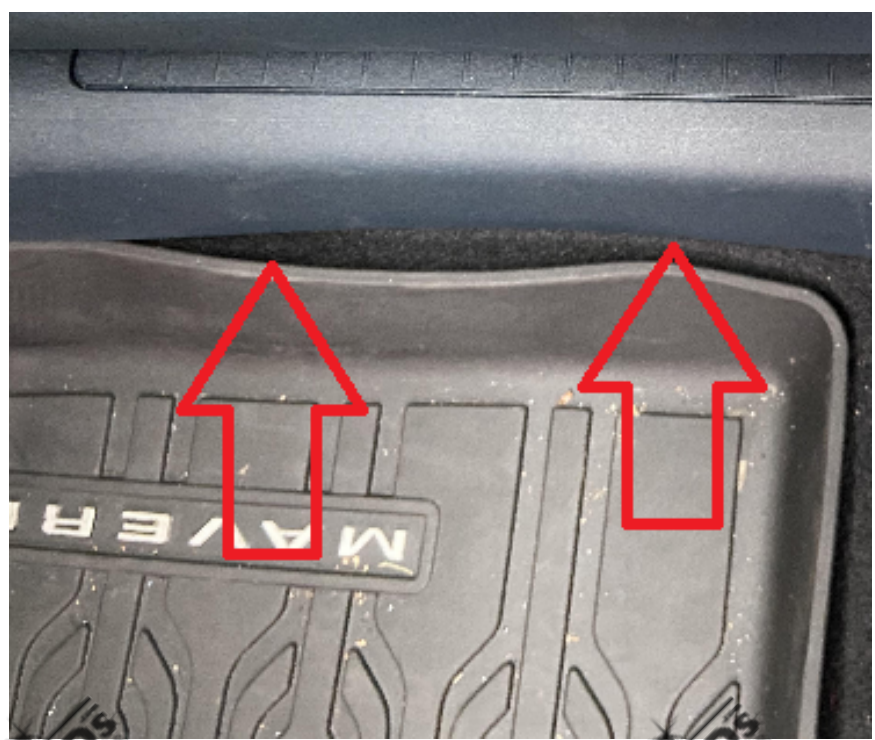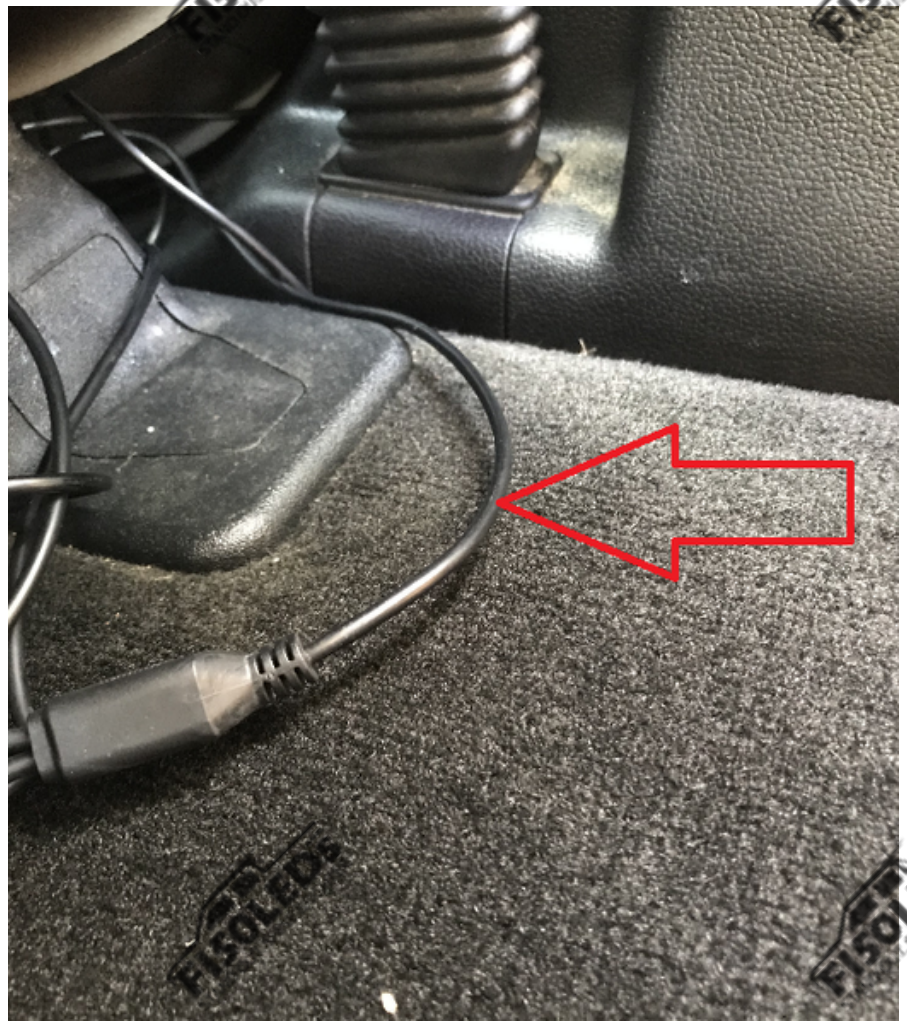


STEP 8

To power the kit, first remove the plastic trim piece seen below that is covering the fuse panel. This trim piece is located at the passenger footwell.

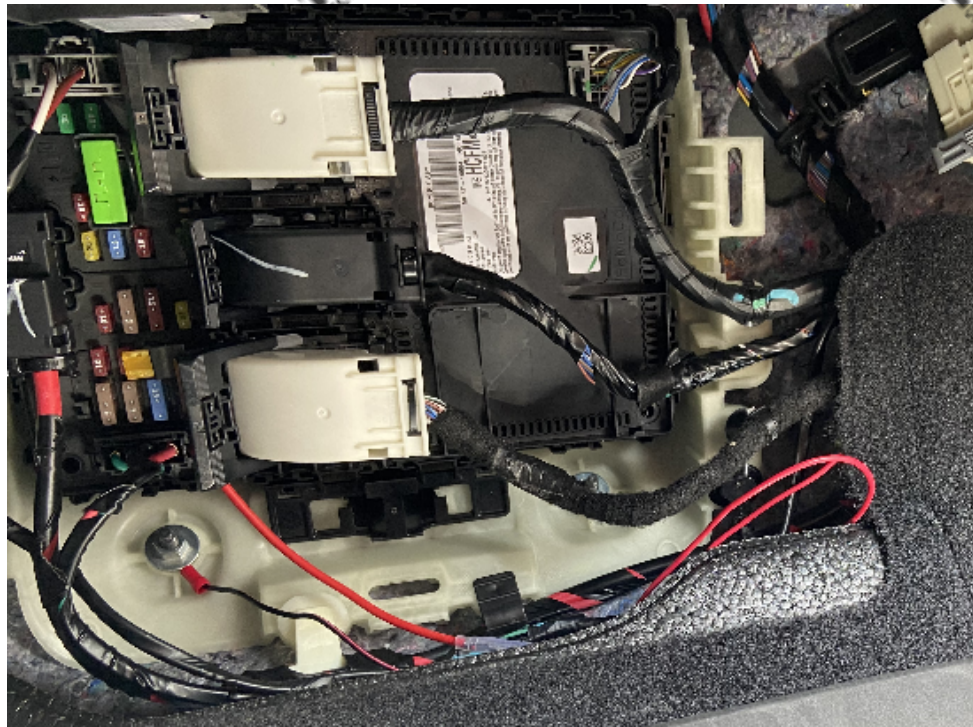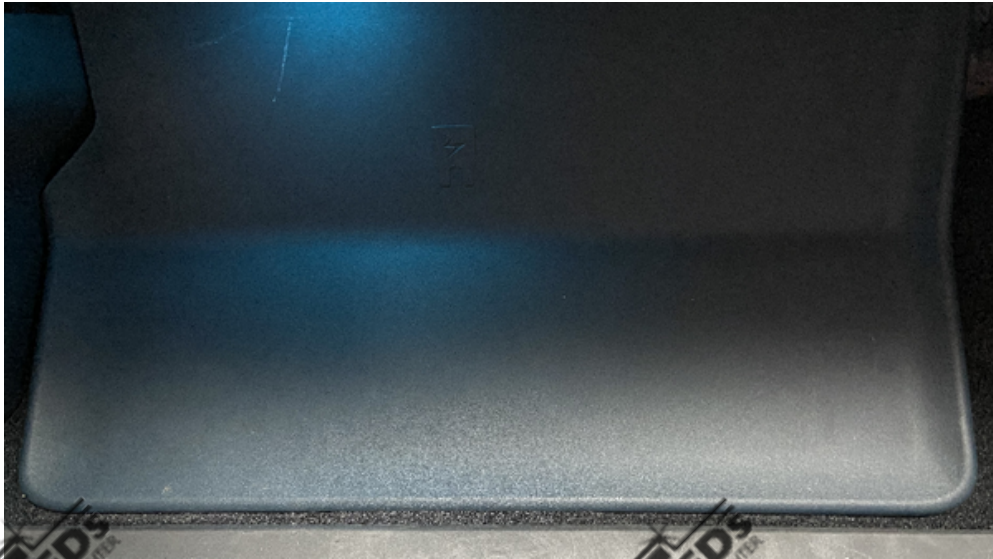


STEP 9

Ground your terminal ring to the bolt at the front of your passenger foot area using a size 10mm socket.

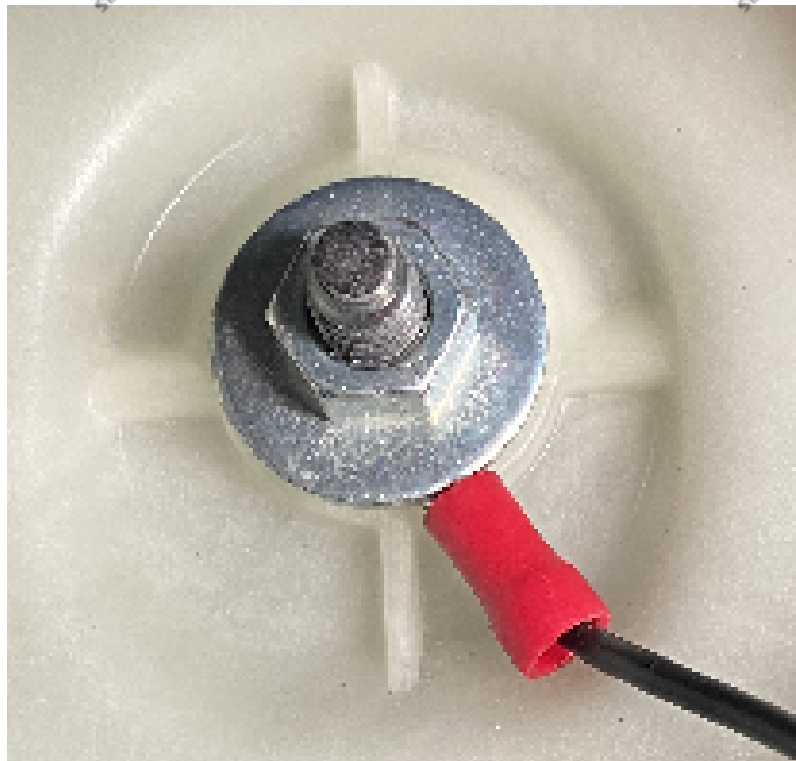

STEP 10

Remove the fuse that is inserted in fuse location 3 and insert it into the bottom of the fuse tap that comes with the kit. Then insert your fuse tap into fuse location 3.

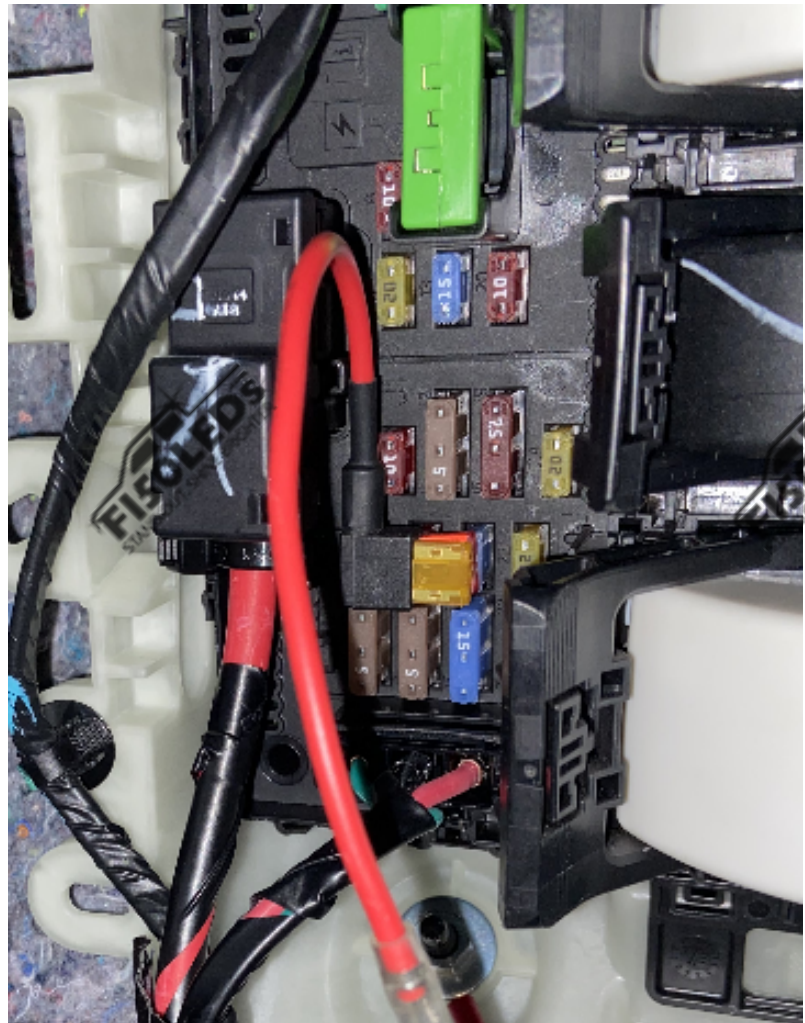

STEP 11

Run the wire from the fuse tap and terminal ring across the footwell as seen below.



Now that the wire is ran reinstall the trim piece that was covering the fuse panel.



STEP 12

Mount your receiver so that the small piece circled below is visible to your remote.



Text for support: 706-214-2618

Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com

