


2011-2016 SUPER DUTY FRONT MARKER

STEP 1

Remove four size 10mm size bolts on the top of the grille. Then you will be able to pull back on the top of the grille.

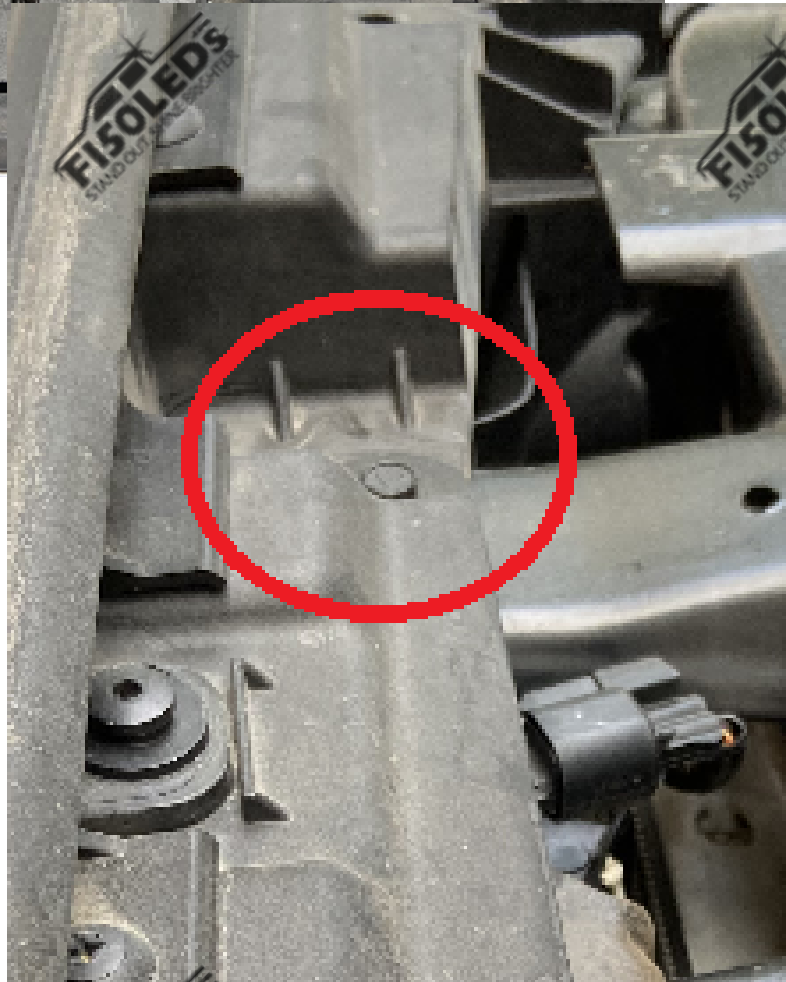

STEP 2


Pull back on the top of the grille and look down behind it and there are about 4-5 tabs at the bottom of the grille. Take a long flat head screw driver to push down on the tabs and they will release allowing the grille to be removed. Place the grille on a surface that it will not get scratched.






STEP 3

Remove four size 10mm bolts to be able to release the headlight assembly. One bolt is located at the top of the housing, two are located behind the rubber covering on the inside of the headlight and the last one is located under the headlight assembly that is in between the bumper and headlight assembly.

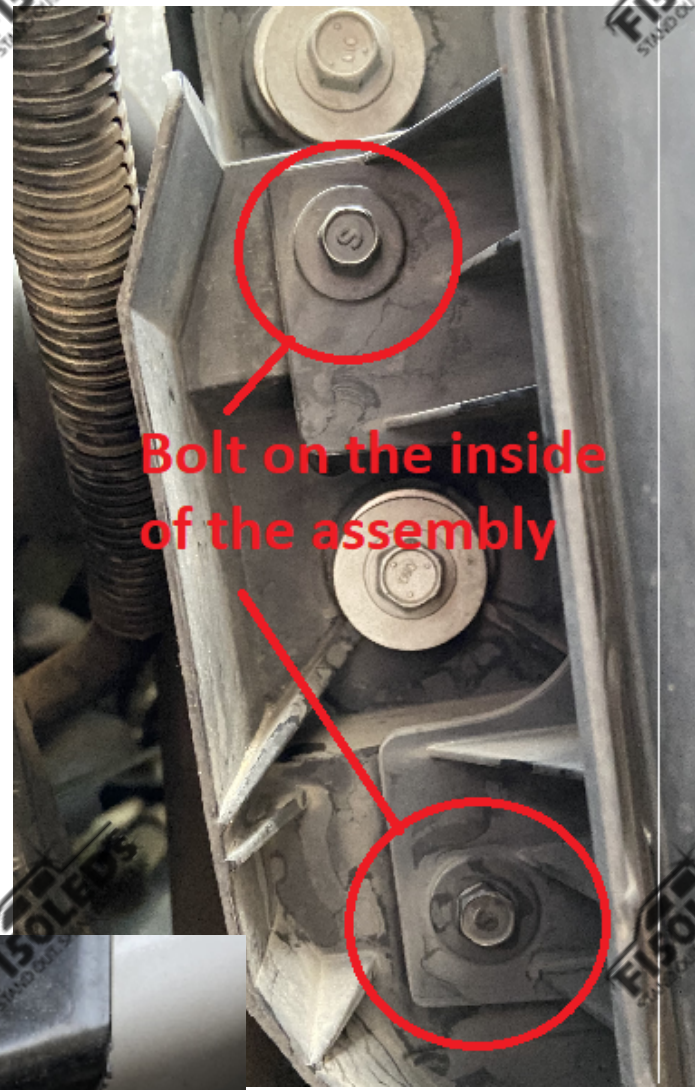

Bolt on the inside of the assembly

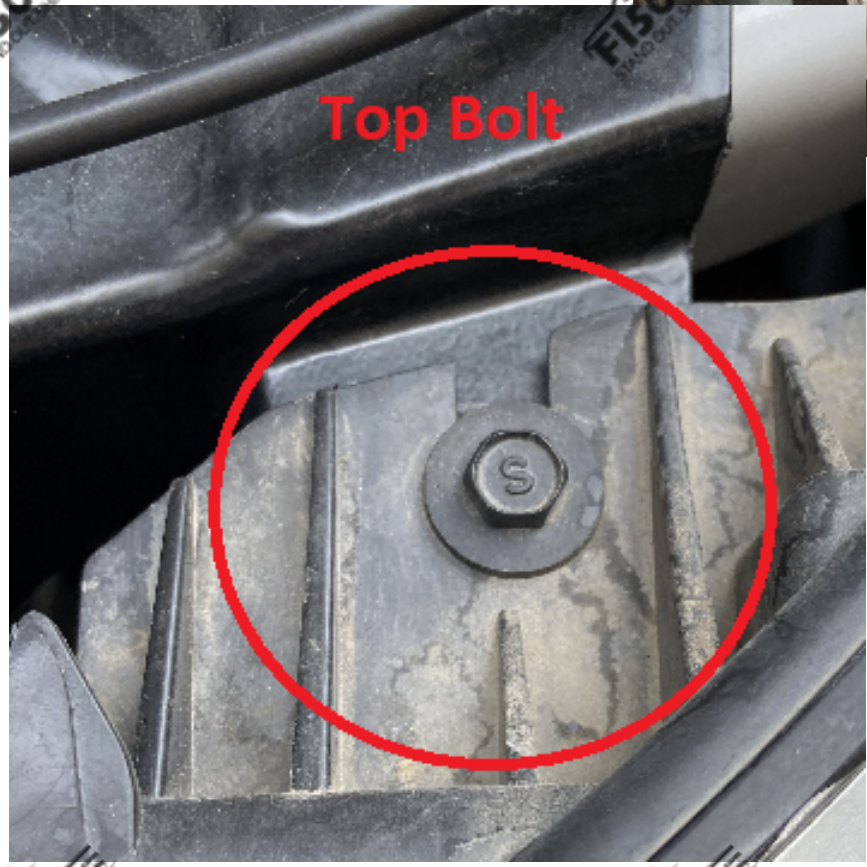

Top Bolt





**Bolt in between bumper
and headlight assembly**

STEP 4

Pull the Headlight assembly away from the truck and it will expose the Front marker socket



Front marker socket

STEP 5

Turn the socket counterclockwise to expose the bulb, remove the stock bulb (*be careful as this bulb may be hot*) Then insert the MKII Front Marker bulb into the socket (**test the bulb** and if it does not light rotate it 180 degrees then reinsert it.





STEP 6

Repeat steps 3-5 on the other side of the truck.

STEP 7

Reinsert the socket into the headlight assembly and lock it in using a clockwise turn. Now put the headlight assembly back into place and secure the assembly to the truck using the four bolts that were removed then reinstall the grille.



Text for support: 706-214-2618

Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com

