


2021+ FORD F150 MKV FOG INSTALL GUIDE

STEP 1

To gain access to the Fog light bulb, going through the wheel well liner is the easiest way.

Using a size 7mm socket or a phillips head screwdriver remove the screws in the photos below.

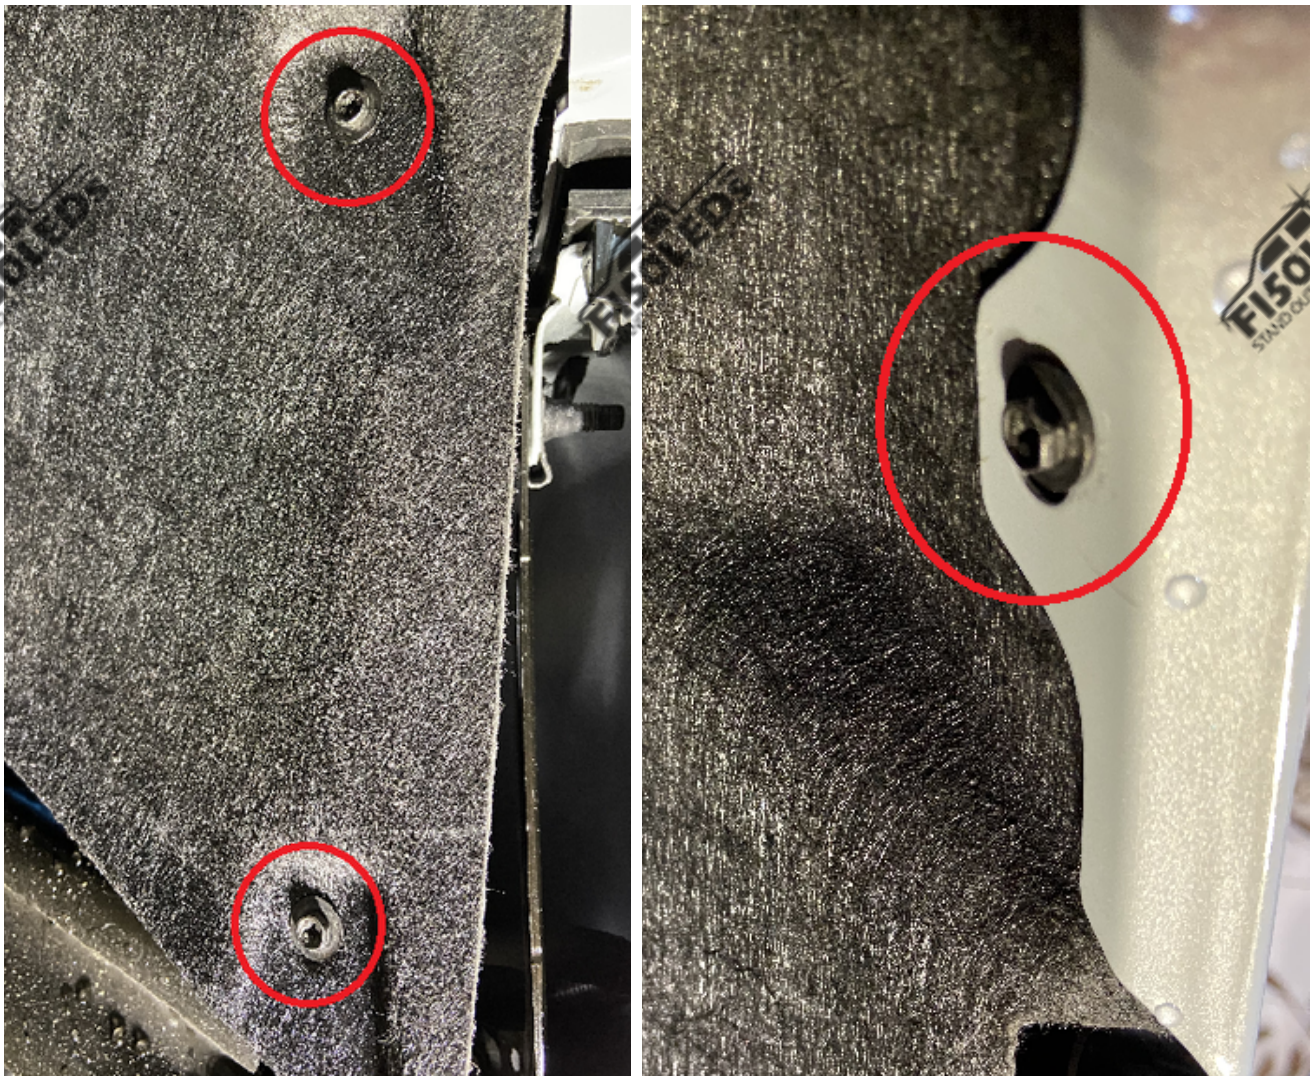



The first two screws are located right inside the wheel well, and the screw connecting the wheel well liner to the trim piece is at the top of the wheel well.

Once you have removed these screws, push the wheel well liner out of the way to gain access to the Fog bulb.




STEP 2

Remove the OEM Fog light bulb.



Disconnect the factory fog light harness for the OEM fog light bulb. Once you have done that, turn the fog light bulb counterclockwise to remove the OEM bulb.

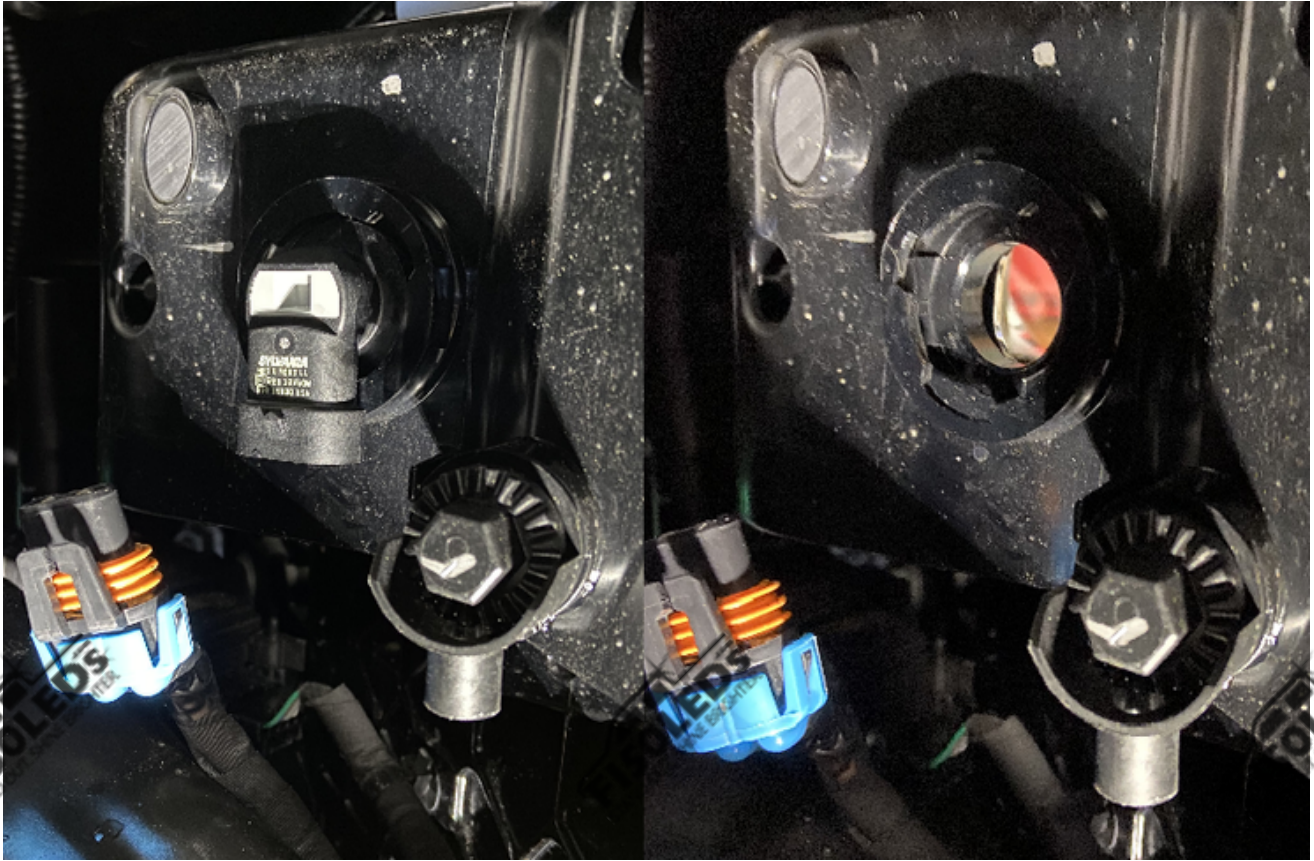

STEP 3


Connect the factory harness to the ballast from the kit then connect the ballast to the MKV Fog light bulb.





STEP 4

Install the MKV Fog light bulb into the fog housing by lining up the tabs on the bulb with the tabs in the housing and turning the bulb clockwise to lock it into place.

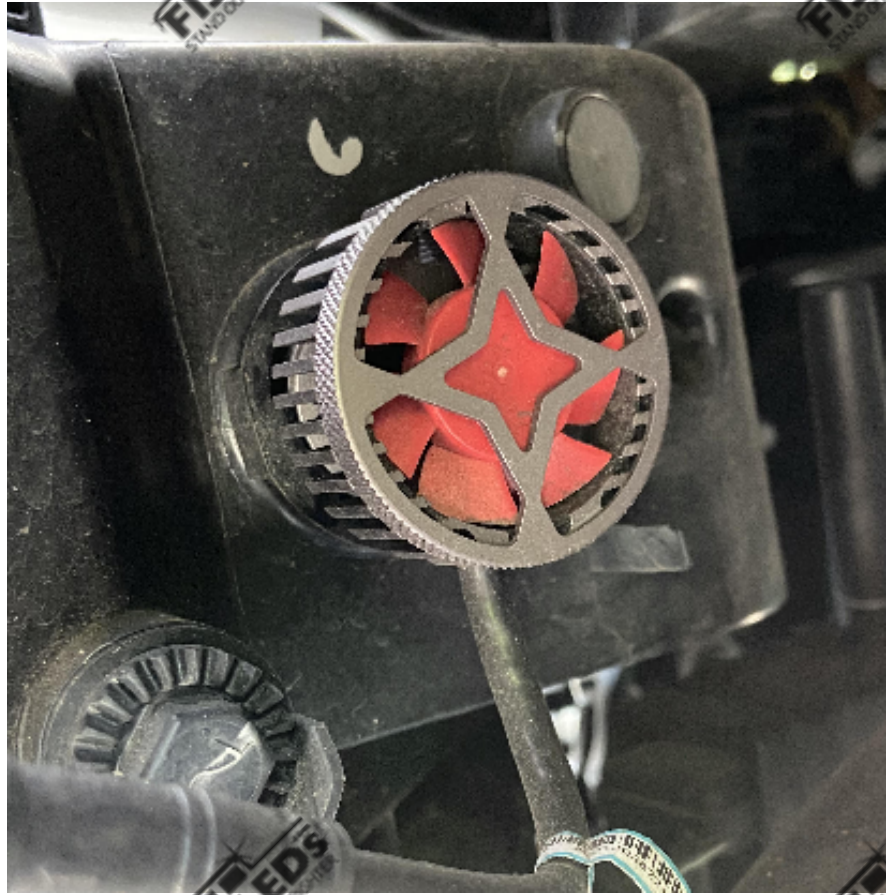

STEP 5

Use the provided zip ties to secure the ballast to where it will not be touching any other wires or any plastic as this unit can get hot.

STEP 6

Reinstall the wheel well liner then repeat the steps on the other side of the truck.



Text for support: 706-214-2618

Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com

