

# 2022+ FORD MAVERICK CARGO BULBS INSTALL GUIDE

## STEP 1


Make sure there is no power going to your Cargo lights.

Remove the four torx head screws in the photo above using a size T20 driver.



## STEP 2


Pull your assembly away from your truck exposing your three cargo bulbs.

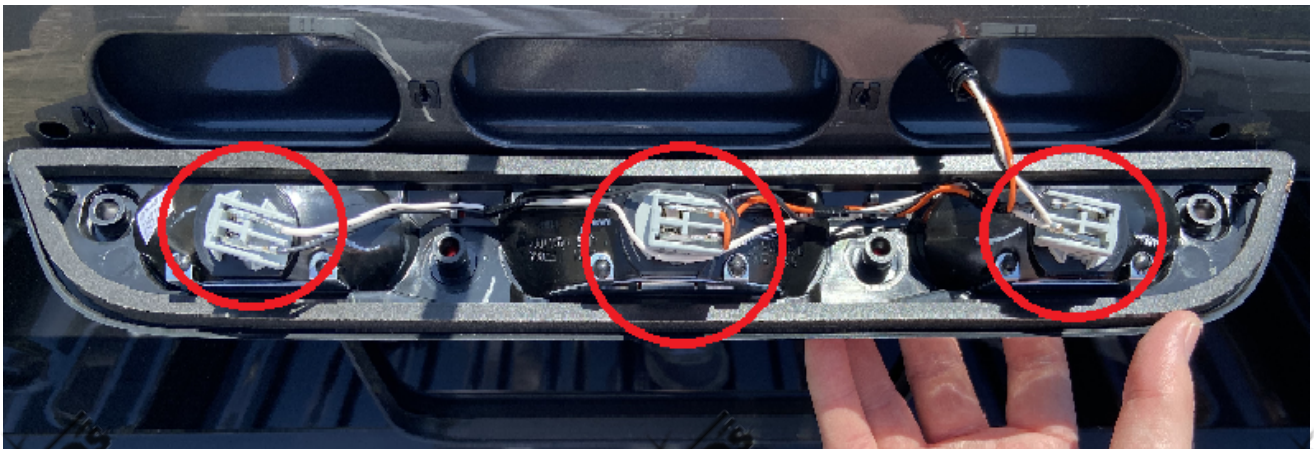

## STEP 3

Turn the cargo bulb socket counterclockwise exposing your OEM bulb. Carefully pull away from the base of the bulb to remove the OEM glass bulb.

\*Make sure that this bulb is not hot before removing it\*

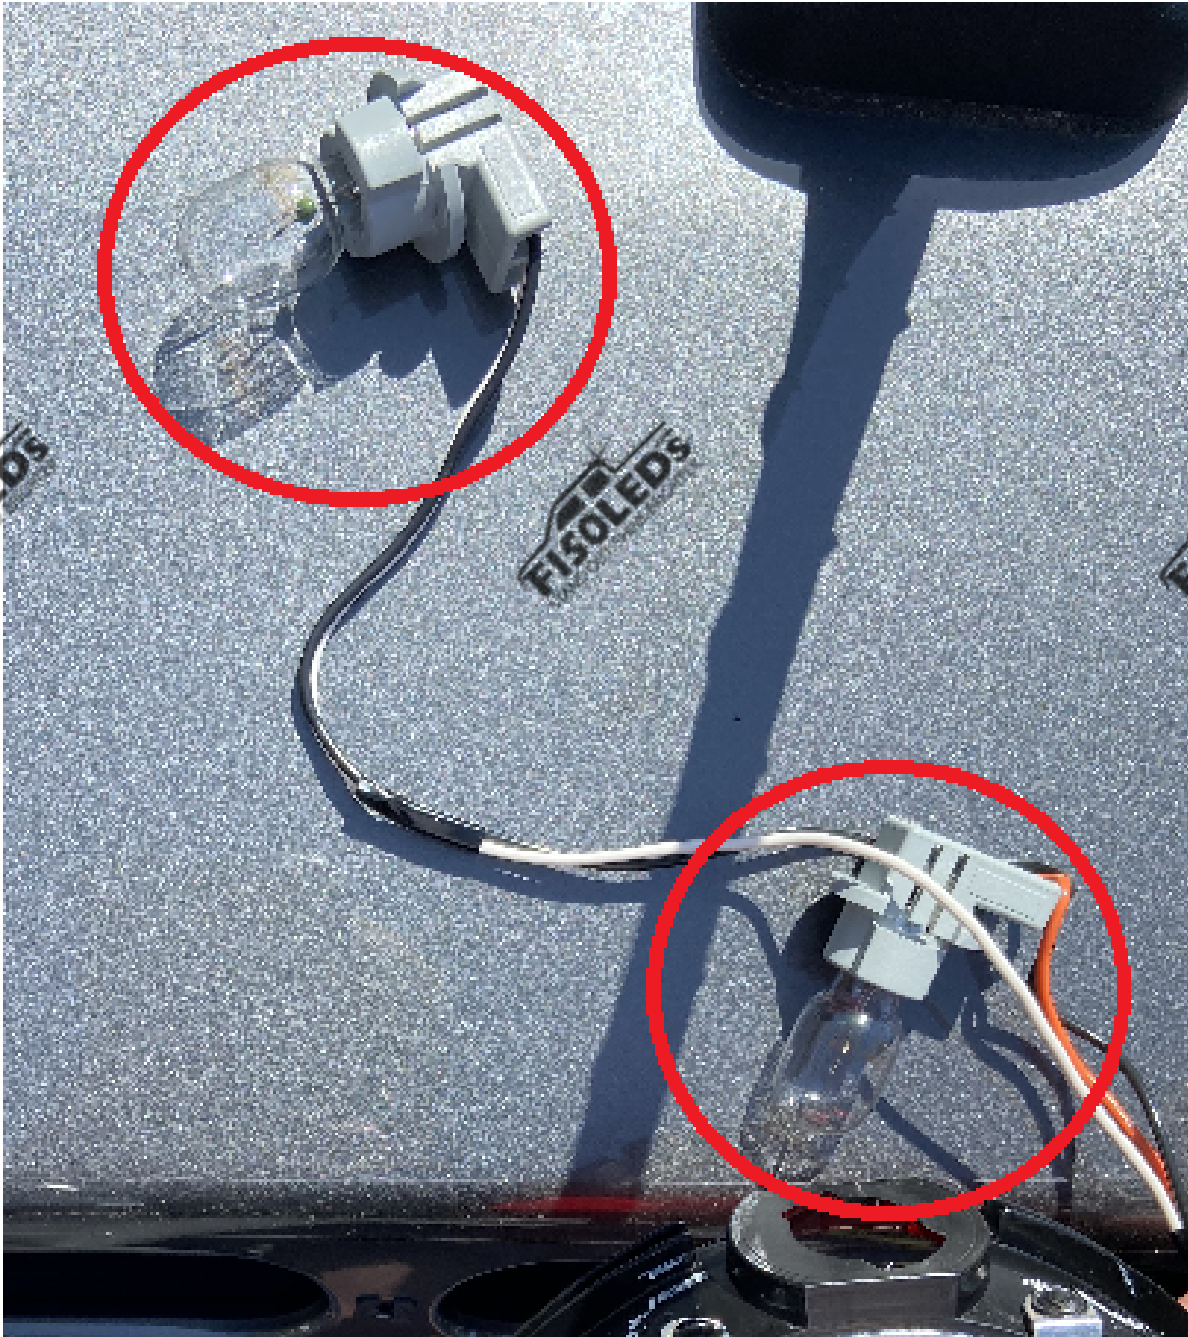






## STEP 4

Insert your F150LEDs.com cargo light bulb.

Test your bulb, if the bulb does not light remove the bulb and flip it 180 degrees.

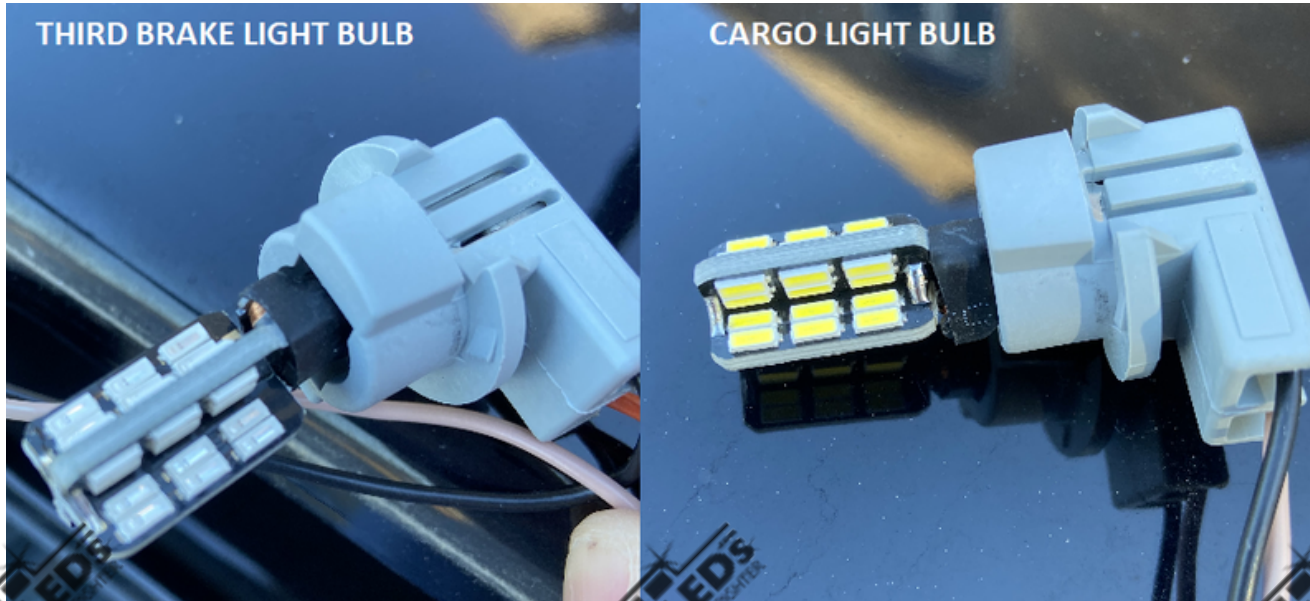

## STEP 5

Insert your bulb back into place and turn it clockwise to lock the bulb into place.

Repeat these steps for the other bulbs.

Reinstall your cargo light housing into your truck.



Text for support: 706-214-2618

Visit our site to chat: [www.F150LEDs.com](http://www.F150LEDs.com)  
or email [CustomerSupport@F150LEDs.com](mailto:CustomerSupport@F150LEDs.com)

