



2022+ FORD MAVERICK RAPTOR KIT INSTALL

STEP 1

Locate where you would like to mount your Raptor lights.


The location of the lights is completely up to your preference, for our truck we are going to be mounting them in the circled locations below.





STEP 2

Stick the auto grade 3M adhesive to each of the lights then mount them to your desired location by pressing them on your truck and applying firm pressure for 1-2 minutes. (Repeat for other lights)

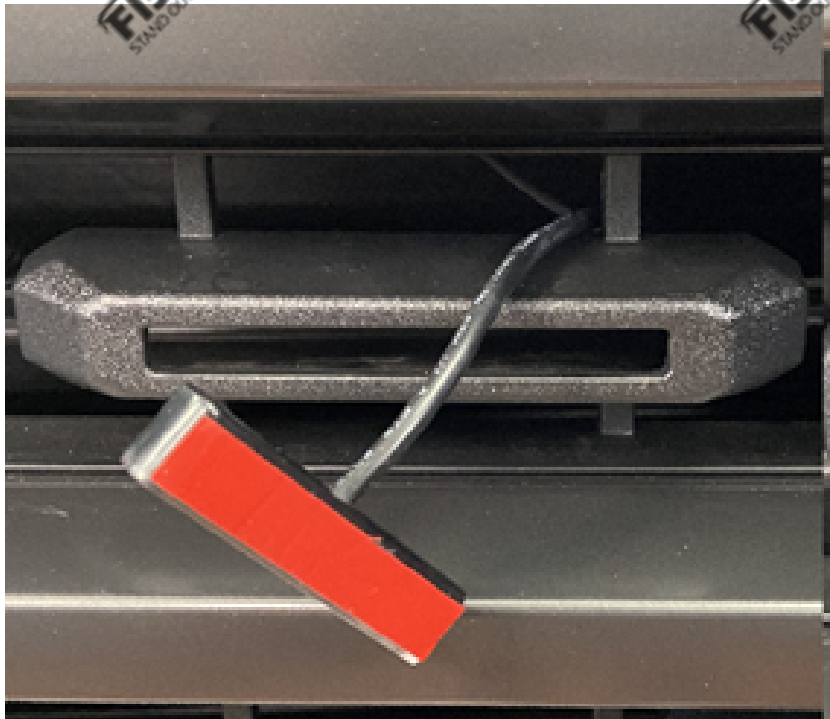

You can mount them towards the front of the piece of the grille or further back as shown in the photo, it is completely up to preference.




STEP 3

Take the wires coming from the lights and run them across the top of the grille into the engine bay.



STEP 4

Connect the wires from the Raptor lights to the power harness in your kit. Be sure to fully press in these connections in until you hear a click.

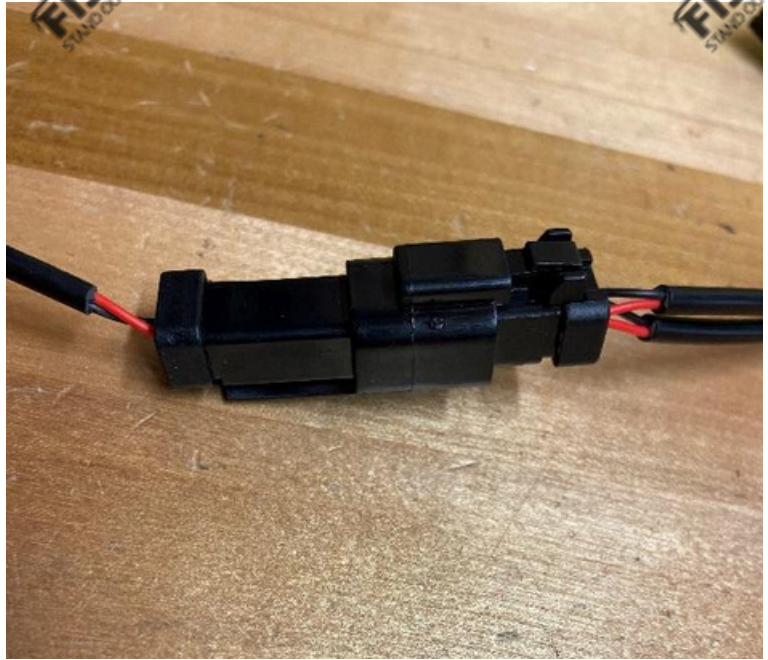


STEP 5

Remove the Front Marker assembly by taking a pry tool and pushing from the back of the assembly to the front of the truck and a pop tab will release the assembly from the truck.



STEP 6

Use a box cutter or scissors to carefully cut back the protective covering that is covering the wires coming from the front marker assembly.

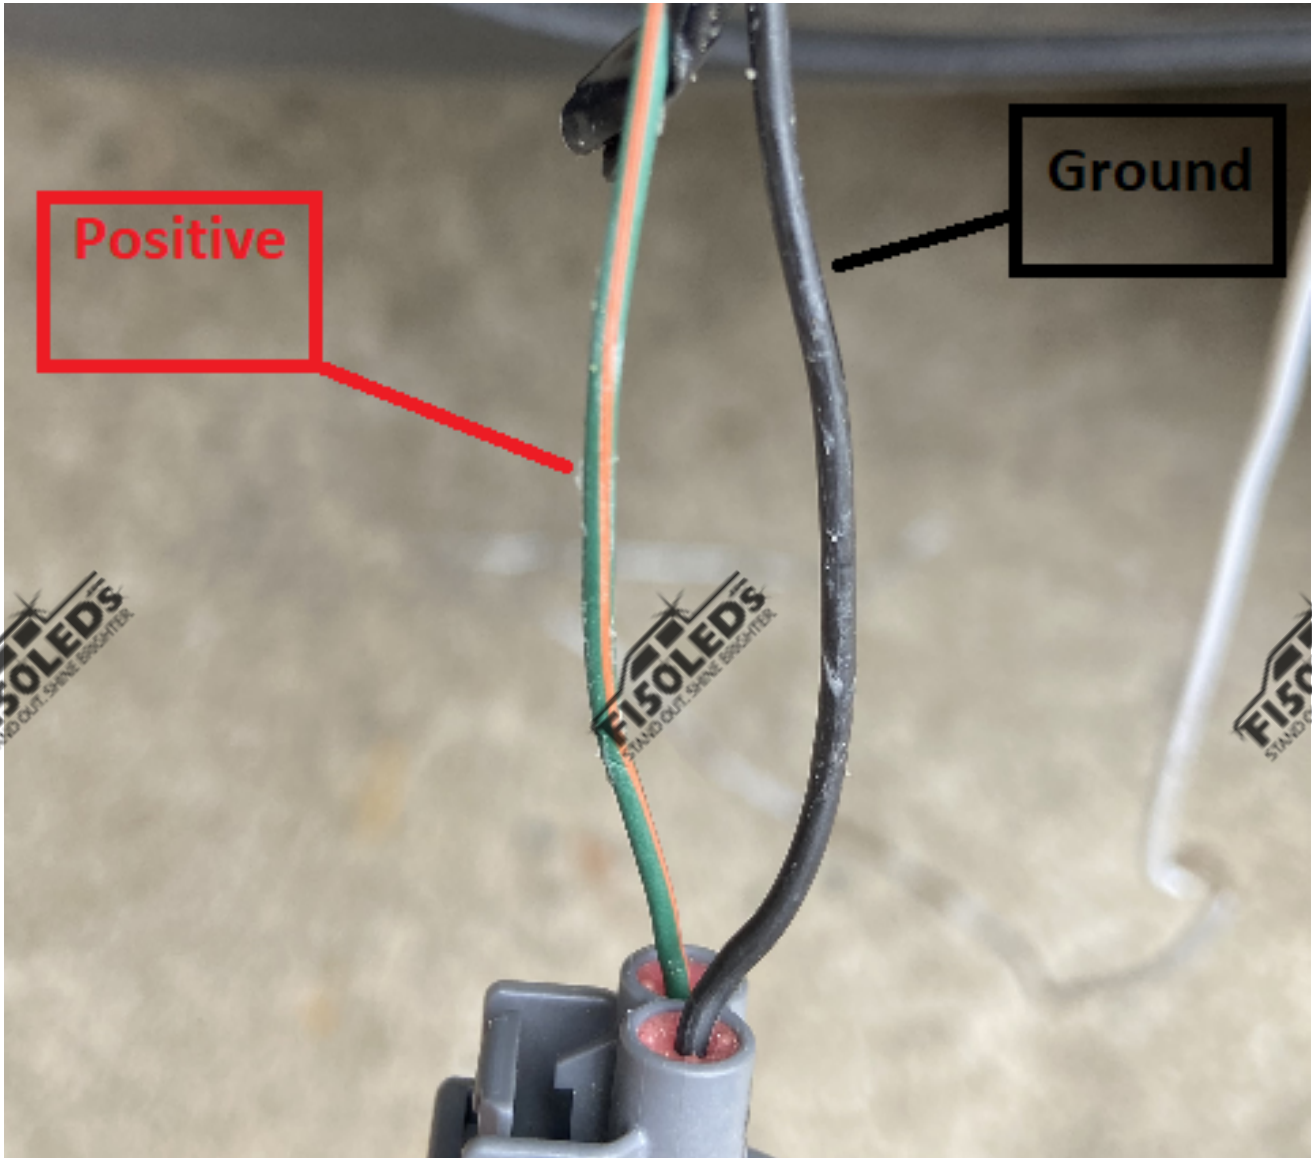




STEP 7

Run the power and ground wire from the Raptor kit wiring harness down to the front marker assembly. We recommend using a wired coat hanger and attaching the wire to the end of the coat hanger and feeding it down behind the headlight assembly.



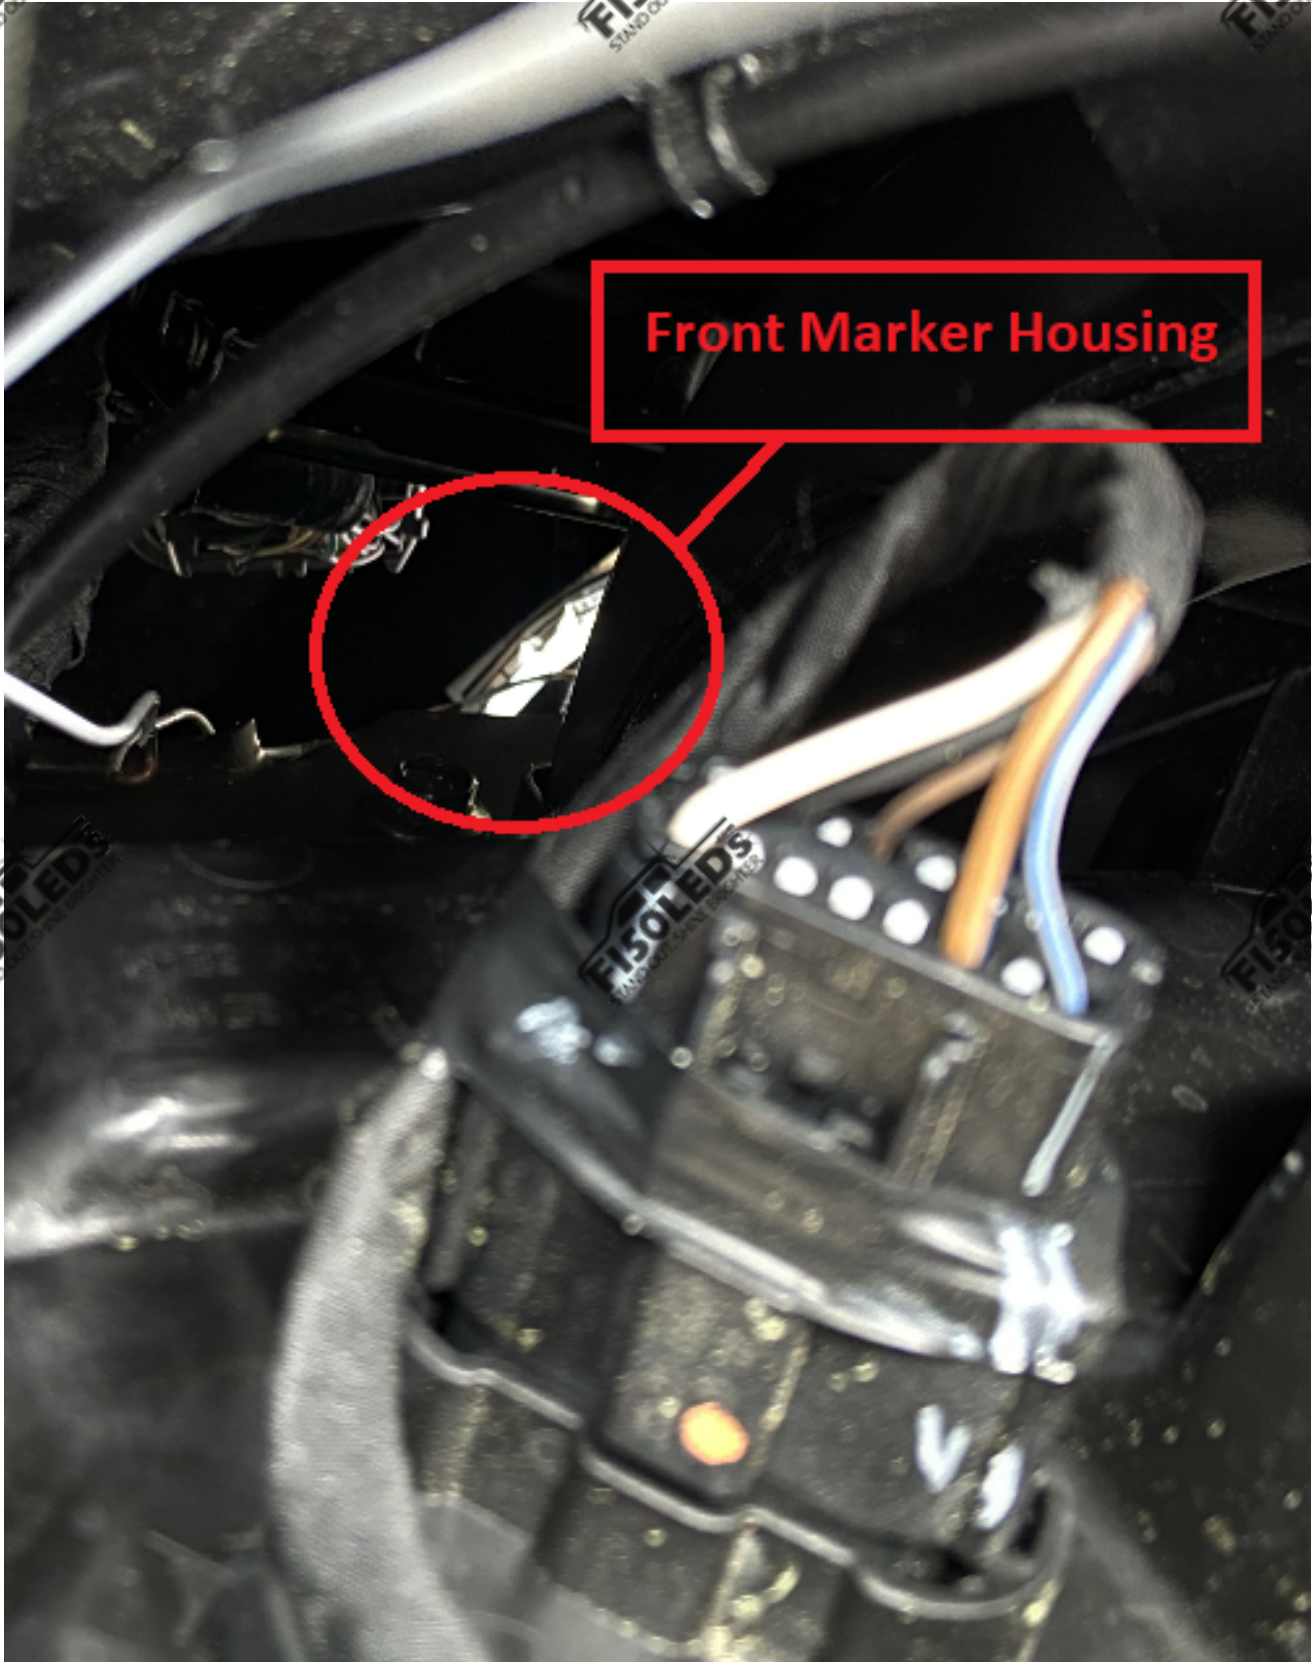


Front Marker Housing



FISOLED'S
STAND OUT. SHINE BRIGHTER.

FISOLED'S
STAND OUT. SHINE BRIGHTER.

FISOLED'S
STAND OUT. SHINE BRIGHTER.

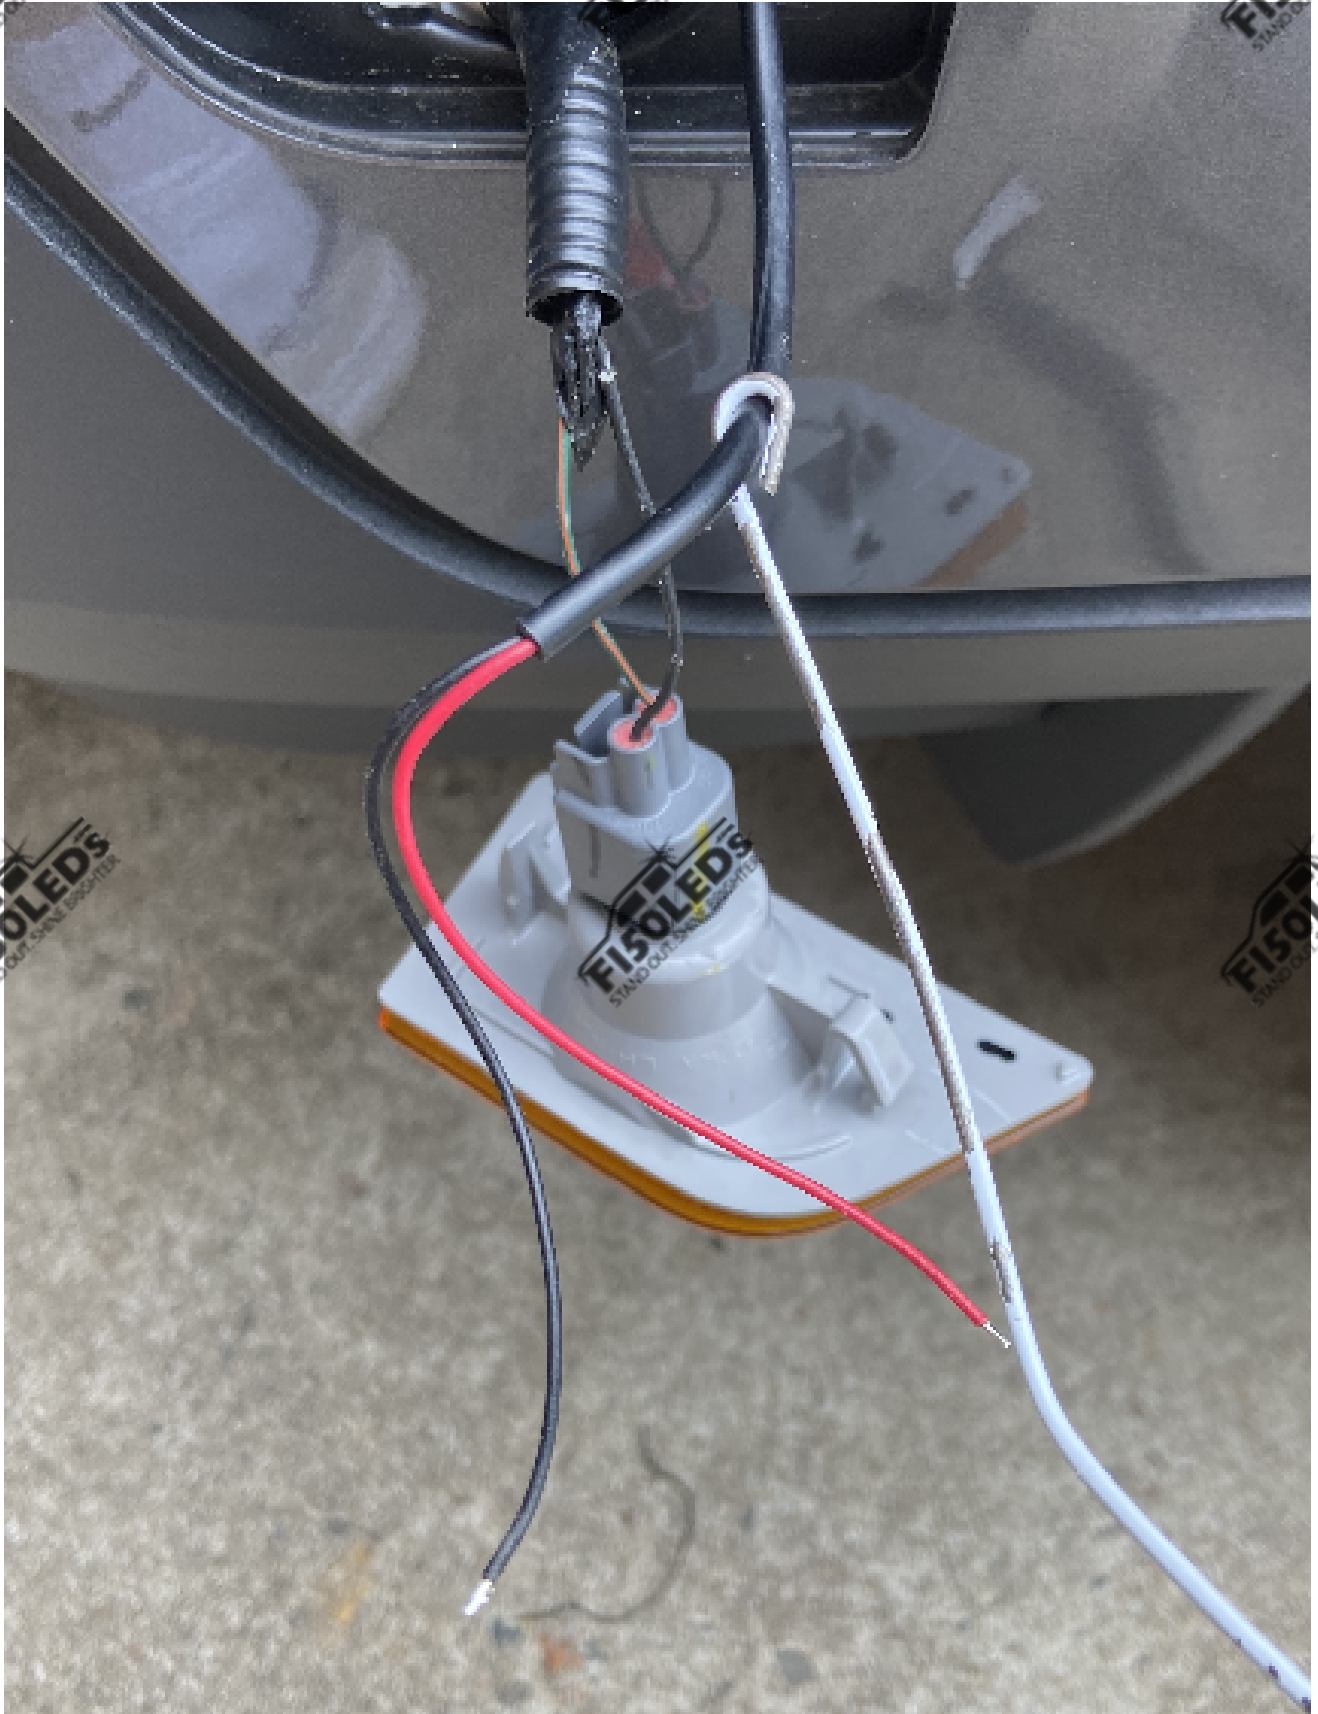

FISOLED'S
STAND OUT. SHINE BRIGHTER.

FISOLED'S
STAND OUT. SHINE BRIGHTER.


FISOLED'S
STAND OUT. SHINE BRIGHTER.

FISOLED'S
STAND OUT. SHINE BRIGHTER.

FISOLED'S
STAND OUT. SHINE BRIGHTER.

STEP 8

Take the red power wire from the Raptor wiring harness and use the quick splice connector from the kit to connect to the green wire with an orange tracer coming from the front marker. Then take the black ground wire from the Raptor wiring harness and use the other quick splice connector from the kit to connect to the black wire coming from the front marker.

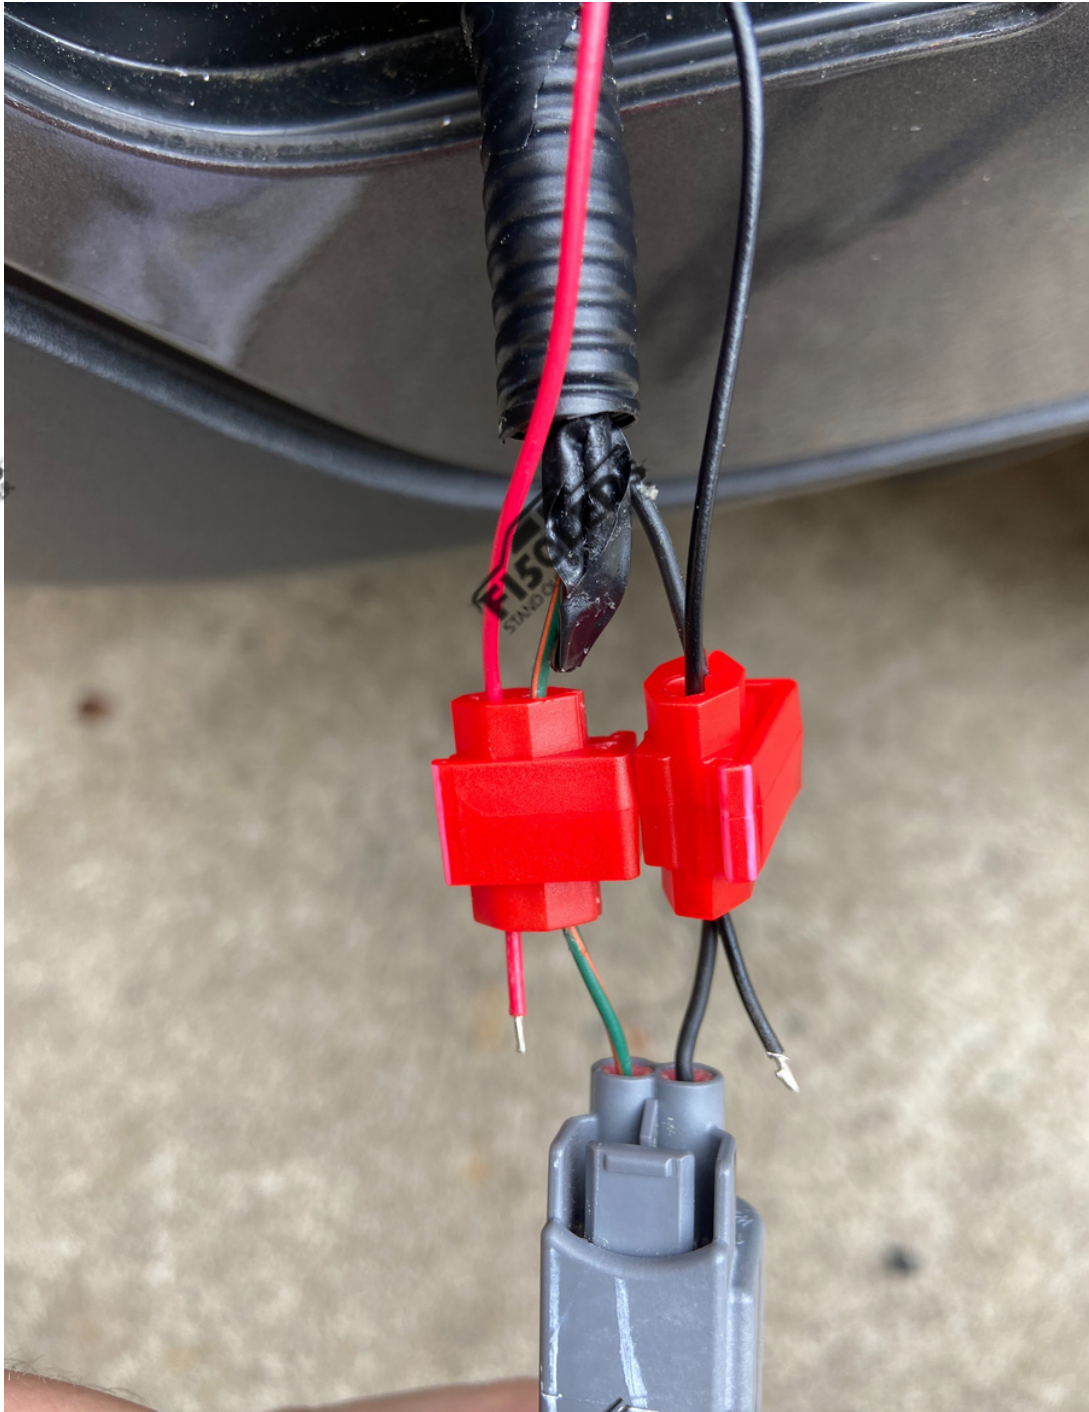



STEP 9

Reinstall the front marker assembly then use the included zip ties to clean up the wiring harness in the engine bay.



Text for support: 706-214-2618

Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com

