

# 2017-2022 FORD SUPER DUTY MKV FOG INSTALL GUIDE

## STEP 1

Reach under the bumper and remove the OEM Fog light bulb using a counter clockwise turn then disconnect the factory fog light harness for the OEM fog light bulb.





## STEP 2

Connect the factory harness to the ballast from the kit then connect the ballast to the MKV Fog light bulb.



**FISOLEDs**  
STAND OUT. SHINE BRIGHTER.

**FISOLEDs**  
STAND OUT. SHINE BRIGHTER.

**FISOLEDs**  
STAND OUT. SHINE BRIGHTER.



**FISOLEDs**  
STAND OUT. SHINE BRIGHTER.

**FISOLEDs**  
STAND OUT. SHINE BRIGHTER.

**FISOLEDs**  
STAND OUT. SHINE BRIGHTER.


**FISOLEDs**  
STAND OUT. SHINE BRIGHTER.

**FISOLEDs**  
STAND OUT. SHINE BRIGHTER.

**FISOLEDs**  
STAND OUT. SHINE BRIGHTER.

## STEP 3

Install the MKV Fog light bulb into the fog housing by lining up the tabs on the bulb with the tabs in the housing and turning the bulb clockwise to lock it into place.

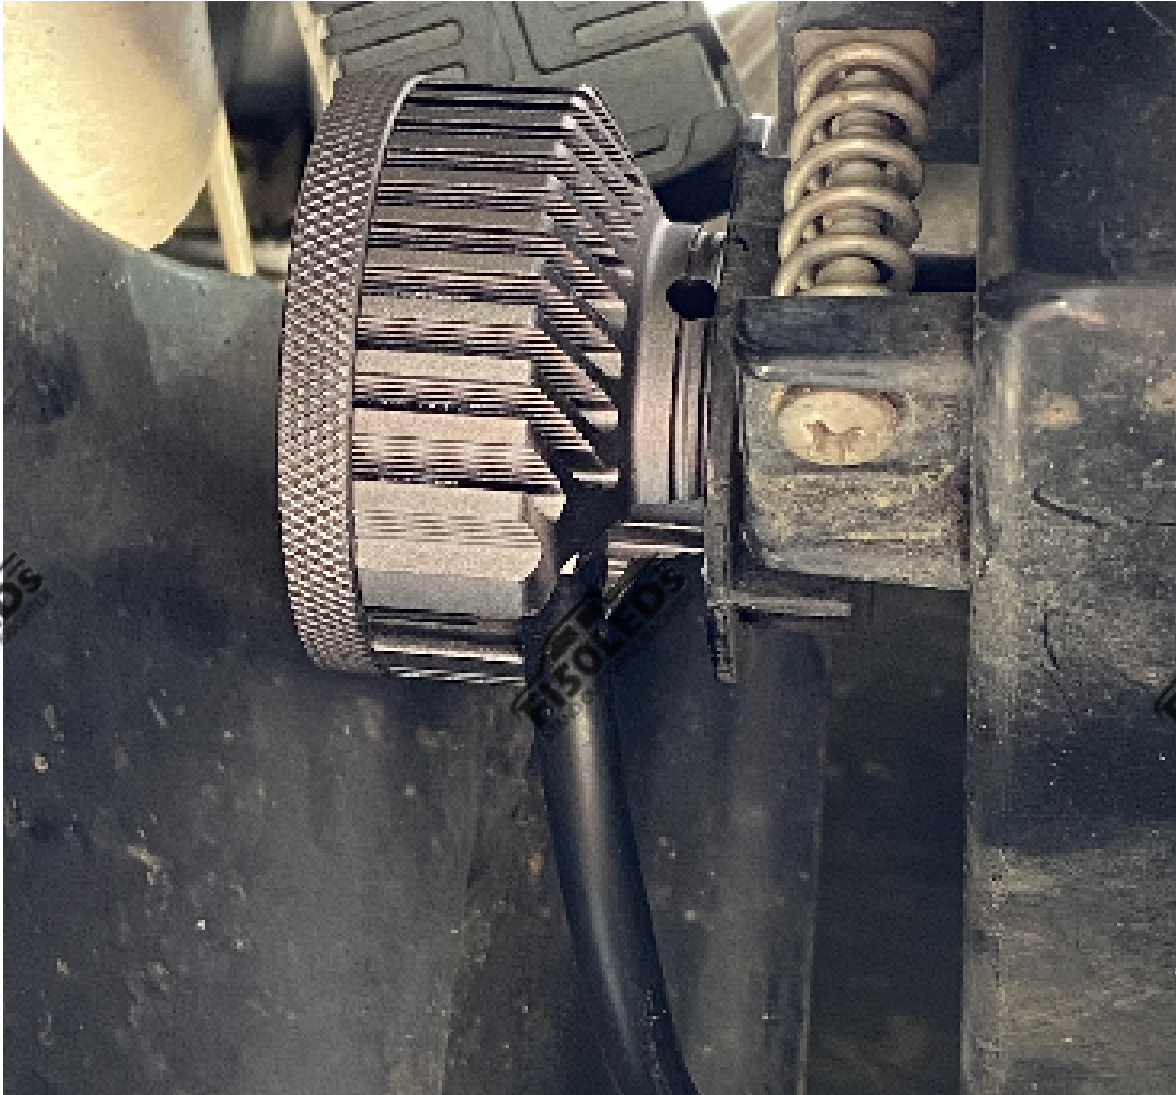



## STEP 4

Use the provided zip ties to secure the ballast to where it will not be touching any other wires or any plastic as this unit can get hot.

## STEP 5

Repeat steps for other side of the truck



Text for support: 706-214-2618

Visit our site to chat: [www.F150LEDs.com](http://www.F150LEDs.com)  
or email [CustomerSupport@F150LEDs.com](mailto:CustomerSupport@F150LEDs.com)

