



SUPER DUTY ALTERNATE FRONT BRACKET INSTALLATION


STEP 1

Attach your bracket to your bar as seen in the photo below.




STEP 2

Line up your bar on your bumper in your desired location.

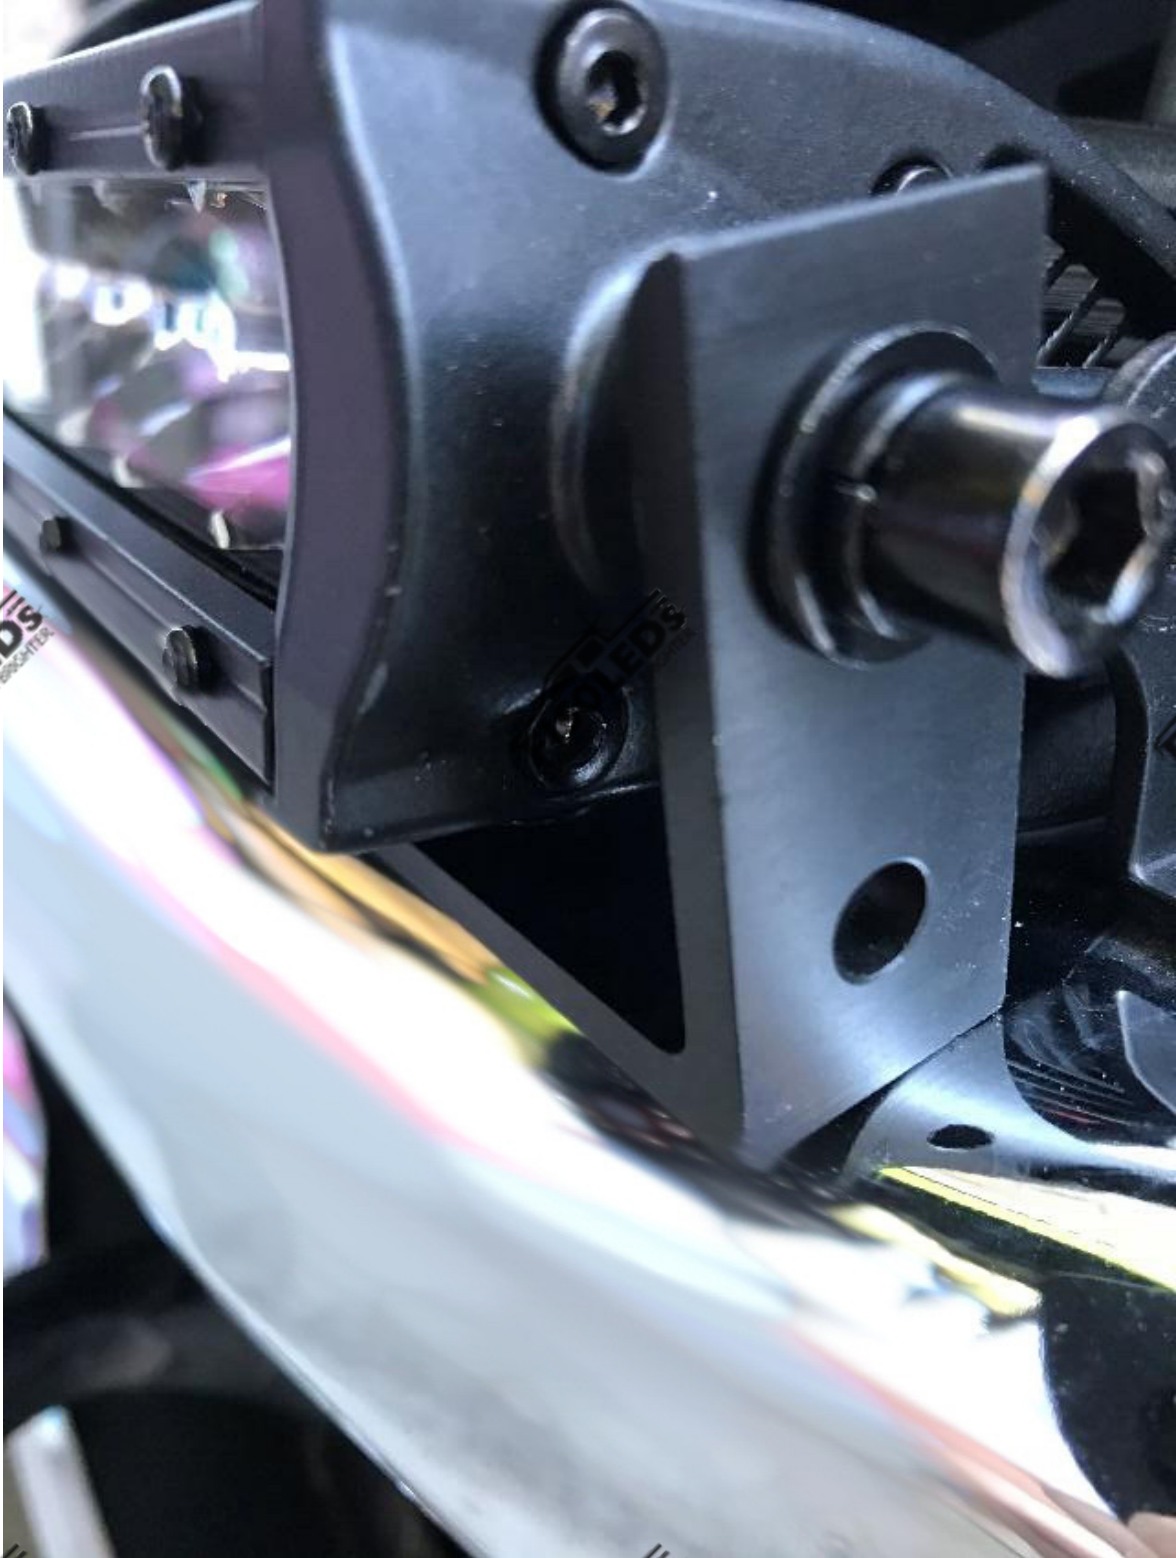




Once your bar is lined up use two pieces of electrical tape or painters' tape to mark where your bracket is on your bumper.

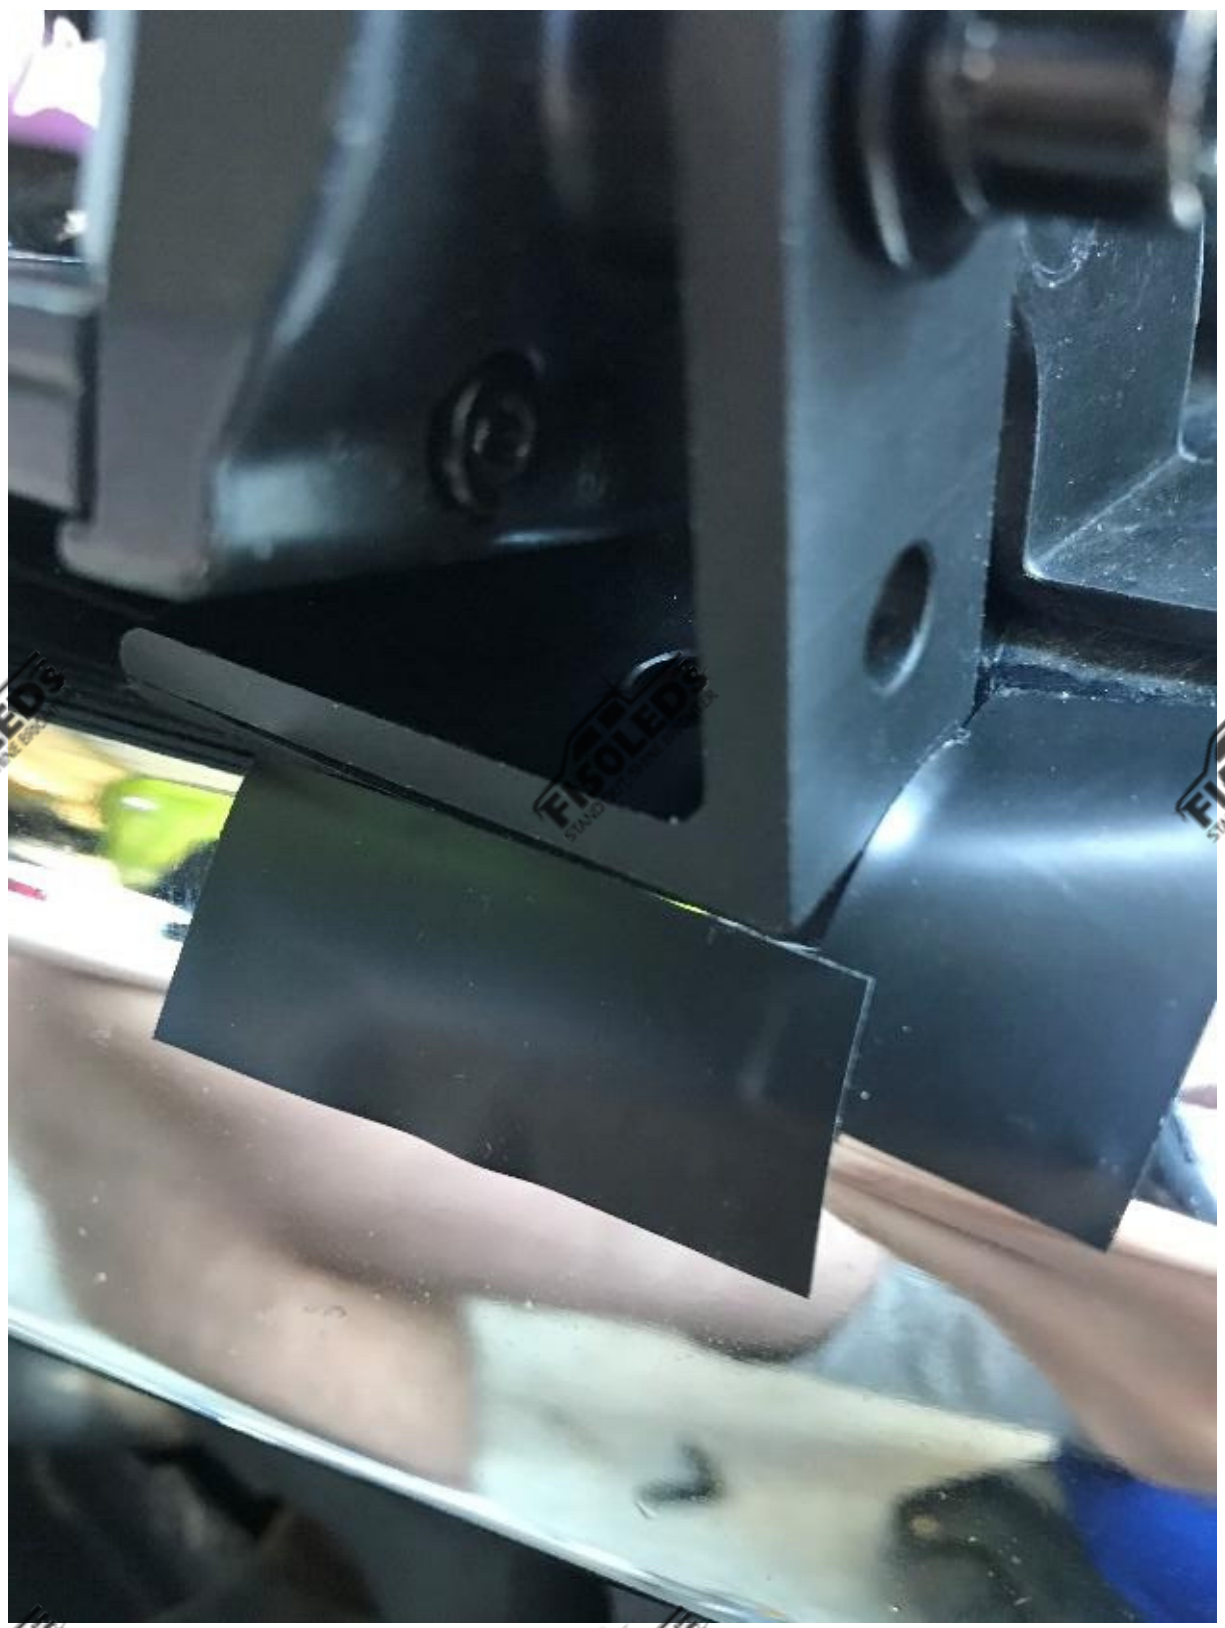



Once you have applied tape to mark where your bracket needs to be, remove the bracket from your bar. Then place the bracket back in place and use a sharpie to mark the inside hole of your bracket.

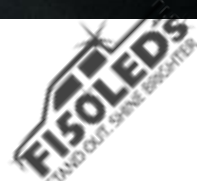

STEP 3

Once you have marked your hole remove the bracket. Use a 5/16 size drill bit to drill a mounting hole into your bumper where your sharpie mark is.



STEP 4

Using the included hardware mount your bracket to your bumper. Watch the video for further details on gaining access to this bolt from underneath.





Reach under your bumper to screw the nut to your bulb.





STEP 5

Once you have mounted both brackets to your bumper, use the included hardware to attach your bar to your brackets.



Text for support: 706-214-2618
Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com

