



BEFORE YOU BEGIN: Prepare your tubeless set-up by installing the rim-tape and valve according to the manufacturer's guidelines.


1. Install the first bead of the tire around the rim.

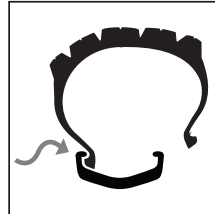


2. Be sure to align the tubeless notch with the valve.

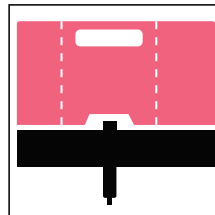


3. Install Tannus Armour under the tire and inside the bead of the rim.

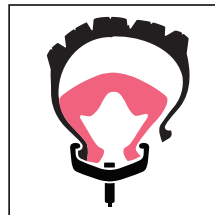

4. Push second bead of the tire inside the bead of the rim.

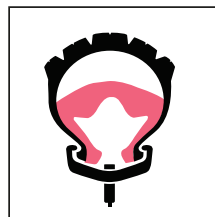

5. Complete your tubeless setup by adding 2-4oz of sealant.

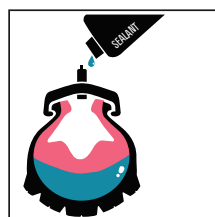

6. Inflate tire using a pump or air compressor and check for leaks.



Armour Tubeless Install Tips

TANNUS ARMOUR TUBELESS INSERTS ARE FOR TUBELESS TIRES AND RIMS ONLY.

- Ensure you are familiar with setting up tubeless tires before proceeding with installation.

SEALANT: To save time you can pour sealant in the tire before pushing the second bead of the tire over the rim in step 4. If you do please skip step 5.

TOOLS: If you're struggling to get the second bead over the rim use tire levers or ask a friend for a hand.

VALVE CORE: Be sure to remove the valve core before filling with sealant and replace once the sealant is applied.

INFLATION: When inflating the tire a simple bicycle floor pump is all that is needed. However, if you're having a difficult time getting the bead to set try using an air compressor.