SIGNATURE SERIES

INSTALLATION AND CARE GUIDE

31" FREE WALL CABINET WITH DRAWER

E027031



Model: E027031 Designed By: DANELONMERONI | UK

PRE-INSTALLATION

Tools Required













Materials Included

1 set of wall brackets

6 long bolts

10 short screws

6 bolt caps

Materials Required

1 2x4 beam cut to size



Model: E027031 Designed By: DANELONMERONI | UK

INSTALLATION


Determine the ideal location of your Step 1: new cabinet.

> **NOTE:** It is highly recommended the location has at least two studs. Front notch the studs and install a 2x4 horizontal beam for added stability.

Step 2: Measure the distance for the wall bracket.

Fasten the wall brackets to the wall.

See Figure 1.



Refer to page 3.

Step 4: Slide the cabinet onto the wall brackets.

Verify the cabinet is level.

Secure the wall bracket to the cabinet using the short screws provided.


See Figure 2.

Step 5: Re-install the drawer from


the cabinet.

Refer to page 3.



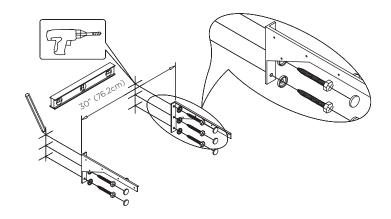



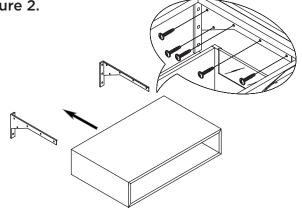


Model: E027031 Designed By: DANELONMERONI | UK

REMOVE DRAWER

Step 1: Pull the release latches located underneath the drawer.

See Figure 3.




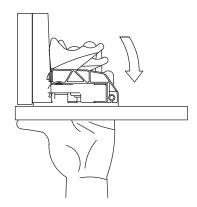

Step 2: Slide and lift up the drawer box.

See Figure 4.

Figure 4.

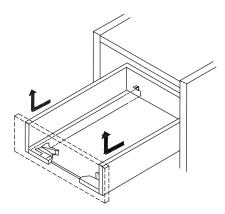


REINSTALL DRAWER

Step 1: Slide drawer box in until secured by rail hook.

See Figure 5.

Figure 5.

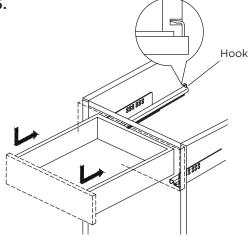

https://youtu.be/4DdK3cj3sTU



Model: E027031 Designed By: DANELONMERONI | UK

PRODUCT CARE AND MAINTENANCE

The fine furniture finish of your new vanity, mirror or other bathroom accessories are designed to protect against normal home use. With proper care, your product will provide years of use and beauty in your home.

General Care Tips

- Test cleaning product on small, discrete area prior to applying to entire surface.
- Wipe surfaces frequently with dry, soft, non-abrasive and lint-free towel.
- Do not allow liquids and moisture to accumulate on the surface of products.
- For warranty information, please visit our website at www.ronbow.com or contact the Customer Service Department at (510) 713-1188.

Wood Surfaces

- If a spill occurs, clean and dry the surface immediately as liquid can soak through the surface and cause greater damage.
- Do not place in direct sunlight. Exposure to sunlight may affect the appearance of your vanity, and the finish will eventually crack.
- Keep away from direct sources of extreme temperatures as heat, cold or moisture from humidity. Color changes, or blemishes in the wood can occur if recommended care of is not met. Try to avoid these extremes.
- Most wood surfaces can be cleaned, or dusted, with any commercial wood cleaning product. For general
 cleaning, use a non-abrasive, or lint-free cloth while dusting along the wood grain to preserve the
 wood's chacteristics.

Recommended Products

- Pledge Orange Oil, or similar
- Orange-Glo Wood Cleaner

DISCLAIMERS: Wood naturally ages, darkens and changes color over time due to several environmental conditions that may cause materials to vary from their original color and/or to warp, split or crack. These variations are considered to be the nature of the material in relation to their environmental exposure and may be significant over a long period of time. The effectiveness of cleaning Ronbow product is dependant on various factors that include sunlight, smoke, moisture, household cleaners and/or amount of cleaning product used over time. Ronbow cannot guarantee that the above Product Care & Maintenance methods will effectively clean your product.

