



ORACLE LIGHTING

TACOMA A PILLAR BRACKETS
ORACLE PART #2059-504
INSTALLATION GUIDE

TOOLS NEEDED:
12MM SOCKET
SOCKET WRENCH




1 POP THE HOOD AND LOCATE THE TWO 12MM BOLTS ATTACHING THE HOOD HINGE BRACKET TO THE HOOD.



2 USING A 12 MM SOCKET AND SOCKET WRENCH, LOOSEN THE TWO 12 MM BOLTS.



3 THE A PILLAR BRACKET WILL BE ORIENTED IN THIS POSITION. (SEE PHOTO) INSERTED IN BETWEEN THE HOOD HINGE BRACKET & THE HOOD.

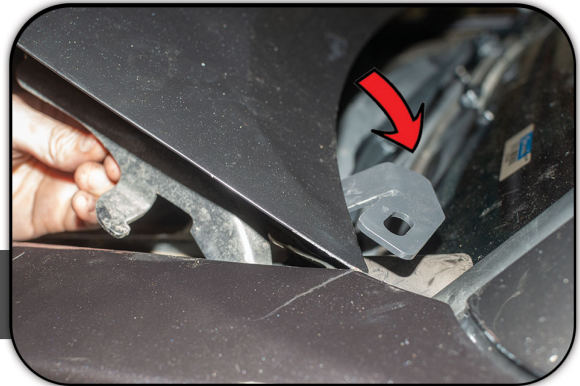

4 THIS PORTION OF THE BRACKET WILL PASS UNDER THE BOTTOM AND AROUND THE TOP OF THE HOOD.



5 REPLACE THE TWO 12MM BOLTS AND RE-TIGHTEN.



6 REFER TO THE IMAGE ON THE RIGHT OF THE BRACKET CORRECTLY INSTALLED. REPEAT THE PROCESS FOR THE PASSENGER SIDE BRACKET INSTALL.