




ORACLE LIGHTING

HIGH POWERED HEADLIGHTS
PART #5769
INSTALLATION GUIDE

VIDEO INSTALL



TOOLS NEEDED:
PANEL TOOL
T15 TORX BIT
WIRE CRIMPS
T-TAPS

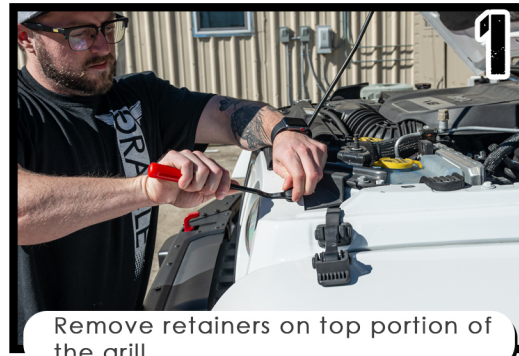

1 Remove retainers on top portion of the grille.



2 Gently pull on grille until the grill unclips from the chassis.



3 Twist and remove the parking light bulbs, and set grill to the side.



4 Loosen the (4) T-15 Torx Bolts to remove the headlight.



5 Unplug the factory harness from the OEM headlight.



6 Be sure to separate the OEM Trim Rings. These will be used later.



7 Plug in the included adapters to the factory harness.



8 Plug in new LED Headlight into supplied adapters.



ORACLE LIGHTING

HIGH POWERED HEADLIGHTS
PART #5769
INSTALLATION GUIDE

VIDEO INSTALL






Install new LED Headlight into factory housing on chassis.



Re-install OEM Trim Ring and the (4) T-15 Torx screws.

11 Repeat steps 3 to 10 on the Driver's side of the vehicle.

12 Connect T-Taps to Positive & Negative wires on the Parking Light Wiring Harness. (See Diagram Below)

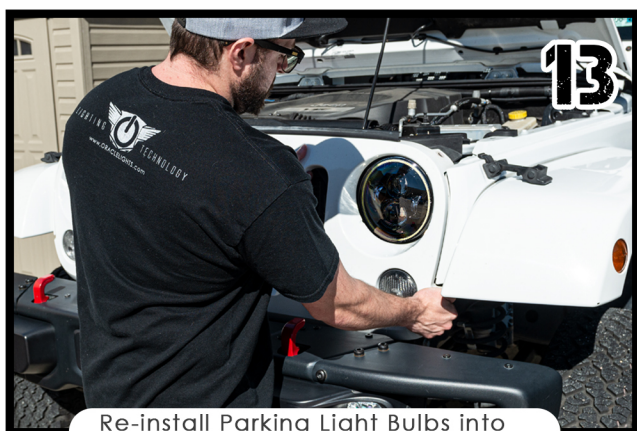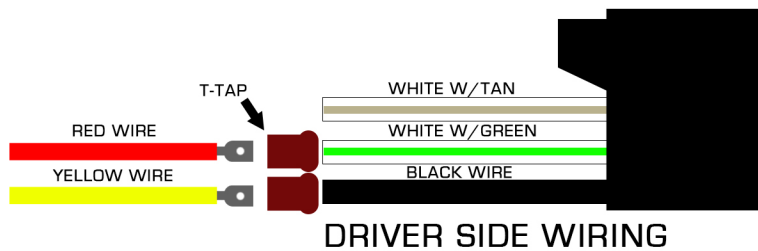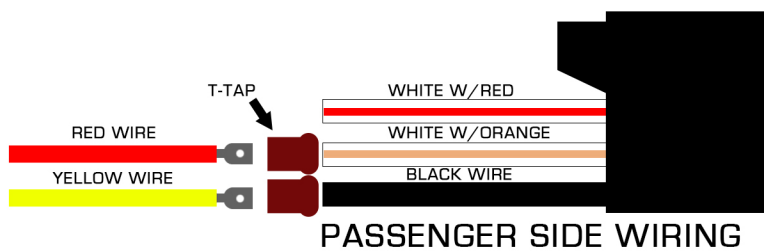

Re-install Parking Light Bulbs into grill, and re-install grill.



To adjust your headlight beam up or down, use T-15 Torx shown here.