






**CHECK OUT THE
INSTALL VIDEO**

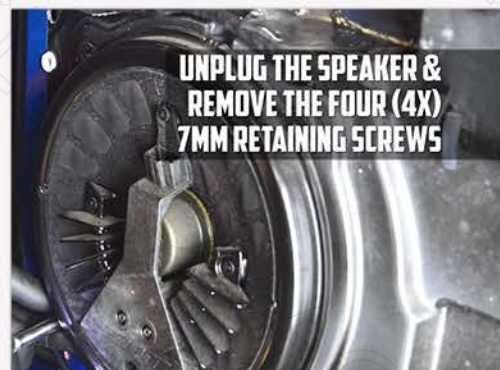

TOOLS: T-TAPS, SCREWDRIVER, 7MM, 10MM SOCKET,
T-30 TORX BIT. OPTIONAL: POWER DRILL

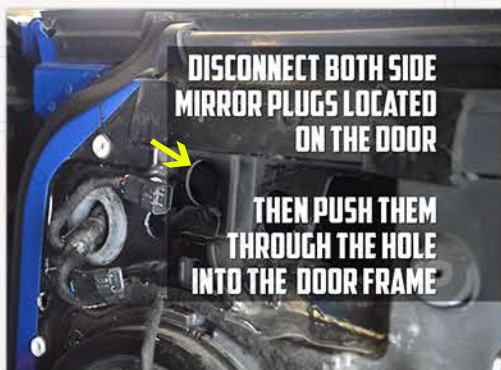

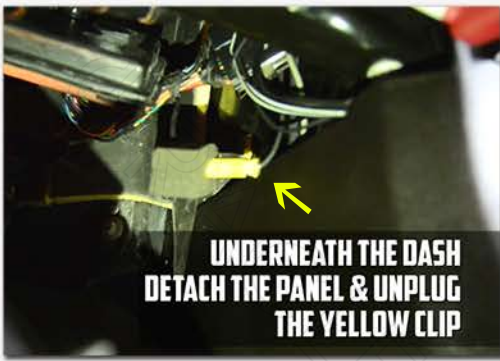

**UNDERNEATH THE DASH
DETACH THE PANEL & UNPLUG
THE YELLOW CLIP**



**THEN BRING THE WIRE
THROUGH THE SPEAKER HOLE**



**UNSCREW THE THREE (3X)
10MM BOLTS HOLDING THE
STOCK SIDE MIRROR IN PLACE**



**THEN REMOVE THE
STOCK SIDE MIRROR &
PULL THE HARNESS THROUGH**



**GUIDE THE NEW ORACLE
HARNESS INTO THE DOOR
FRAME & SET YOUR
MIRROR INTO PLACE**




**REINSTALL THE THREE (3X)
10MM SCREWS INTO THE
BASE OF THE SIDE MIRROR**

**THEN RECONNECT THE
PLUGS INTO THEIR
RESPECTIVE CONNECTORS**



**TO GROUND THE ORACLE SIDE MIRROR,
RUN THE BLACK WIRE ALONGSIDE
THE CORVETTE DOOR HARNESS**

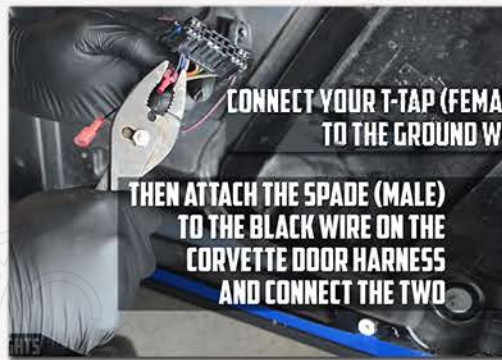

**CONNECT YOUR T-TAP (FEMALE)
TO THE GROUND WIRE,
THEN ATTACH THE SPADE (MALE)
TO THE BLACK WIRE ON THE
CORVETTE DOOR HARNESS
AND CONNECT THE TWO**



**TO HOOK UP POWER, FISH
THE RED WIRE (+) THROUGH
THE SPEAKER HOLE AND
THE DETACHED DASH PANEL**




**UNCLIP THE TRIM PIECE
ON THE BOTTOM OF
THE PASSENGER SIDE
DOOR FRAME
THEN LOOSEN THE TWO (2X)
T-30 SCREWS ON THE FLOOR
TO ACCESS WIRING HARNESS**



THIS BROWN WIRE WILL BE THE ONE YOU TAP INTO



**THE DRIVER'S SIDE, YOU WILL NEED TO LEAD THE
RED WIRE (+) THROUGH THE CENTER CONSOLE...**

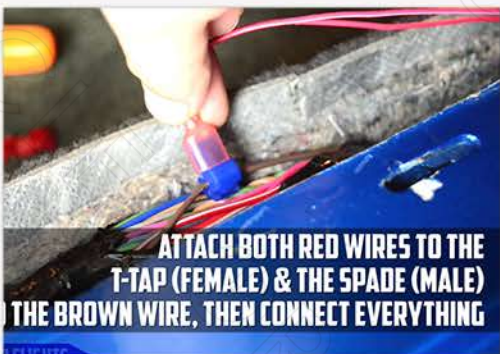

**ATTACH BOTH RED WIRES TO THE
T-TAP (FEMALE) & THE SPADE (MALE)
THE BROWN WIRE, THEN CONNECT EVERYTHING**



**GO AHEAD AND
TEST YOUR SIDE MIRRORS**

Once tested, work backwards to put things back

- Tuck wires into Corvette bed, tighten up the T-30 screws & reattach trim piece.
- Reinstall speakers w/ 7mm screws.
- Reconnect speaker plug.
- Connect door panel to Corvette door harness & snap the purple lock.
- Retattach the door panel to the door.
- Reinsert screws into door & attach door opener on passenger side.