



Illuminated LED Bowtie Installation Instructions



Remove the Existing Emblem:

- Heat the area with a hairdryer until the emblem and decklid are hot to the touch.
- Using fishing line start moving with a flossing action from tip to tip.
- Remove residue with WD-40, Goo-Gone, or a Rubber Wheel.
- Wipe the now clean area with alcohol to remove residue and prepare the surface.

1) Install the LED Emblem:

- Route the power wire through the existing deck lid hole and feed excess through.
- Remove the adhesive backing and line the bowtie up using the holes for reference.
- Press the wing to the trunk lid surface for 10-15 seconds to insure a proper bond.

2) Wire the LED Emblem to your Vehicle:

- Remove the inner trunk lid liner, there are 10 clips holding it in place.




- Remove the tail light cavity cover (3 Clips).
- Now route the wire through the trunk lid and into the tail light cavity.



- Unplug the taillight and take note of the wiring going into the Taillight Plug.

BROWN/WHITE..... = Parking Light
BLACK (SOLID)..... = Shared Ground
GREEN/WHITE..... = Brake Light

- If you Plan to install the Dual Intensity Circuit Please refer to the instructions in order to connect the unit to function as both Brake Light and Parking Light.

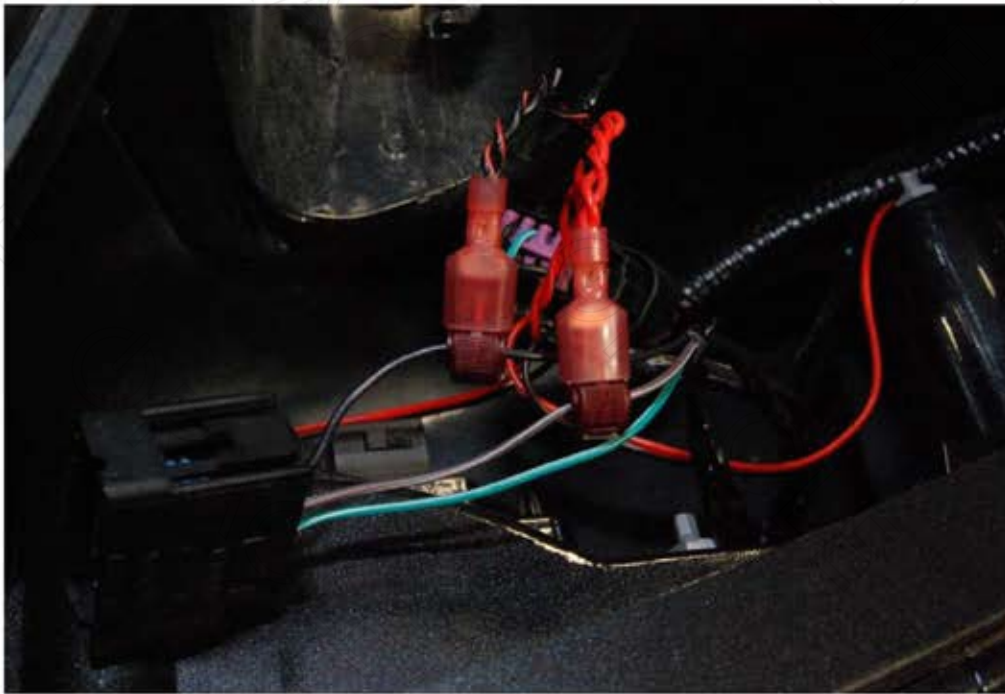

- Turn On your Vehicles Headlights and Check to be sure the unit Illuminates.
- Reinstall Your Panels Using the Factory Clips and Plug the Taillight Back In.
- For any Technical Assistance Please Call AAC at 1(800)407-5776