



ORACLE LIGHTING

FORD ILLUMINATED EMBLEM

INSTALLATION GUIDE

TOOLS NEEDED:

- FISHING LINE
- SOLVENT
- HEAT SOURCE
- T-TAPS
- MULTIMETER
- DRILL/OR DREMEL TOOL




1

BEGIN BY REMOVING THE FACTORY BADGE. IT HELPS TO FIRST HEAT THE AREA TO SOFTEN THE FACTORY ADHESIVE. YOU CAN USE A HEAT GUN OR EVEN A HAIR DRYER.



2

NOW USING A PIECE OF FISHING LINE, BEGIN AT ONE END OF THE EMBLEM AND WORK YOUR WAY TO THE OPPOSITE SIDE USING A BACK AND FORTH MOTION, UNTIL BADGE IS REMOVED. TO REMOVE THE EXCESS ADHESIVE, USE A TYPE OF ADHESIVE SOLVENT. MAKE SURE THE SOLVENT WILL NOT DAMAGE THE PAINT ON YOUR VEHICLE.

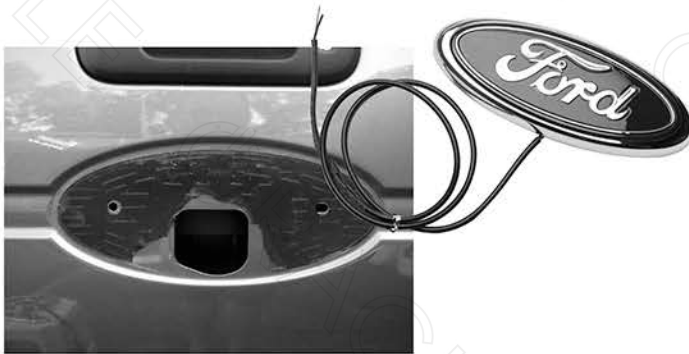

3

DEPENDING ON THE TYPE OF VEHICLE YOU MAY NEED TO DRILL A SMALL HOLE INTO THE VEHICLE IN ORDER TO ROUTE THE POWER WIRES OF YOUR EMBLEM TO YOUR BRAKE LIGHT ASSEMBLY.




4

CLEAN THE SURFACE OF THE VEHICLE WITH AN ALCOHOL SWAB. REMOVE THE BACKING EXPOSING THE 3M ADHESIVE, AND PLACE THE EMBLEM IN POSITION. HOLD FOR 10-15 SECONDS TO INSURE A PROPER BOND.



5

LOCATE THE PASSENGER SIDE REAR LIGHTING PLUG. THIS IS WHERE YOU WILL USE T-TAPS TO TAP INTO THE VEHICLE'S EXISTING WIRING. ON YOUR EMBLEM, THE RED WIRE WILL BE YOUR (+) AND THE BLACK WIRE YOUR (-)

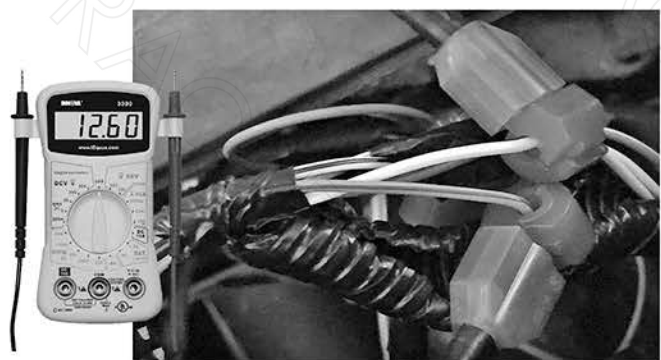

6

USING A MULTIMETER, TEST YOUR VEHICLE'S WIRING TO LOCATE THE PARKING LIGHT WIRING AND THE BRAKE LIGHT WIRING. TAP INTO THE PARKING LIGHT WIRING FOR CONSTANT ILLUMINATION; TAP INTO THE BRAKE LIGHT WIRING FOR ILLUMINATION WHEN BRAKING.

FOR TECH SUPPORT PLEASE CALL 1-800-407-5776