

COWBOY*

**Riding
in
the
rain.**

Front fender bag

Original manual

French version of this manu

<https://cowboy.bike/pages/downloads>

Dutch version of th

<https://cowboy.bike/pages/downloads>

The product: bicycle with electric pedal assistance, Model: Cowboy Model A1 is in compliance with directives 2006/42/EU, 2011/65/EU, 2014/53/EU, 2014/30/EU. To see the

<https://cowboy.bike/pages/downloads>

Cowboy S.A.

67 rue de la Régence
1000 Brussels, Belgium

www.cowboy.bike



x1

– M6 x 65



x1

– M6 x 20



x1

– M5 x 5
Round Head



x2

– M5 x 15



x1

– M6 Nut



x1

– M5 Nut



x3

– 1 mm Washer

Rear fender bag

Tools



x1

– M5 x 5
Round Head



x2

– M5 x 15



x2

– M5 x 12



x1

– M5 Nut



x3

– 1 mm Washer



x2

– 5 mm Washer



– 4mm Allen key
(small)



– 5mm Allen key
(large)




– 8mm Wrench




– 10mm Wrench

01. Assembling the front fender

To mount the front fender on the bike, you need the **shorter fender** and the **shorter stay**.

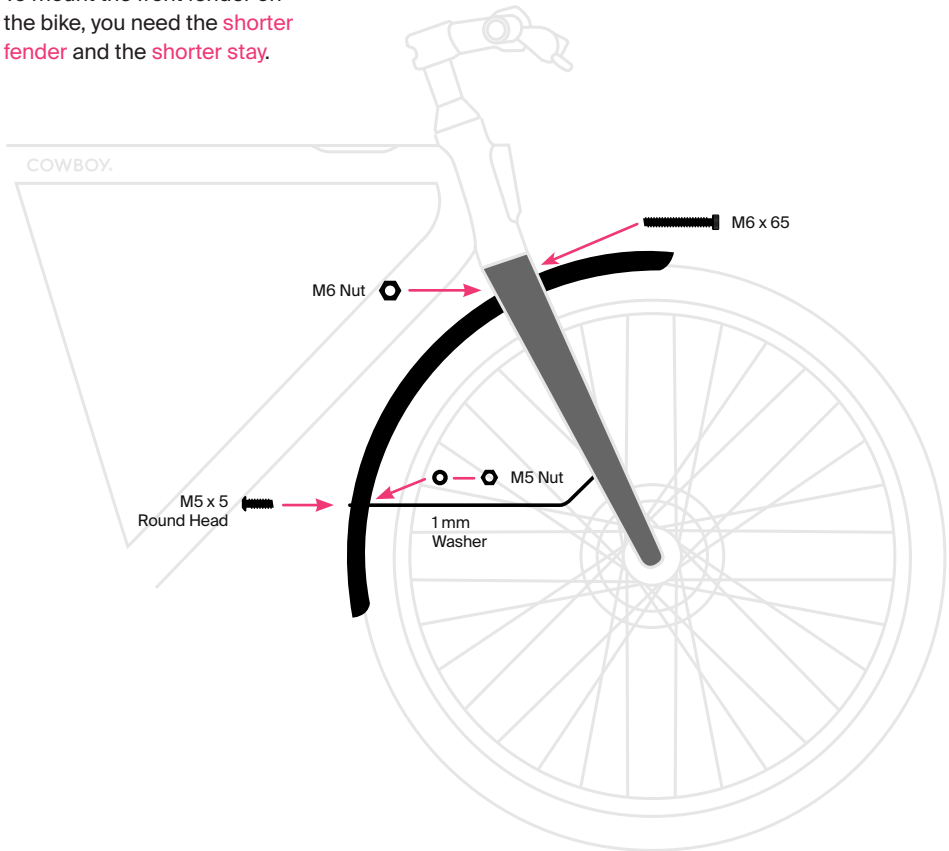

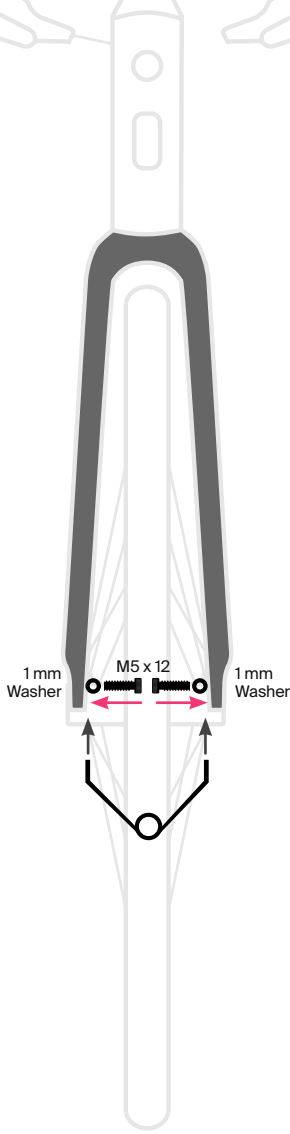

Instructions


Tools Needed:

- 4 mm Allen
- 5 mm Allen
- 8 mm Wrench
- 10 mm Wrench

01. Attach the fender stay to the fender using the M5 x 15 round head screw, 1 mm washer and M5 Nut. The nut should only be tightened slightly using an Allen 4 key and the 8 mm wrench.
02. Watch out, variant in function of the bike's production batch:
 - Batch 1-1000 - Attach the fender's top to the fork using the M6 x 65 screw and M6 Nut, using an Allen 5 key and a 10 mm wrench.
 - Batch 1001 - 2000 - Attach the fender's top to the fork using the M6 x 65 screw using an Allen 5 key from the back of the fork's crown.
03. Attach the fender's stay to the fork using two M5 x 15 screw and two 1 mm washers using an Allen 4 key.
04. Make all the final adjustments for a perfect fit. Secure in place by tightening the nuts with 2 Nm on the bolts.
05. Place the wheel back on the bike and verify everything fits.

02. Assembling the rear fender


To mount the rear fender on the bike, you need the **longer fender** and the **longer stay**.

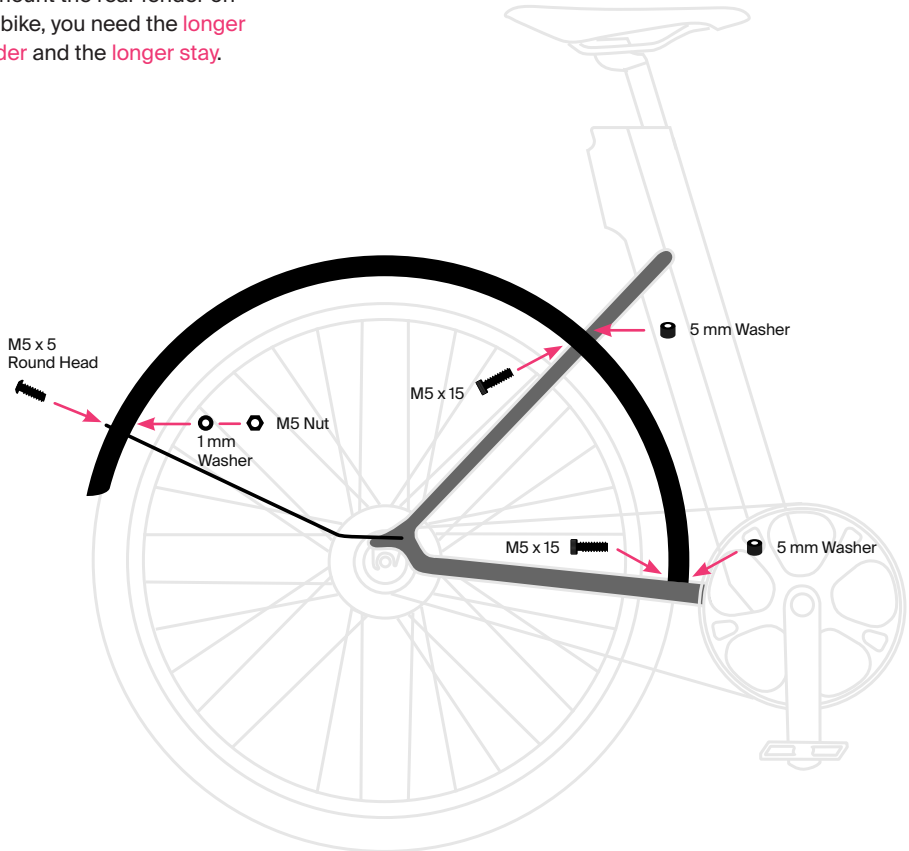


Instructions

Tools Needed:

- 4 mm Allen
- 5 mm Allen
- 8 mm Wrench
- 10 mm Wrench

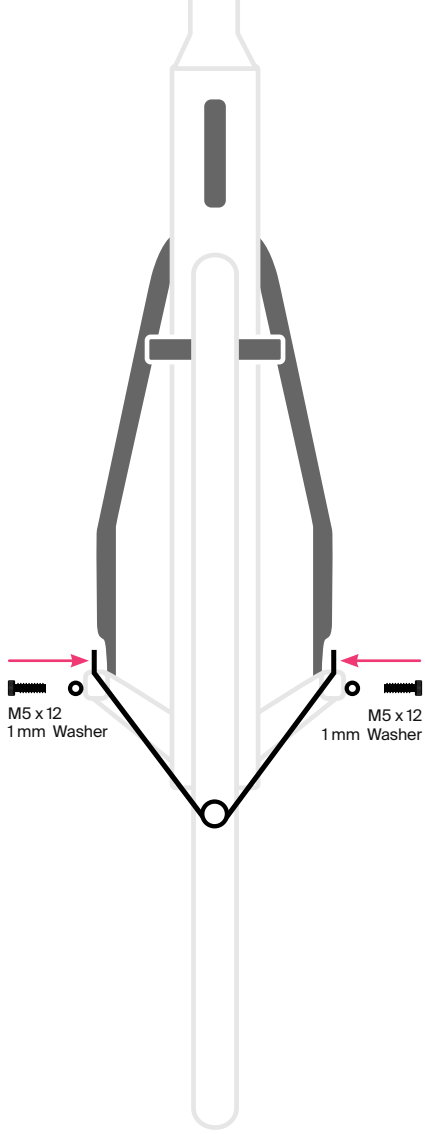

- 01.** Attach the fender stay to the fender using the M5 x 15 round head screw, 1 mm washer and M5 Nut. The nut should only be tightened slightly using an Allen 4 key and a 8 mm wrench.
- 02.** Attach the fender to the bridge
 - TOP - Using one M5 x 15 screw and one 5 mm washer using an Allen 4 key
 - BOTTOM - Using one M5 x 15 screw and one 5 mm washer using an Allen 4 key.
- 03.** Attach the fender's stay to the fork using two M5 x 12 and two 1 mm washers using an Allen 4 key.
- 04.** Make all the final adjustments for a perfect fit. Secure in place by tightening the nuts with 2 Nm on the bolts.
- 05.** Place the wheel back on the bike and verify everything fits.

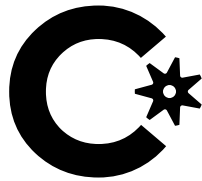

www.cowboy.bike