


# Assembly Directions for Swings

#PLTS4800, #PLTS6000, #PCTS4800, # PCTS6000, #PZTS4800, # PZTS6000

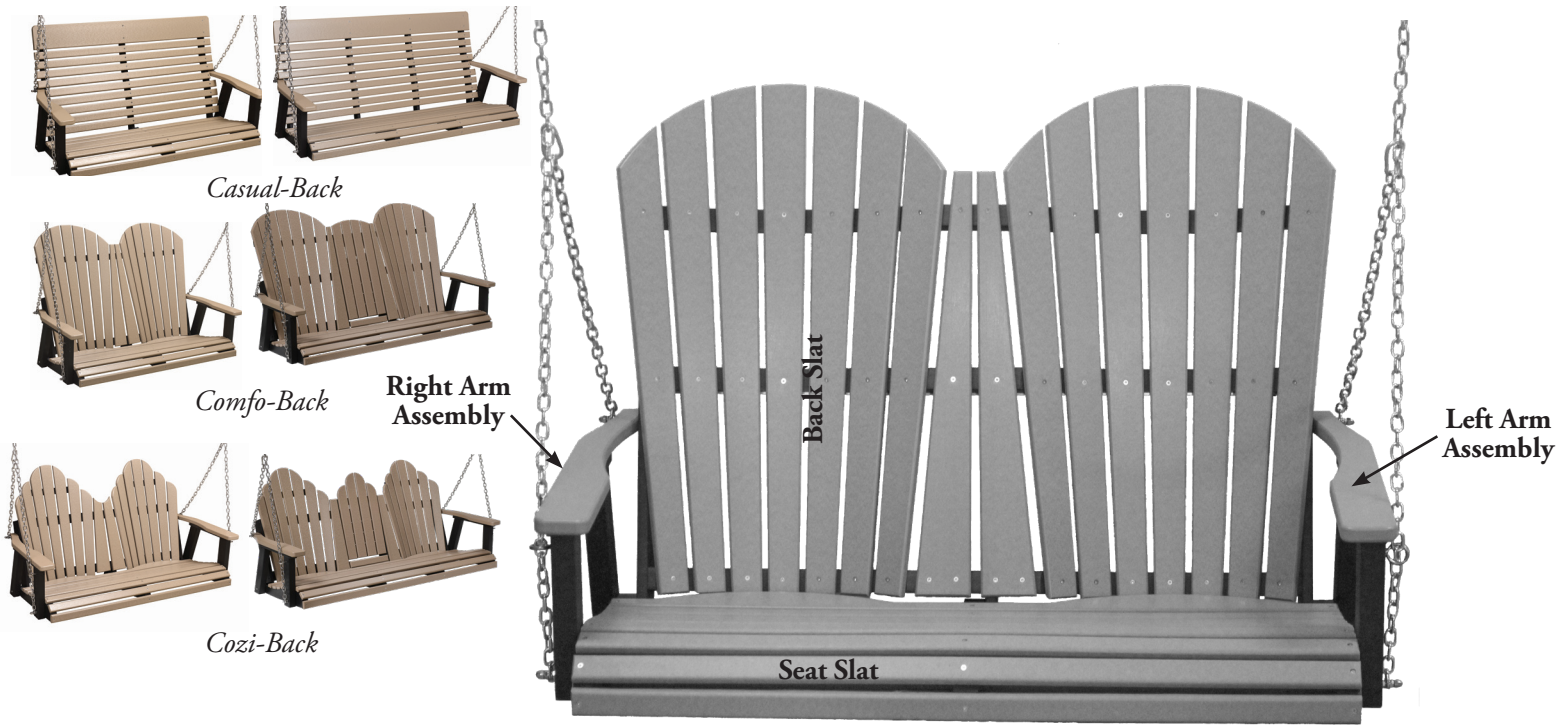

## PACKAGE CONTENTS


- 1 Back
- 1 Seat
- 2 Arms
- 1 Hardware Package

## HARDWARE PACKAGE


- 2 5/16" x 3 1/2" Allen Head Bolts
- 2 5/16" x 4" Allen Head Bolts
- 2 1/4" x 4 1/2" Allen Head Bolts
- 2 1/4" x 3" Allen Head Bolts
- 4 5/16" Flange Nuts
- 8 5/16" Washers
- 4 5/16" Lock Nuts
- 3 1/4" Flange Nuts
- 2 5/16" x 2 1/2" Eye Screws
- 4 5/16" Acorn Nuts
- 1 Allen Wrench

## TOOLS NEEDED:

- Hammer
- 7/16" Wrench
- 1/2" Wrench
- Allen Wrench (Included)




Use to measure bolts

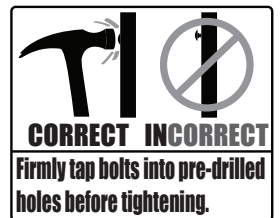


## STEP #1 -

Attach the Arm Assembly to the Seat and Back using a 5/16" x 4" Allen Head Bolt at the seat, a 5/16" x 3 1/2" Allen Head Bolt at the Arm and a 1/4" x 4 1/2" Allen Head Bolt connecting the Arm Assembly to the Seat and Back. Attach middle back support to seat support using (1) 1/4" x 3" Allen Head Bolt (**Note: for 3 seat swings, 2 bolts are required**).


Please note: See diagram for direction of bolt.

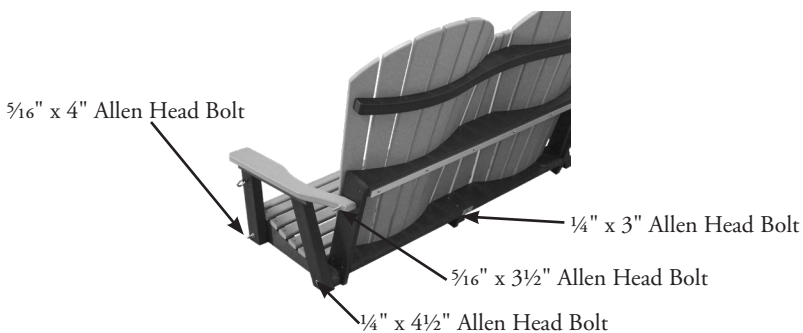

**STEP #2 -** Repeat Step 1.

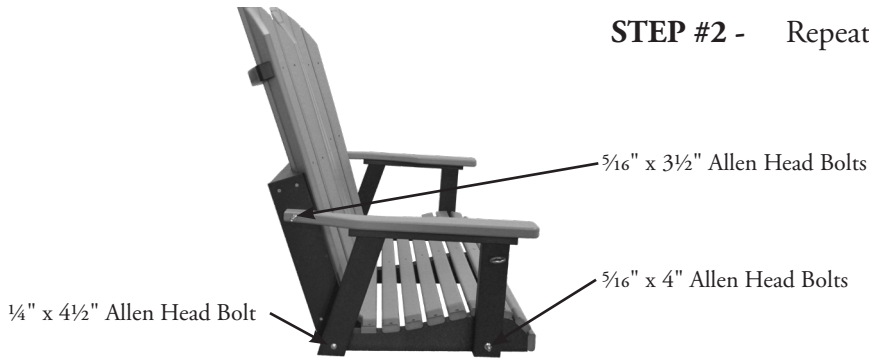

**STEP #3 -** Install the two Eye Screws into the pre-drilled holes (see Diagram C). Attach the chain to the Allen Head Bolts using Washers and Lock Nuts (see Diagrams A and B).

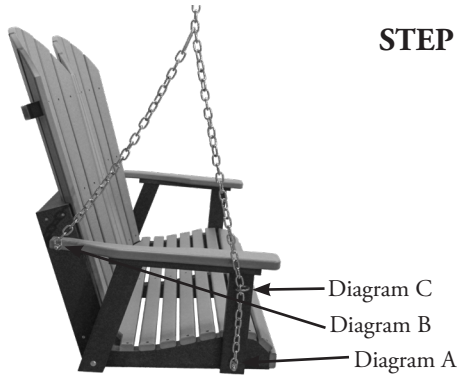

**STEP #4 -** Repeat Step 3.

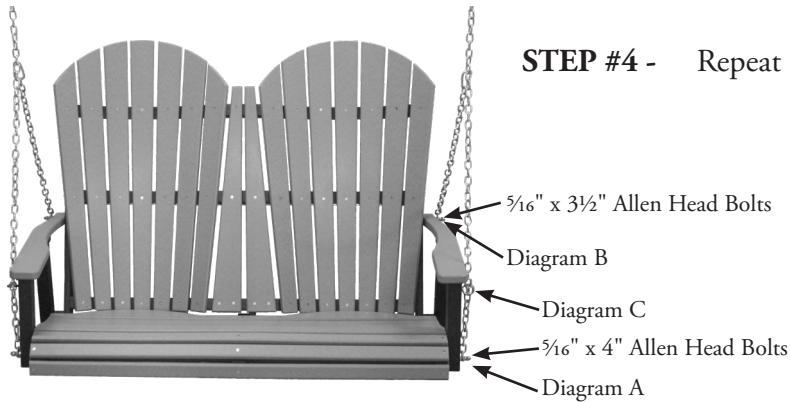


Diagram A

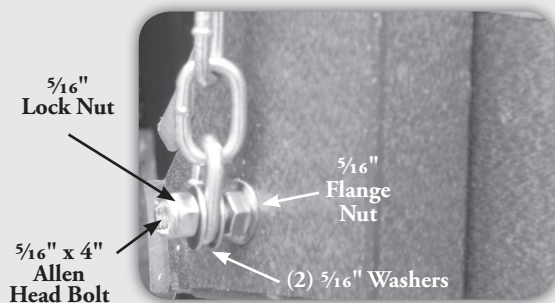


Diagram B

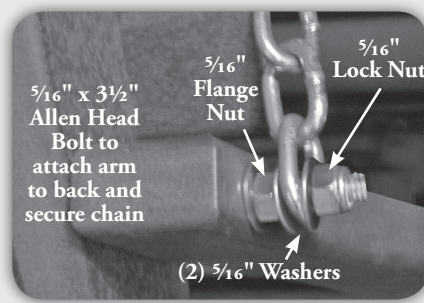


Diagram C

