


# Assembly Directions for Deck Chairs and Rockers

#PCTC2400, #PCTR2400

**STEP #1** - Attach the Arm Assembly to the Seat and the Back using 1- ¼" x 4½", 1- ¼" x 3½", and 1- ¼" x 3" Allen Head Bolts.

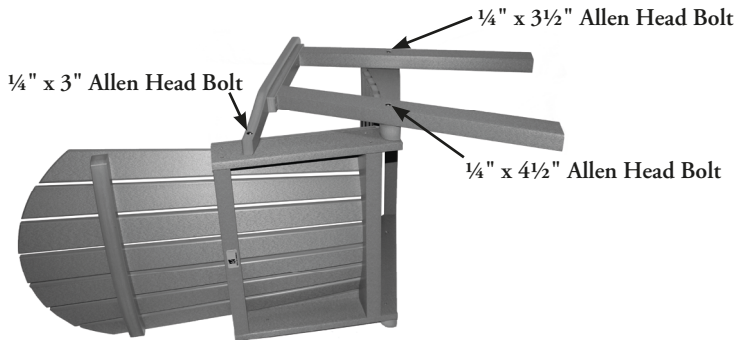

**STEP #2** - Repeat step one.



**STEP #3** - Your Chair is complete!



## PACKAGE CONTENTS


- 1 Back
- 1 Seat
- 2 Arms with Legs
- 1 Hardware Package

## HARDWARE PACKAGE

- 2 ¼" x 4½" Allen Head Bolts
- 2 ¼" x 3½" Allen Head Bolts
- 2 ¼" x 3" Allen Head Bolts
- 6 ¼" Flange Nuts
- 1 Allen Wrench

## TOOLS NEEDED:

- Hammer
- ⅜" Wrench
- Allen Wrench (Included)



Use to measure bolts