
1,Open the box, get all spares out. See pic 1A. 1B,1C,1D

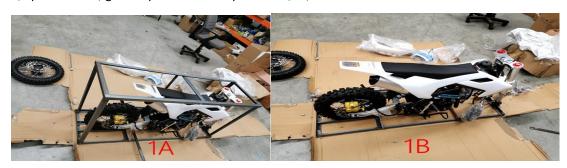



2, Install handlebar (4 bolts with brackets). See pic 2A



3, Install the rear shock. See pic 3A,3B.



4, Install the front guards for front forks and fix the brake pipe. Put stickers on at the same time. See pic 4A, 4B, 4C,4D.





5, Install the front mudguard and number plate. See pic 5A, 5B.



6, Install the front wheel. The longer spacer is located the disc side. The shorter spacer is on the other side. After tight the nuts, please spin the front wheel to check it. See pic



7, Install the gearshift lever, footrests and fuel pipe. See pic 7A, 7B.7C.



8. put the foam pad/chest protector on. See pic 8A,.



9, Assembly is finished. Stick stickers on the bike. See pic 9A.



10. Fill petrol into the tank (Unlead 91, no Octane or E10), check the engine oil level, , key is on, kill switch is on, then kick it to start/press start button.(please let choke on for cold day). Helmet/long sleeves/long pants/enclose shoes are required.