



Correx Nuc Box Assembly Guide

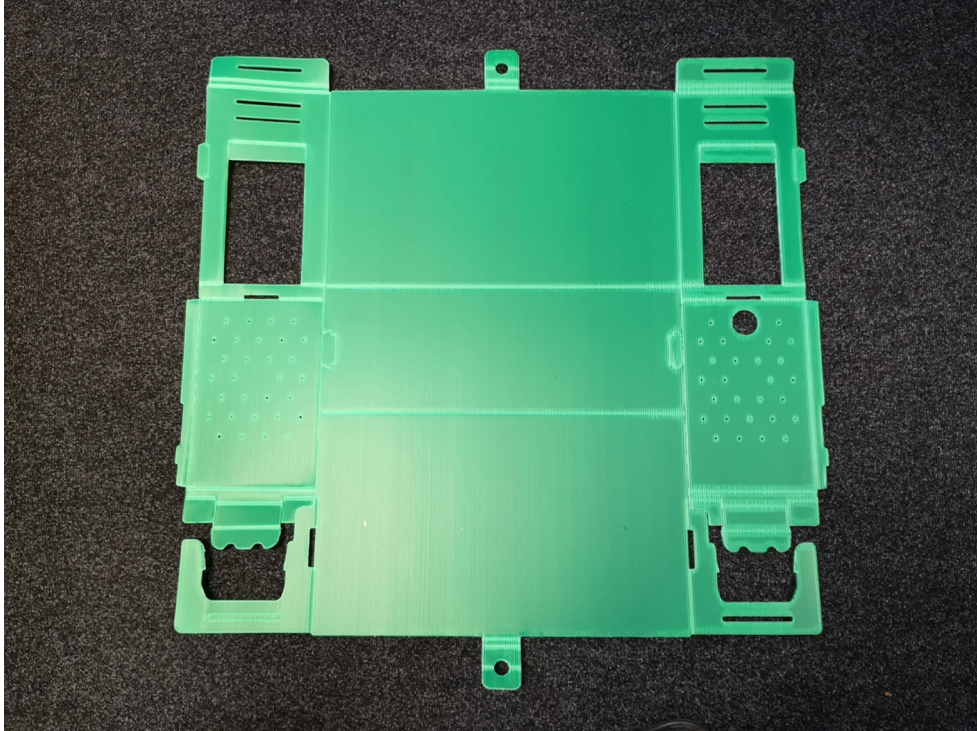


- Lay product on flat surface



- Remove any un-stripped sections

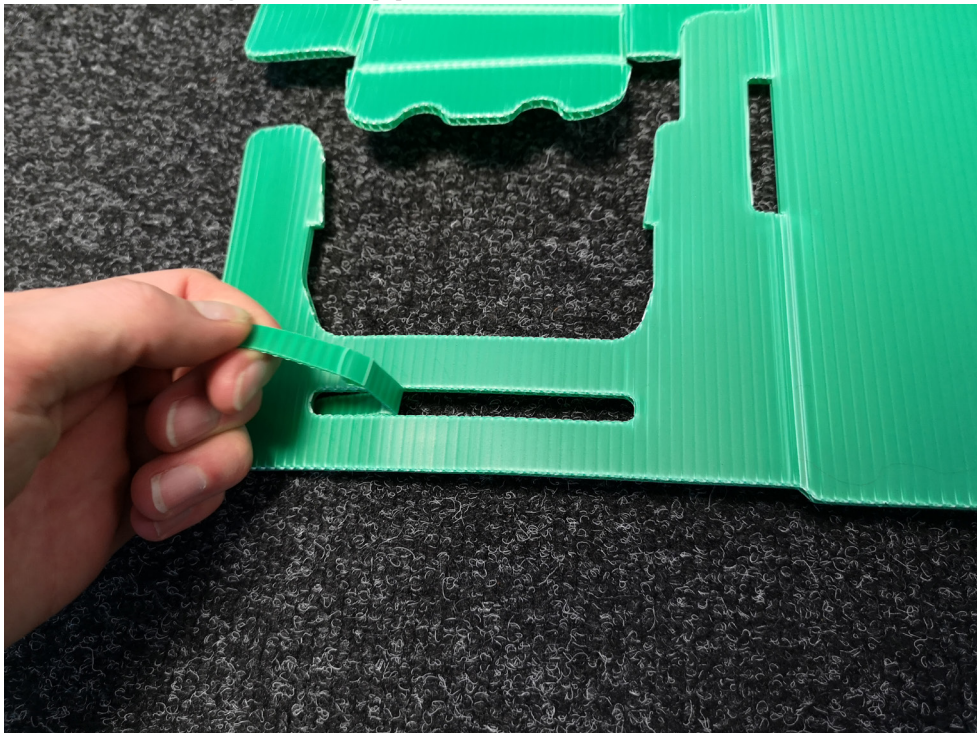

- Poke out air vent holes

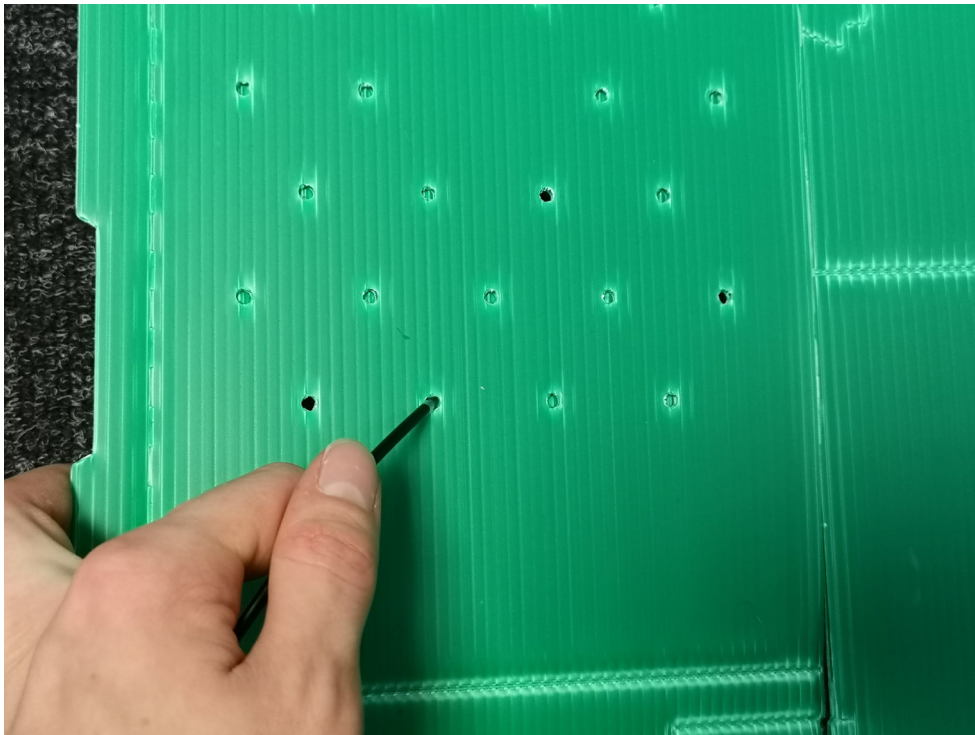


- Fold one side in and at a right angle as below




EQUIPMENT

- Fold side upward to align vent panel to base

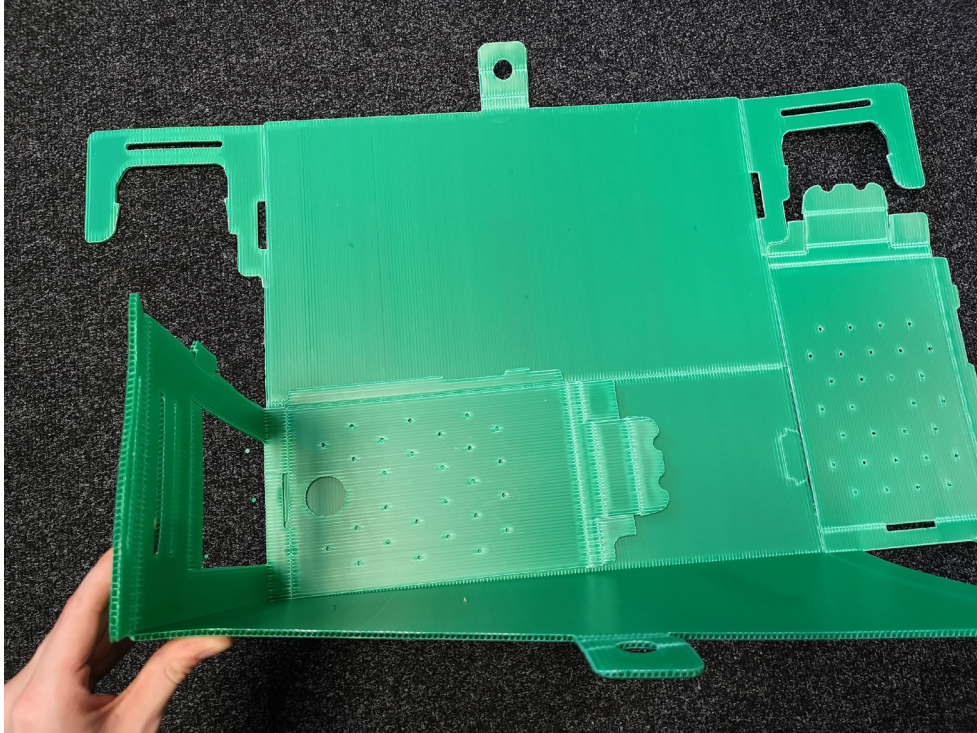


- Align base tab to slot



- Pull tab through until locks click



- Repeat to other side

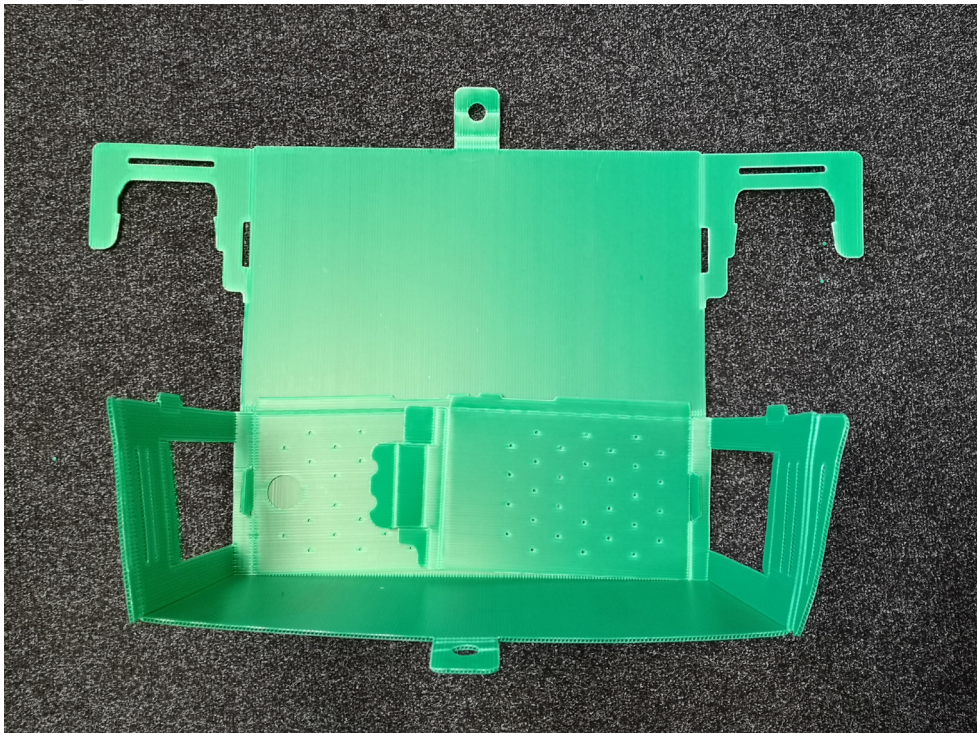


EQUIPMENT

- Raise end panels to the internal sides of Nuc box



- Align dagger lock with slot



- Push dagger lock through slot until click




- Repeat to other side



- Align side slots and fold over top tab into place



- Raise panel and push tab partially through all 3 slots

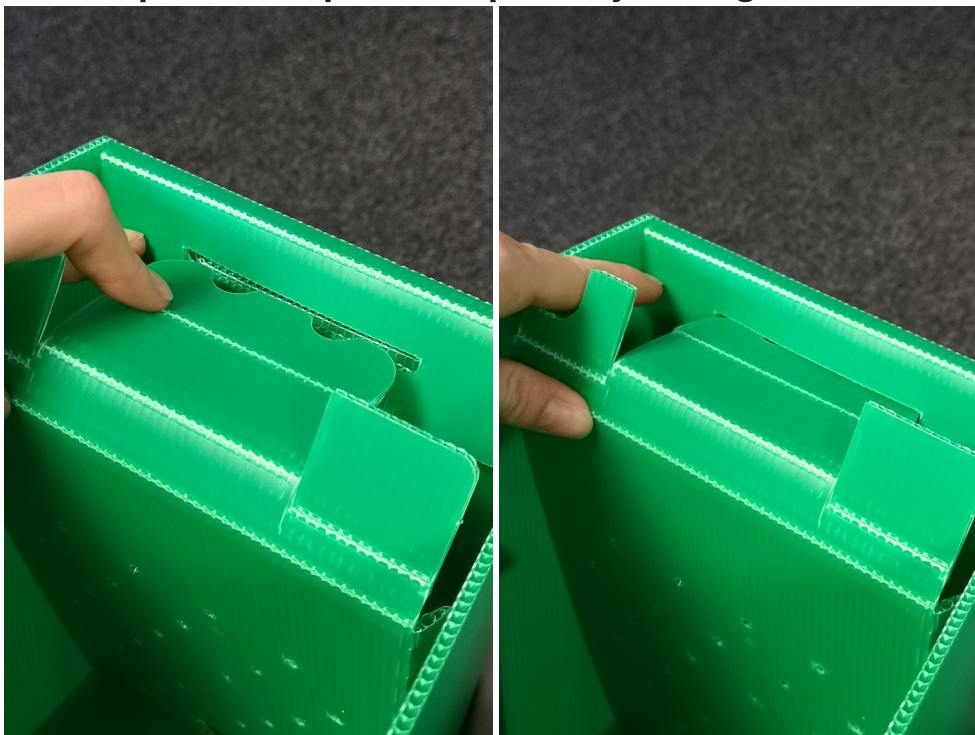


- Push raised flaps into cavity below




- Push remaining length fully through the slot




- Push extended tab partially into lower slot

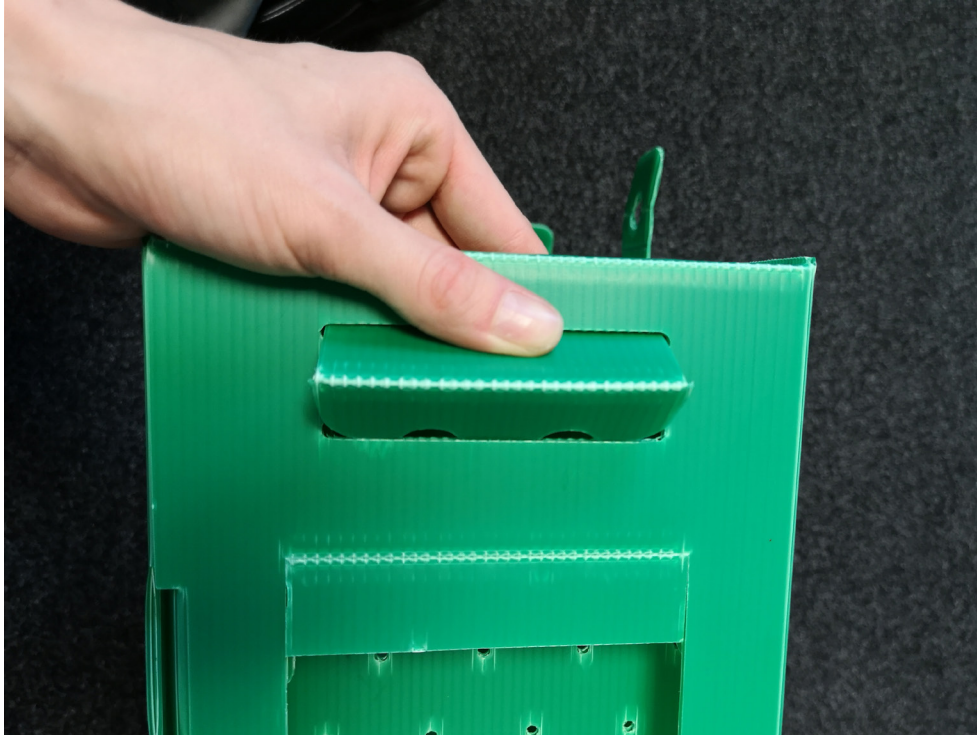


- Pull tab from behind, and push from above until flat

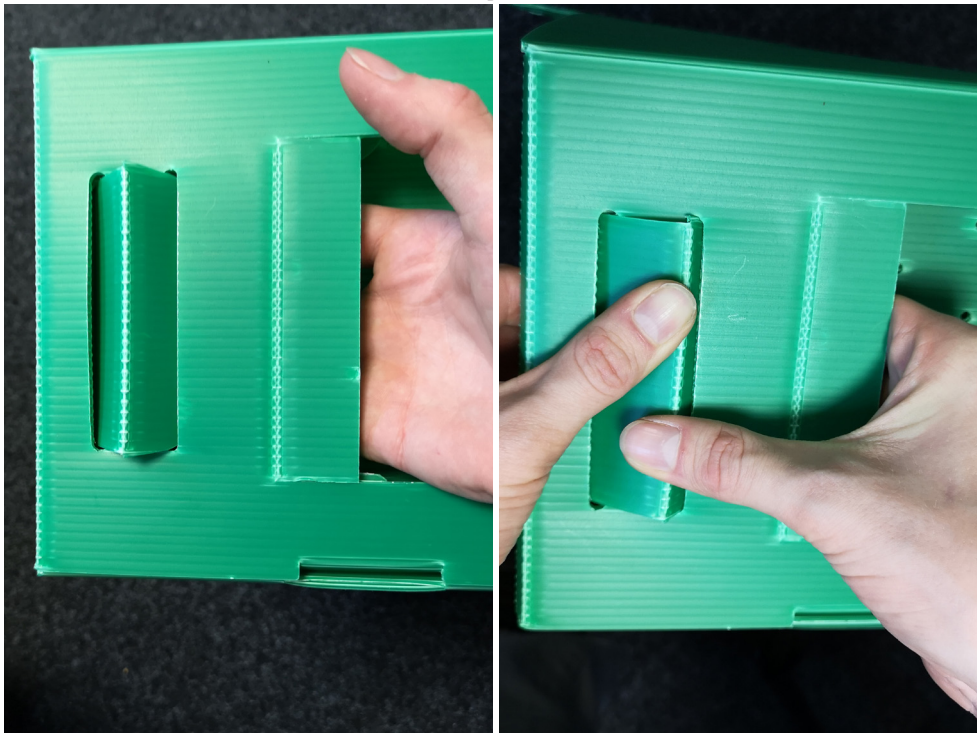

- Push handle tab up until locked

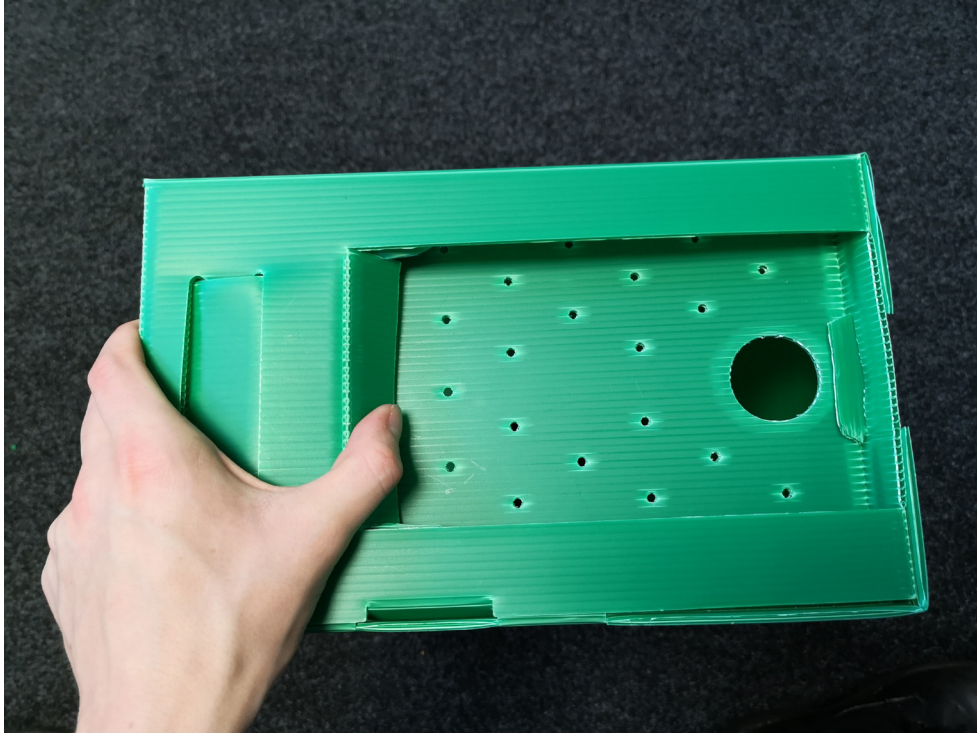

- One side is now complete

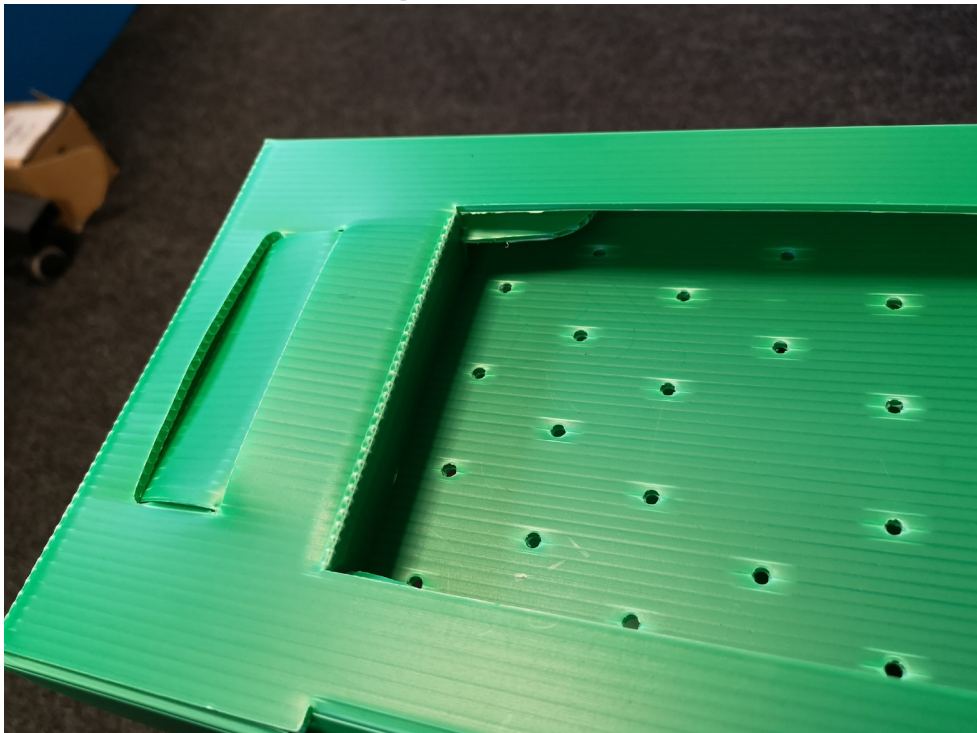

Bee
EQUIPMENT

- Repeat instructions to other side



- This completes this section of the product

