


SUV DOME TENT

PACKAGING CONTENTS

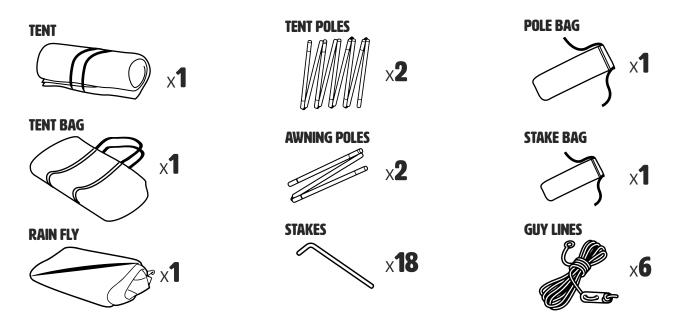

YOUR TENT MAY LOOK DIFFERENT IN THE PICTURES BECAUSE PICTURES ARE FOR ILLUSTRATION PURPOSES ONLY.

SCAN THE OR CODE FOR MORE INSTALLATION INSTRUCTIONS

Need installation help? Missing parts? Text us to (360) 215-3930 or email us to questions@offroadinggear.com.



! WARNING! NEVER RUN VEHICLE WITH THE TENT INSTALLED

Never run the vehicle with the tent installed to avoid the danger of carbon monoxide poisoning. Ensure the cargo area sleeve is installed over the exhaust pipes. Do not have the exposed exhaust pipes facing into the tent.



- Keep flame and all other heat sources away from the tent fabric. The tent is made with flame-resistant fabric which meets CPAI-84 specifications but this does not make it fireproof. The fabric will burn if left in contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant property ineffective.
- To prevent carbon monoxide from entering the vehicle and tent area, do not run the engine, do not cook inside the tent, and do not use a gas heater in the tent. Carbon monoxide is dangerous to your health.
- Engine must be off and exhaust must be fully cooled before tent installation and use.


CAUTION


- NEVER run the engine while the tent is installed.
- Do not refuel lanterns, stoves, or heaters, inside tent.
- Do not cook inside the tent.
- Do not store flammable liquids inside the tent.
- NEVER allow the vehicle engine to run while you are inside the tent
- Do not install the tent when the outside temperature is less than o°C/32°F as it may cause damage.
- Do not install the tent when your vehicle is wet as it may cause damage.

CHOOSING A CAMPSITE

- Select a level site clear of rocks, branches, and other hard or sharp objects, to set up your tent.
- Position the vehicle in the desired campsite. Turn off the engine and apply the parking brake.


SETTING UP THE TENT

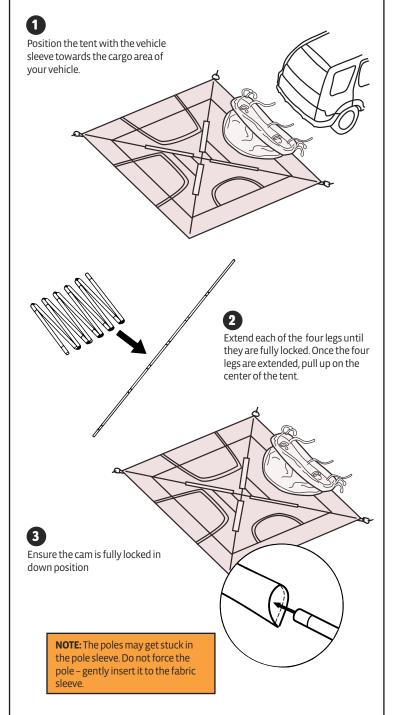

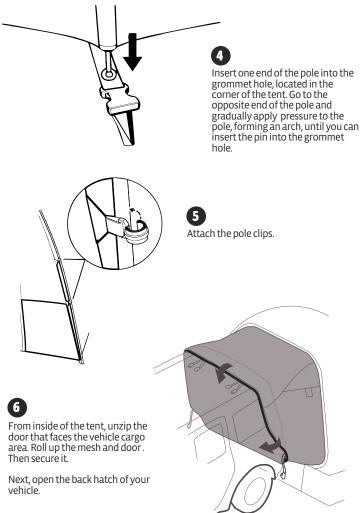

0

There is an elasticized sleeve that goes around the bumper of your vehicle. Slide this around the bumper. There is also a clip on the elasticized sleeve that can be secured to the hatchback latch.

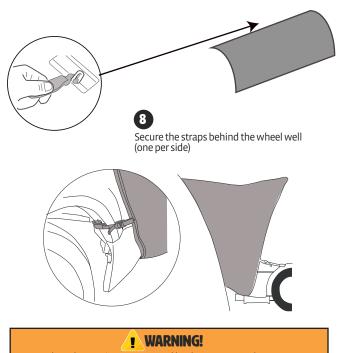

Ensure the exhaust pipes are covered by the cargo area sleeve. DO NOT have the exposed exhaust pipes facing into the tent.

