
Whistler light box frame set up instructions




1. Insert screws through bottom of feet.



2. Place screws through holes on the bottom extrusion. (Bottom extrusion has holes for feet and 2 transformers mounted to it)

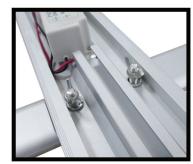

3. Place crush washers and wing nuts onto screws.

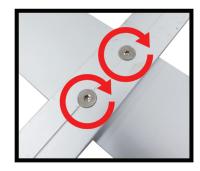

4. Insert screws through bottom of feet. Tighten screws with included tool. Repeat steps for other foot.



5. Insert tool free corner connectors into both ends of bottom extrusion.



6. Slide lower vertical extrusions onto the corner locks and then press down latched to lock into place. (note 1 extrusion with have a power button wiring to connect to the transformer)



7. Repeat step 4 and 5 to complete construction of the bottom half of the frame.



8. Insert tool free corner connectors into both ends of top extrusion.



9. Slide upper vertical extrusions onto the corner locks and then press down latched to lock into place.



10. Insert tool free straight connector into the top of the lower half of the extrusion and then press down lower latch to lock into place. Repeat for other side.



12. Insert teeth of middle support bar into groove above the tool free straight locks and then tighten lock with included tool to secure support bar. Repeat for both locks.




13. Completed frame. See light install instructions for how to install and connect lights.



11. Slide top section onto the tool free straight locks and press down latch to lock into place.

Whistler light box LED light installation

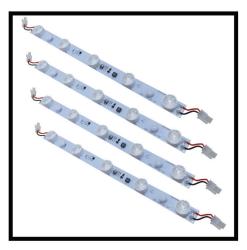


1. Start by installing the first 4 light strips onto the left side of the frame.



2. Align hammerhead screw with channel on the frame and insert it. (make sure male plug is towards the bottom of the frame.)




3. Turn both of the screws clockwise to lock lights into place.

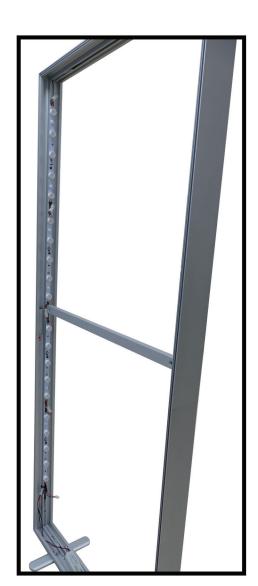

4. Frame with light strips installed. Each side (left and right) receives 4 light strips.



5. Plug male bottom male connector into female connector to connect light strips.

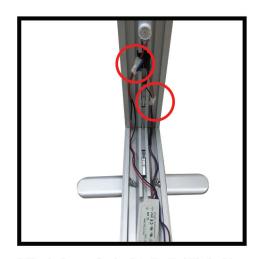

6. Plug bottom male plug into The Red/Black wiring and the wiring from the power plug into the blue/brown wire coming from the transformer.



7. Plug bottom male plug into female plug of the other transformer.



8. Insert power cord into switch to complete frame assembly and light installation.