




OG Softail FXLRS Carbon Fiber Fender Kit Installation For 2020+ models

1. Before you start your new kit installation, you will need to remove your stock Front fender. Keep all OEM front fenders screws as you will use these for your new OG shorty fender kit installation. We recommend cleaning the OEM screws threads before re using them.
2. Assemble both fork carbon lowers lower fender billet brackets onto the fender using some blue/medium force threadlocker on all (4x) supplied stainless steel button head screws. Hand tight 4x bolts so the fender do not move loose in the brackets adjustment. Tight it so you are still able to move it by pulling with your hands using some very light force. Fender lowers on the outside of the fender, billet threaded inserts on the inside of the fender. Refer to picture below.



3.

****Make sure to have the short portion pointing toward the front of the bike. See pictures below.****

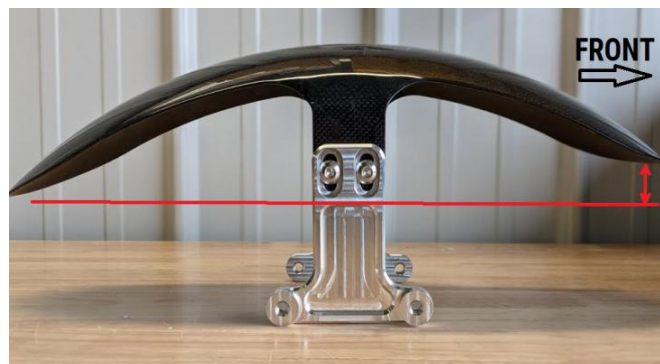



4. Install your fender kit onto the forks lowers using OEM hardware (4x screws). Just thread the bolts in so the fender hold onto the bike. At this point you want to adjust the fender clearance & angle by pulling onto the fender so it move within the adjustment. Once you are happy with the fitment/adjustment, remove the fender gently from the bike by removing the OEM hardware (4x screws).
5. Torque (4x) supplied stainless steel button head screws to 10 ft-lbs.
6. Using some blue/medium force threadlocker on all (4x) OEM fender mounting screws re install your fender kit onto the forks lower using OEM hardware. Torque to 15 ft-lbs all 4x OEM screws.



7. Wait ~24h for the threadlocker to dry before riding. Enjoy!