

How to assemble your tricycle

Bobbin<sup>®</sup>

## **Introduction**

Congratulations on getting a new Bobbin!

Parenting level = Elite!

Assembling a Bobbin tricycle is easy, fun and quick.  
Here's our step by step guide to getting it ready for its first ride.

Happy Cycling this way!

## **Tools**

You'll need the following tools for this assembly. Some basic tools are provided in the box.

- 10mm spanner
- 13mm spanner
- Medium slot-head screwdriver
- Hammer

## Rear Wheels Assembly Classic Tricycle

(skip this step if you have Messenger Tricycle)

Remove all the items from the box and lay out on a large table



## Rear Wheels Assembly Classic Tricycle

(skip this step if you have Messenger Tricycle)

1. Thread the long metal axle through one of the rear wheels taking care to note the correct orientation of the wheel
2. Then thread the axle onto the main frame of the tricycle
3. Add the second wheel, again taking care to fit it the right way around
4. Once you have checked both wheels are correctly positioned, place the silver metal axle cap over the end of the axle. Use the black protective plastic socket to cover the cap and tap it securely in place with a hammer.




## Rear Wheels Assembly Messenger Tricycle (skip this step if you have Classic Tricycle)

Remove all the items from the box and lay out on a large table



## Rear Wheels Assembly Messenger Tricycle (skip this step if you have Classic Tricycle)

1. Find the hand brake lever and fit the grip to the cylindrical end (lubricate with water and use a quick swivel motion)
2. Fit the hand brake lever to the right hand side of the tricycle by the rear axle using the nut and bolt provided
3. Thread the long metal axle through one of the rear wheels taking care to note the correct orientation of the wheel
4. Then thread the axle onto the main frame of the tricycle
5. Add the second wheel, again taking care to fit it the right way around
6. Once you have checked both wheels are correctly positioned place the metal axle cap over the end of the axle. Use the black protective plastic socket to cover the cap and tap it securely in place with a hammer.

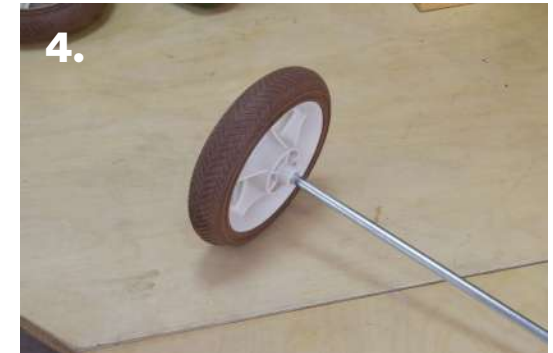

## Front Wheel Fitting Classic Tricycle

(skip this step if you have Messenger Tricycle)

1. Take the front wheel and feed it into the front fork. Use a screwdriver to secure the wheel in place on both sides
2. Take the front fork and press-fit the front mudguard





## Front Wheel Fitting Messenger Tricycle (skip this step if you have Classic Tricycle)

1. Fit the front wheel to the front fork. Use the screwdriver to secure the wheel in place on both sides
2. Observing the direction the front wheel should rotate, and positioning the longer side of the mudguard to the rear of the front wheel, take the front fork and press-fit the front mudguard



## Fork and Handlebar Fitting (same for both Tricycles)

1. Fit the fork through the head tube of the main frame, with the long side of the mudguard pointing back towards the rider
2. Insert the metal locking collar over the part of the fork steerer that has poked out of the top of the frame and gently hammer it down so it fits as low and snug as it can go
3. Fit the grips to the handlebars (lubricate with water and use a quick swivel motion)
4. Slide the coloured plastic cover onto the stem of the handlebar as shown
5. Insert the stem of the handlebar into the fork steerer and insert until the STOP marking on the stem is hidden inside the steerer
6. Align the bars so they aren't twisted
7. With the stem of the handlebar inserted in the steerer fasten the metal locking collar until it is tight and the handlebars cannot be twisted
8. Slide down the plastic cover over the metal locking collar



## Saddle and Seatpost Fitting Classic Tricycle (skip this step if you have Messenger Tricycle)

1. Insert the seat post into the frame, ensuring to insert at least to the minimum insertion mark.
2. Securely fasten the seat bolt



## **Saddle Fitting Messenger Tricycle** (skip this step if you have Classic Tricycle)

1. Find the seat and thread the bolts through the holes in the top
2. Position the seat on the frame, thread the bolts through the holes and fasten securely with the domed nuts provided



## Handle Fitting Messenger Tricycle (skip this step if you have Classic Tricycle)

1. Find the two pieces of handle and slot them together
- 2-4. Remove the plastic cap from the rear of the frame and insert the handle, ensuring the locking pin springs out through the hole at the bottom for security



## Final Check

Look at the pictures below. Check everything is tight and secure. Note: If you used water to attach the grips, you'll need to let it dry before riding.



**Congratulations.  
You just assembled your tricycle!**

**Share your photos @bobbincycles**