

RAM CONNECTOR INSTALL SHEET

INTRODUCTION

This document is to be used for installing Ram Connectors in handlebars and Accutrak crossbars


TOOLS REQUIRED

- Hammer
- 9/16 wrench

ACTIVITY/PROCESS

To replace a damaged or missing ram connector:

1. If ram is damaged either remove connector or tap the existing connector deeper into the tube. You will need to tap it in deep enough for the new connector to not make contact with it. To start, the tube should look empty. **(Figure A)**

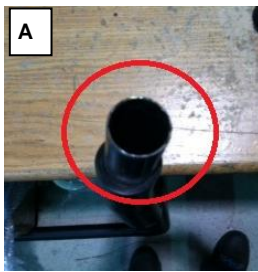

2. Screw the mounting bolt into the ram connector. **(Figure B)**
3. Tap the ram connector into the tube until it is about 1/4" from the end of the tube. **(Figure C)**
4. This is what it should look like when done. **(Figure D)**