


CODE


Acacia Instruction Guide

The following is an installation guide for the arch and rectangular Acacia exposed shower niche.

Arch

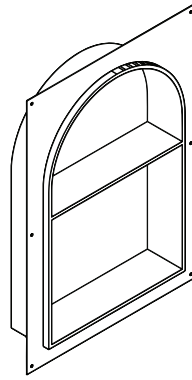

Rectangle

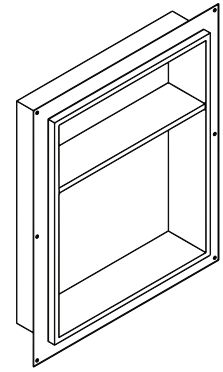

1. Unwrap the niche and check it over for any damage or manufacturing defects – If you are concerned at all please advise the retailer for a replacement – Once these items are installed it is a costly process to swap these out.
2. Plan exactly where you want the Niche situated – taking in account the tile size and tiling layout, you don't want any unsightly tile details once finished – sometimes it pays to check with your tiler on his expectations prior to deciding on exact placement.
3. Build a suitable sized picture frame for the Niche to fit into – allowing a 5mm gap right round to help with levelling the shelves perfectly when screwing into place.
4. Gib or villa board the walls leaving the picture frame cut out ready for installation. (the lip screws over the wall fixings as seen in diagram A)
5. Test fit the niche over the wall lining and into the picture frame – level up then mark the fixing holes – pilot hole these points then use a counter sink piece to create clearance for the punched holes – the surrounding 50mm flange is intended to fit flush against the wall linings.
6. Once you have completed the dry fit to your satisfaction, please use the glue and screws provided to fit the unit using plenty of glue onto the back of the unit to provide support and plenty around the flange to seal it off to the wall lining – Fit screws and leave to dry overnight.
7. Once adhesives are dry please wipe the flange to be waterproofed with a white cleaning spirit and then waterproof over the wall board lapping onto the 50mm outer flange – be careful not to get waterproofing product all over the portion of the nish which is exposed.
8. Once the waterproofing is dry – Complete tiling – again being very careful not to damage the exposed portion of the Niche.



Care and Maintenance

For cleaning wipe over with a damp microfibre cloth and rinse off after. Avoid contact with any nail polish removers, exit mould if the niche come into contact with these substances, please wash off immediately as it will

