

ClearSonic AX2412 & AX2418 Installation Instructions


Recommended tools: Rubber Mallet, Rubbing Alcohol, Assistant

1. Open boxes and check for damage. Call us immediately if you have any damaged or missing items.
2. Stand up the main shield system in zig-zag formation, base channel on bottom.
3. Peel masking off of extenders.



4. Install H-channels on top of main shield. Outside edge of H-channel should line up with outside edge of shield below.

5. Lubricate bottom of AX panels with rubbing alcohol to aid installation.

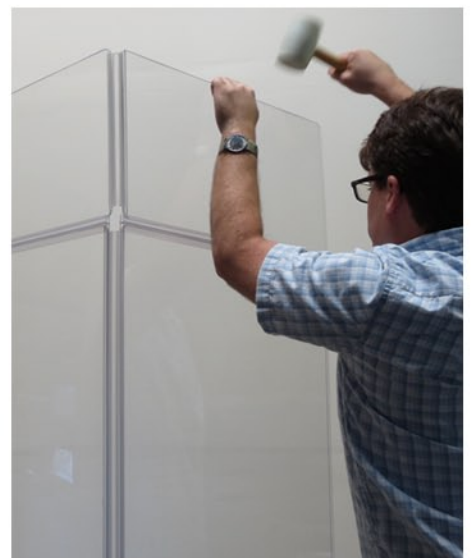

6. Find an assistant to help you install the extenders. Be sure AX will be able to fold 180° in same direction as the base system once installed. Make sure edges line up. Don't seat AX panels completely until all are in place.

7. Tap top of AX panels with rubber mallet to seat completely into H-channel.

Assembly videos can be found on our
YouTube Channel:
[youtube.com/clearsonicmfg](https://www.youtube.com/clearsonicmfg)



clearsonic.com 1.800.888.6360