


ClearSonic AmpPac10 & 11 Assembly Instructions

Parts Included: AmpPac10 - A1224x4, (2)S2224 AmpPac11 - A1224x4, (2)S2224, S2233



1. Stand acrylic panels up in a zigzag formation. Peel off paper masking.
Note: this product is NOT returnable once paper masking is removed.

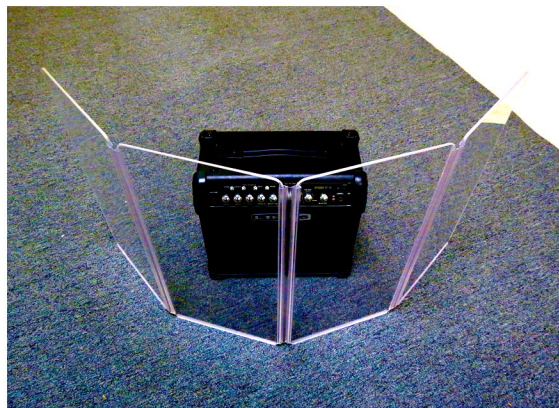

2. Place acrylic panels in semi-circle around your amplifier.



3. Attach S2224 SORBER baffles together with included Velcro.



4. Place SORBER baffles behind your amplifier with the edges meeting the acrylic panels and your AmpPac10 is done!

Additional step for AmpPac11:



5. Place larger S2233 SORBER baffle on top so the front rests on the acrylic panels and the back rests on the S2224 SORBER baffles. There should be a small gap in the back to allow for air circulation. Your AmpPac11 is now complete!

Questions? Please call 1-800-888-6360



www.clearsonic.com