


ClearSonic Bass Trap Installation Instructions

Recommended tools: Staple Gun



1. Hold the S1248 SORBER Baffle in position and mark the edges with a pencil.

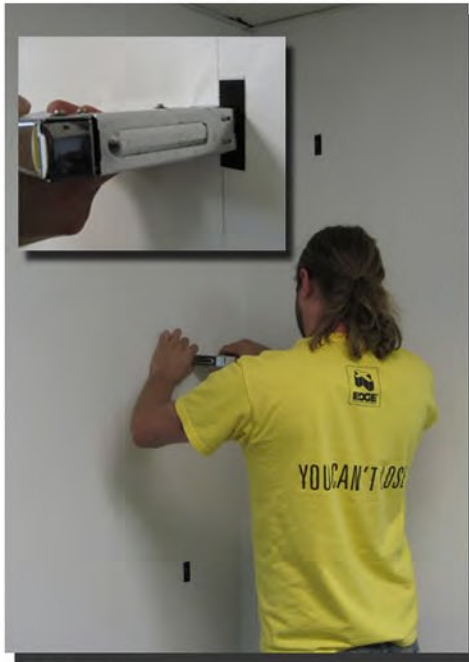

2. Using a staple gun, attach (3) pieces of velcro evenly spaced along each side.



3. Mount the S1248 to the velcro.



4. Hold the S2248 baffle in place on top of the S1248. Mark the edges with a pencil.



5. Staple the remaining velcro strips along each side.



6. Mount the S2248 to the velcro to complete the Bass Trap.

Overhead View



Please contact us at 1-800-888-6360 should you have any questions.



www.clearsonic.com