


ClearSonic IsoPac T Instructions

Parts Included: (1) 3-section Clear Shield, (1) S2224, (2) S2216, (1) S2233, (12pcs) Velcro

1. Remove paper masking from ClearSonic Panel
2. Arrange panels as shown. Place S2224 SORBER baffle in position on the center panel. S2224 should be placed so that it is 22"H and 24"W. Attach Velcro to ClearSonic panel approximately 3" in from each corner.
3. Attach S2216 SORBER baffles to the side sections. Allow Velcro to set-up overnight to ensure a more permanent
4. Place the S2233 SORBER baffle on top of the enclosure. The side sections should be parallel to each other and at a 90° angle from the center section.

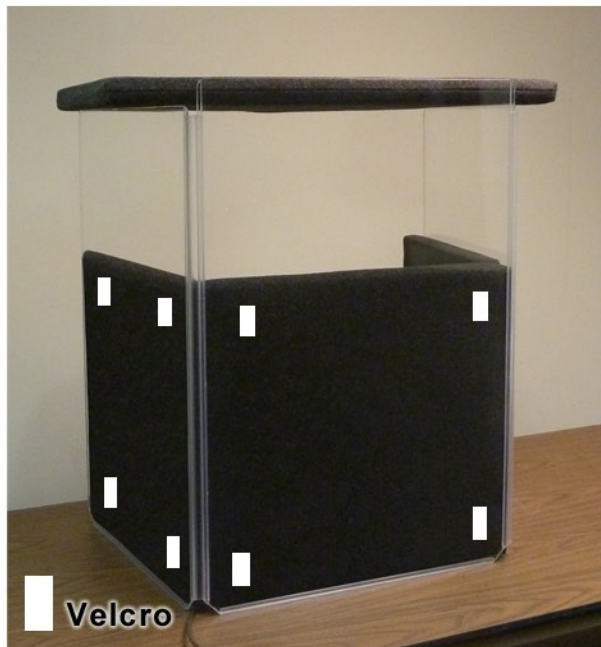

www.clearsonic.com
1.800.888.6360